

GT-H, GT-HR, GT-U

Installation and operating instructions



GT-H, GT-HR, GT-U

English (GB)	
Installation and operating instructions	5
Български (BG)	
Упътване за монтаж и експлоатация	13
Čeština (CZ)	
Montážní a provozní návod	21
Deutsch (DE)	
Montage- und Betriebsanleitung	29
Dansk (DK)	
Monterings- og driftsinstruktion	37
Español (ES)	
Instrucciones de instalación y funcionamiento	45
Suomi (FI)	
Asennus- ja käyttöohjeet	53
Français (FR)	
Notice d'installation et de fonctionnement	61
Ελληνικά (GR)	
Οδηγίες εγκατάστασης και λειτουργίας	69
Magyar (HU)	
Telepítési és üzemeltetési utasítás	77
Italiano (IT)	
Istruzioni di installazione e funzionamento	85
Nederlands (NL)	
Installatie- en bedieningsinstructies	93
Polski (PL)	
Instrukcja montażu i eksploatacji	101
Português (PT)	
Instruções de instalação e funcionamento	109
Română (RO)	
Instrucțiunile de instalare și utilizare	117
Русский (RU)	
Паспорт, Руководство по монтажу и эксплуатации	125
Svenska (SE)	
Monterings- och driftsinstruktion	134

Slovenčina (SK)	
Návod na montáž a prevádzku	142
Türkçe (TR)	
Montaj ve kullanım kılavuzu	150
Operating manual EAC	158

English (GB) Installation and operating instructions

Original installation and operating instructions

Table of contents

1. General information	5
1.1 Hazard statements	5
1.2 Notes	5
1.3 Target group	6
2. Product introduction	6
2.1 Product description	6
2.2 Intended use	6
2.3 Identification	6
3. Receiving the product	7
3.1 Lifting the product	7
4. Installation requirements	7
4.1 Location	7
4.2 Precharge pressure	7
4.3 Maximum operating pressure	7
4.4 System check	8
4.5 Isolating valves	8
4.6 Installing the relief valve	8
4.7 Installation examples	9
5. Mechanical installation	11
5.1 Positioning the product	11
6. Maintenance	11
6.1 Maintenance schedule	11
6.2 Checking the GT tank for damage	11
7. Technical data	11
8. Disposing of the product	11
9. Declaration of Conformity	12
10. Certificates	12

1. General information

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



Read this document before you install the product. Installation and operation must comply with local regulations and accepted codes of good practice.

1.1 Hazard statements

The symbols and hazard statements below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious personal injury.



WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.



CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate personal injury.

The hazard statements are structured in the following way:



SIGNAL WORD

Description of the hazard

Consequence of ignoring the warning

- Action to avoid the hazard.

1.2 Notes

The symbols and notes below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



Observe these instructions for explosion-proof products.



A blue or grey circle with a white graphical symbol indicates that an action must be taken.



A red or grey circle with a diagonal bar, possibly with a black graphical symbol, indicates that an action must not be taken or must be stopped.



If these instructions are not observed, it may result in malfunction or damage to the equipment.



Tips and advice that make the work easier.

1.3 Target group

These installation and operating instructions are intended for professional as well as non-professional users.

2. Product introduction

2.1 Product description

The Grundfos GT-U, GT-H, and GT-HR are long-life pressure tanks ideally suited for controlling the pressure in domestic and industrial applications.



Example of GT-U tank

2.2 Intended use

- GT-U is a vertical tank for use in cold-water systems.
- GT-H is a horizontal tank for use in cold-water systems. The tank has a base plate for mounting a pump.

- GT-HR for use in cooling or heating systems.

The table below shows the tank types in relation to the application.

Application	Tank type		
	GT-U	GT-H	GT-HR
Drinking water	●	●	-
Grey wastewater *	●	●	-
Chilled water	●	-	●
Heating	-	-	●


- Recommended

- Not recommended

* Grey wastewater is domestic wastewater, for example, from dishwashers, washing machines, and cabinet showers.

2.3 Identification

2.3.1 Nameplate for GT-H, GT-HR, GT-U

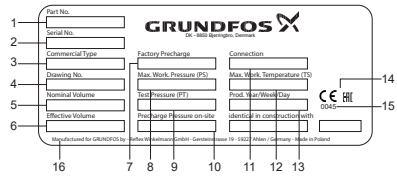

Nameplate

Pos.	Description
1	Product number
2	Serial number
3	Type designation
4	Drawing number
5	Nominal volume
6	Effective volume
7	Factory precharge
8	Max. operating pressure
9	Test pressure
10	Precharge pressure
11	Connection
12	Max. operating temperature

GR 102823


TN077015

Pos.	Description
13	Production code (year and week)
14	Marks of approval
15	Notified body
16	Production company

3. Receiving the product

3.1 Lifting the product

If the GT tank has lifting eyes, use all lifting eyes.

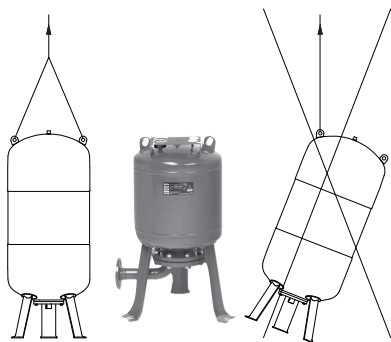

Lifting the tank

4. Installation requirements

- ! Installation and operation must comply with local regulations and accepted codes of good practice.

Before installation, check the following:

- Do the GT tank specifications correspond to your order?
- Are all visible parts intact?
- Is the maximum system pressure lower or equal to the maximum operating pressure for the GT tank? See tank nameplate.

4.1 Location

- The GT tank must be installed in the outlet pipe as close to the pump as possible.
- The GT tank must be installed in a frost-free room. It must be possible to inspect the GT tank from all sides.
- The gas-filling valve, water shut-off, and outlet must be accessible, and the nameplate must be visible.

- The GT tank must be installed so that it is not stressed by the pipes. If vibrations are likely to occur, we recommend that the GT tank is installed so that vibrations are absorbed.

4.2 Precharge pressure


The GT tanks are supplied from factory with a precharge pressure. See tank nameplate.

The precharge pressure must be adjusted according to the actual application and the installed pump.

The precharge pressure must be slightly below the pump cut-in setting.

Recommended precharge pressures:

- 0.9 x setpoint for fixed-speed pumps
- 0.7 x setpoint for variable-speed pumps.

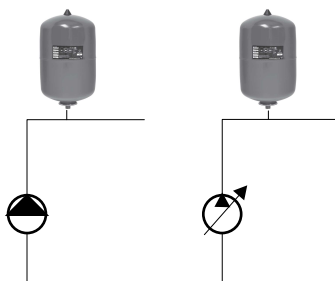

Precharge pressure

4.2.1 Adjusting the precharge pressure

- ! If there is no precharge pressure in the tank, you must fill the tank with nitrogen.


If the precharge pressure is not suitable for the application, it should be adjusted according to the following steps:

1. Use a suitable pressure gauge to check the precharge pressure.
2. We recommend using nitrogen to achieve the recommended precharge pressure.

4.3 Maximum operating pressure

The maximum operating pressure of the pump (P2) and the actual inlet pressure (P1) must not exceed the maximum operating pressure of the GT tank (P3). See fig. Maximum operating pressure.

See pump and tank nameplates.

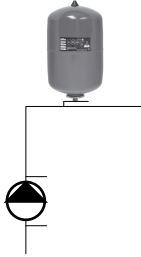


Maximum operating pressure

4.4 System check

The GT tank must be bypassed if the system pressure exceeds the maximum operating pressure of the GT tank during a system check.

4.5 Isolating valves

We recommend installing an isolating valve on either side of the GT tank.

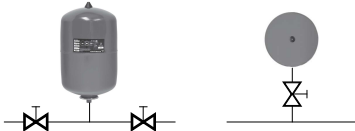

Isolating valves


4.6 Installing the relief valve

1. Set the relief valve to open at the maximum operating pressure. This will protect the GT tank and other system components.
2. Install the relief valve at the connection of the GT tank to the pipe system. It should have an outlet equal to the pump capacity at maximum operating pressure.




Relief valve


4.7 Installation examples

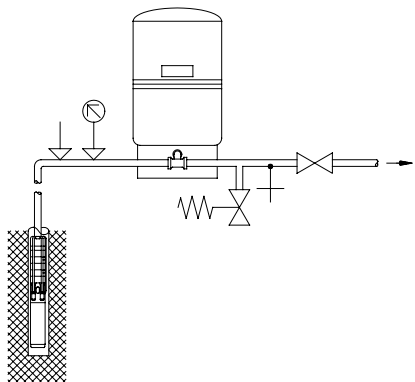


TM010499

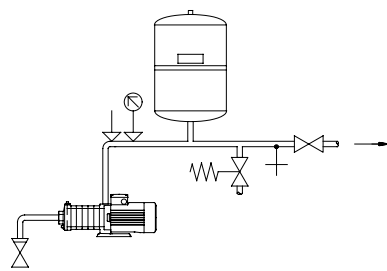


TM010503

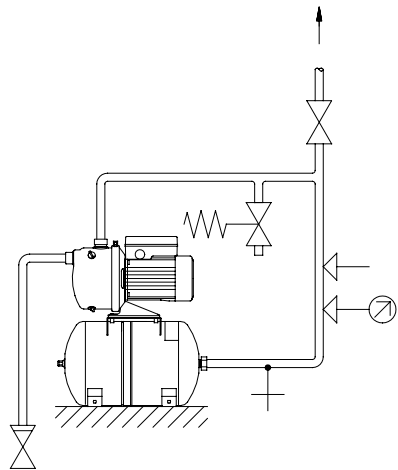



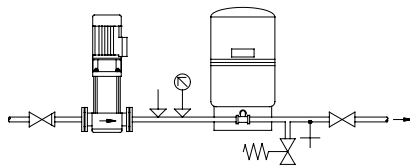

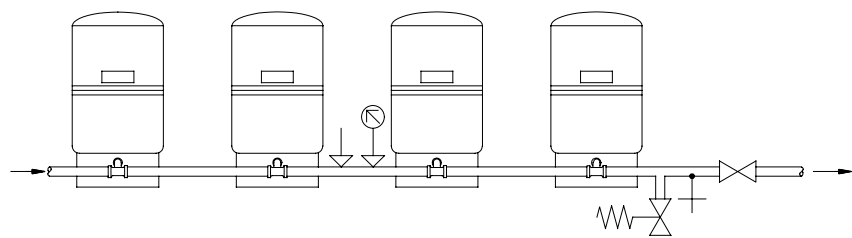

TM010502



TM010500



TM010501

Symbol	Description
	TM027804 Isolating valve
	TM027806 Pressure gauge
	TM027805 Relief valve
	TM027807 Non-return valve
	TM027808 Pressure switch
	TM027809 Drain

5. Mechanical installation

5.1 Positioning the product

We recommend following these steps:

1. Lift and position the GT tank.
2. Level as required (horizontally and vertically).
3. Secure the GT tank.
4. Connect the pipes and fittings.
5. Check/adjust the precharge pressure.
6. Start the pump or application.




No additional loads from the pipe system or equipment are allowed.

5.1.1 Floor installation

GT tanks must be placed on the floor without bolts.

5.1.2 Wall installation

Small GT tanks of up to 33 litres must be secured to a wall or similar.

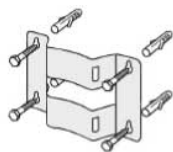

*Example of wall installation with wall bracket
(product no. 00ID9070)*

6. Maintenance

The GT tank is maintenance-free, but we recommend checking the tank for damage two times a year.



If the tank is removed, when the tank and/or the system is still pressurized, make sure that the tank is without pressure.

Close the isolating valves and remove the precharge pressure through the air valve.

6.1 Maintenance schedule

- Check the precharge pressure annually.
- Before checking the pressure, make sure that there is no water in the GT tank (switch off the pump, and open a tap).
- If water escapes during the precharge pressure check, the bladder is defective.

GT tank bladder with a volume larger than 80 litres can be replaced.

6.2 Checking the GT tank for damage

During maintenance, check the following:

1. Is corrosion visible?
2. Are scratches, dents, etc. visible?

In case of serious damage, contact your nearest Grundfos company.

7. Technical data

See tank nameplate.

8. Disposing of the product

This product or parts of it must be disposed of in an environmentally sound way.

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.



The crossed-out wheellie bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal authorities. The separate collection and recycling of such products will help protect the environment and human health.

TMR0224

See also end-of-life information at
www.grundfos.com/product-recycling.

9. Declaration of Conformity

For more information on the Declaration of Conformity, scan the QR code to access Reflex Winkelmann GmbH website:



CERTIM07812

<https://www.reflex-winkelmann.com/en/the-company/company-quality/conformity-and-standards/>

10. Certificates

For more information on the product certificates, scan the QR code to access Reflex Winkelmann GmbH website:



CERTIM07813

<https://www.reflex-winkelmann.com/en/the-company/company-quality/norms-and-certificates/>

RUS

GT-H, GT-HR, GT-U

Расширительные баки GT сертифицированы на соответствие требованиям Технического регламента Таможенного союза ТР ТС 010/2011 «О безопасности машин и оборудования».

Сертификат соответствия:

№ ЕАЭС № RU Д-ДК.БЛ08.В.02746, сроком действия с 21.12.2017 по 17.12.2022г.

Расширительные баки GT прошли подтверждение соответствия требованиям Технического регламента Таможенного союза ТР ТС 032/2013 «О безопасности оборудования, работающего под избыточным давлением».

Декларации о соответствии:

№ ЕАЭС N RU Д-ДК.БЛ08.В.02751, сроком действия с 21.12.2017 по 19.12.2022г. (1 категория, исполнения: GT-U, GT-H, GT-HR)

№ ЕАЭС N RU Д-ДК.БЛ08.В.02752, сроком действия с 21.12.2017 по 19.12.2022г. (2 категория, исполнения: GT-U, GT-H, GT-HR, GT-D)

Сертификаты соответствия:

№ ТС RU С-ДК.БЛ08.В.01057, сроком действия с 21.12.2017 по 19.12.2022г. (3 категория, исполнения: GT-H, GT-U, GT-HR, GT-D)

№ ТС RU С-ДК.БЛ08.В.01058, сроком действия с 21.12.2017 по 19.12.2022г. (4 категория, исполнения: GT-U, GT-HR, GT-D)

Выданы: Органом по сертификации продукции «ИВАНОВО-СЕРТИФИКАТ» ООО «Ивановский Фонд Сертификации». Адрес: 153032, Российская Федерация, г. Иваново, ул. Станкостроителей, д.1.

Истра, 03.09.2020г.

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500/Industin
1619 - Garin Pcia. de B.A.
Tel.: +54-3327 414 444
Fax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Tel.: +61-8-8461-4611
Fax: +61-8-8340-0155

Austria

GRUNDFOS Pumpen Vertrieb
Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Fax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomssesteenweg 81-83
B-2630 Aartselaar
Tel.: +32-3-870 7300
Fax: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарнянская, 11, оф. 56, БЦ
«Порт»
Тел.: +375 17 397 397 3
+375 17 397 397 4
Факс: +375 17 397 397 1
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A
BiH-71000 Sarajevo
Tel.: +387 33 592 480
Fax: +387 33 590 465
www.ba.grundfos.com
E-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo
Branco, 630
CEP 09850 - 300
São Bernardo do Campo - SP
Tel.: +55-11 4393 5533
Fax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztocna Tangenta street no. 100
BG - 1592 Sofia
Tel.: +359 2 49 22 200
Fax: +359 2 49 22 201
E-mail: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Tel.: +1-905 829 9533
Fax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106 PRC
Tel.: +86 21 612 252 22
Fax: +86 21 612 253 33

Colombia

GRUNDFOS Colombia S.A.S.
Km 1.5 via Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod.
1A.
Cota, Cundinamarca
Tel.: +57(1)-2913444
Fax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Tel.: +385 1 6595 400
Fax: +385 1 6595 499
www.hr.grundfos.com

Czech Republic

GRUNDFOS Sales Czechia and Slovakia
s.r.o.
Čajkovského 21
779 00 Olomouc
Tel.: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tel.: +45-87 50 50 50
Fax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel.: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Tel.: +358-(0) 207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tel.: +33-4 74 82 15 15
Fax: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Fax: +49-(0) 211 929 69-3799
E-mail: infoservice@grundfos.de
Service in Deutschland:
kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Tel.: +0030-210-66 83 400
Fax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor, Siu Wai industrial
Centre
29-33 Wing Hong Street & 68 King Lam
Street, Cheung Sha Wan
Kowloon
Tel.: +852-27861706 / 27861741
Fax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Tópark u. 8
H-2045 Törökbalint
Tel.: +36-23 511 110
Fax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 097
Tel.: +91-44 2496 6800

Indonesia

PT GRUNDFOS Pompa
Graha Intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Tel.: +62 21-469-51900
Fax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Tel.: +353-1-4089 800
Fax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Fax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku
Hamamatsu
431-2103 Japan
Tel.: +81 53 428 4760
Fax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Tel.: +82-2-5317 600
Fax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
 Deglava biznesa centrs
 Augusta Deglava ielā 60
 LV-1035, Rīga,
 Tel.: + 371 714 9640, 7 149 641
 Fax: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
 Smolensko g. 6
 LT-03201 Vilnius
 Tel.: + 370 52 395 430
 Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
 7 Jalan Peguam U1/25
 Glenmarie Industrial Park
 40150 Shah Alam, Selangor
 Tel.: +60-3-5569 2922
 Fax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México
 S.A. de C.V.
 Boulevard TLC No. 15
 Parque industrial Stiva Aeropuerto
 Apodaca, N.L. 66600
 Tel.: +52-81-8144 4000
 Fax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
 Veluwezoom 35
 1326 AE Almere
 Postbus 22015
 1302 CA ALMERE
 Tel.: +31-88-478 6336
 Fax: +31-88-478 6332
 E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
 17 Beatrice Tinsley Crescent
 North Harbour Industrial Estate
 Albany, Auckland
 Tel.: +64-9-415 3240
 Fax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
 Strømsveien 344
 Postboks 235, Leirdal
 N-1011 Oslo
 Tel.: +47-22 90 47 00
 Fax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
 ul. Klonowa 23
 Baranowo k. Poznania
 PL-62-081 Przeźmierowo
 Tel.: (+48-61) 650 13 00
 Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
 Rua Calvet de Magalhães, 241
 Apartado 1079
 P-2770-153 Paço de Arcos
 Tel.: +351-21-440 76 00
 Fax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
 S-PARK BUSINESS CENTER, Clădirea
 A2, etaj 2
 Str. Tipografilor, Nr. 11-15, Sector 1, Cod
 013714
 Bucuresti, Romania
 Tel.: 004 021 2004 100
 E-mail: romania@grundfos.ro

Russia

ООО Грундфос Россия
 ул. Школьная, 39-41
 Москва, RU-109544, Russia
 Тел. (+7) 495 564-88-00 (495) 737-30-00
 Факс (+7) 495 564 8811
 E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
 Omladinskih brigada 90b
 11070 Novi Beograd
 Tel.: +381 11 2258 740
 Fax: +381 11 2281 769
 www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
 25 Jalan Tukang
 Singapore 619264
 Tel.: +65-6681 9688
 Fax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
 Prievozská 4D 821 09 BRATISLAVA
 Tel.: +421 2 5020 1426
 sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
 Leskoškova 9e, 1122 Ljubljana
 Tel.: +386 (0) 1 568 06 10
 Fax: +386 (0) 1 568 06 19
 E-mail: tehnika-si@grundfos.com

South Africa

GRUNDFOS (PTY) LTD
 16 Lascelles Drive, Meadowbrook Estate
 1609 Germiston, Johannesburg
 Tel.: (+27) 10 248 6000
 Fax: (+27) 10 248 6002
 E-mail: lgradidge@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
 Camino de la Fuentequilla, s/n
 E-28110 Algete (Madrid)
 Tel.: +34-91-848 8800
 Fax: +34-91-628 0465

Sweden

GRUNDFOS AB
 Box 333 (Lunnagårdsgatan 6)
 431 24 Mölndal
 Tel.: +46 31 332 23 000
 Fax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
 Bruggacherstrasse 10
 CH-8117 Fällanden/ZH
 Tel.: +41-44-806 8111
 Fax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
 7 Floor, 219 Min-Chuan Road
 Taichung, Taiwan, R.O.C.
 Tel.: +886-4-2305 0868
 Fax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
 92 Chaloeam Phrakiat Rama 9 Road
 Dokmai, Pravej, Bangkok 10250
 Tel.: +66-2-725 8999
 Fax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd.
 Sti.
 Gebze Organize Sanayi Bölgesi
 Ihsan dede Caddesi
 2. yol 200. Sokak No, 204
 41490 Gebze/ Kocaeli
 Tel.: +90 - 262-679 7979
 Fax: +90 - 262-679 7905
 E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
 Столицне шосе, 103
 м. Київ, 03131, Україна
 Tel.: (+38 044) 237 04 00
 Fax: (+38 044) 237 04 01
 E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
 P.O. Box 16768
 Jebel Ali Free Zone, Dubai
 Tel.: +971 4 8815 166
 Fax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
 Grovebury Road
 Leighton Buzzard/Beds. LU7 4TL
 Tel.: +44-1525-850000
 Fax: +44-1525-850011

U.S.A.

GRUNDFOS Water Utility Head Quarters
 Brookshire, Texas 77423 USA

Uzbekistan

Grundfos Tashkent, Uzbekistan
 The Representative Office of Grundfos
 Kazakhstan in Uzbekistan
 38a, Oybek street, Tashkent
 Tel.: (+998) 71 150 3290 / 71 150 3291
 Fax: (+998) 71 150 3292

Revision Info

Last revised on 09-09-2020

96550312 02.2021

ECM: 1307749
