

 
 
 
GRUNDFOS INSTRUCTIONS

# UNILIFT AP12, AP35, AP50

Installation and operating instructions



**GRUNDFOS** 



# UNILIFT AP12, AP35, AP50

---

**English (GB)**

Installation and operating instructions ..... 4

**Appendix A** ..... 17

**Appendix B** ..... 18

**Appendix C** ..... 21

## English (GB) Installation and operating instructions

### Original installation and operating instructions

#### Table of contents

<b>1. General information</b>	<b>4</b>
1.1 Hazard statements	4
1.2 Notes	5
<b>2. Receiving the product</b>	<b>5</b>
2.1 Inspecting the product	5
<b>3. Installing the product</b>	<b>5</b>
3.1 Location	6
3.2 Mechanical installation	7
<b>4. Electrical connection</b>	<b>8</b>
4.1 Checking the direction of rotation	9
<b>5. Starting up the product</b>	<b>10</b>
<b>6. Product introduction</b>	<b>10</b>
6.1 Intended use	10
6.2 Pumped liquids	10
6.3 Identification	11
<b>7. Servicing the product</b>	<b>12</b>
7.1 Maintaining the product	13
7.2 Oil	13
7.3 Construction	13
7.4 Service kits	13
7.5 Contaminated pumps	13
<b>8. Fault finding the product</b>	<b>14</b>
8.1 The motor does not start	14
8.2 The motor protection or thermal relay trips after a short time of operation	14
8.3 The pump runs constantly or gives too little water	14
8.4 The pump runs but gives no water	15
<b>9. Technical data</b>	<b>16</b>
9.1 Storage temperature	16
9.2 Operating conditions	16
9.3 Sound pressure level	16
<b>10. Disposing of the product</b>	<b>16</b>

## 1. General information

This appliance shall not be used by children.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be carried out by children.



Appliances can be used by persons with reduced physical, sensory, or mental capabilities, as well as persons with a lack of experience and knowledge. This requires that they are given supervision or instruction concerning the use of the appliance in a safe way and that they understand the hazards involved.



Read this document before you install the product. Installation and operation must comply with local regulations and accepted codes of good practice.

### 1.1 Hazard statements

The symbols and hazard statements below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



#### **DANGER**

Indicates a hazardous situation which, if not avoided, will result in death or serious personal injury.



#### **WARNING**

Indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.



#### **CAUTION**

Indicates a hazardous situation which, if not avoided, could result in minor or moderate personal injury.

The hazard statements are structured in the following way:



#### **SIGNAL WORD**

##### **Description of the hazard**

Consequence of ignoring the warning

- Action to avoid the hazard.

## 1.2 Notes

The symbols and notes below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



Observe these instructions for explosion-proof products.



A blue or grey circle with a white graphical symbol indicates that an action must be taken.



A red or grey circle with a diagonal bar, possibly with a black graphical symbol, indicates that an action must not be taken or must be stopped.



If these instructions are not observed, it may result in malfunction or damage to the equipment.



Tips and advice that make the work easier.

## 3. Installing the product

### CAUTION

#### Toxic material

Minor or moderate personal injury

- The product will be classified as contaminated if used for a liquid which is injurious to health or toxic.
- Wear personal protective equipment.



Installation must be carried out by specially trained persons and according to local regulations.



According to EN 60335-2-41/A2:2010, this product with 5 m of mains cable may be used only for indoor applications.



A product that is not indicated to be protected against freezing shall not be left outside in freezing weather conditions.

## 2. Receiving the product

### WARNING

#### Falling objects

Death or serious personal injury



- Keep the product in a stable position during unpacking.
- Wear personal protective equipment.

### 2.1 Inspecting the product

Check that the product received is in accordance with the order.

Check that the voltage and frequency of the product match voltage and frequency of the installation site.

### 3.1 Location




Always have at least 3 m free cable above liquid level. This limits the installation depth to 7 m for pumps with 10 m cable and to 2 m for pumps with 5 m cable.

#### 3.1.1 Minimum space

The pit, basin or tank must be sized according to the relation between the water flow to the pit, basin or tank and the pump performance.

When the pump is installed in a permanent installation with a float switch, the minimum dimensions of the pit, basin or tank must be as shown in the figure below. The float switch is set to the minimum free cable length.

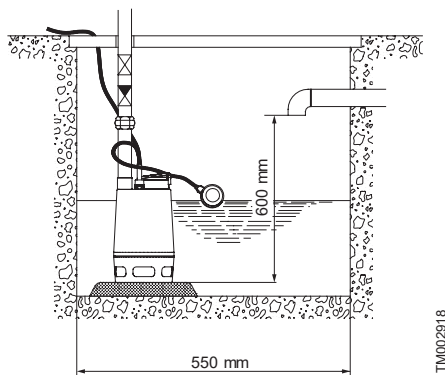

*Minimum pit dimensions when the float switch is set to the minimum free cable length*

#### Related information

##### 3.2.5 Adjusting the float switch cable length

### 3.2 Mechanical installation

#### **DANGER**

##### **Electric shock**

Death or serious personal injury



- Switch off the power supply before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.

#### **CAUTION**

##### **Sharp element**

Minor or moderate personal injury




- Wear personal protective equipment.
- Make sure that persons cannot come into contact with the pump impeller.



Do not install the pump hanging from the electric cable or the outlet pipe.

#### 3.2.1 Foundation

Place the pump on a plate or on bricks so that the inlet strainer is free of sludge, mud or similar materials. See the figure below.

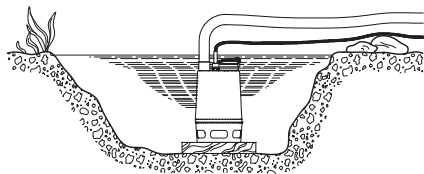

*Place the pump on a plate*

TM002922

#### 3.2.2 Lifting the pump



Do not pull or lift the product by the power cable.


Lift the pump using the pump handle. Do not lift the pump by the power cable or by the outlet pipe or hose.

If the pump is installed in a well or tank, lower and lift it by means of a wire or chain fastened to the pump handle.

#### 3.2.3 Positioning the pump

The pump can be used in vertical or horizontal position. The outlet must be the highest point of the pump. See the figure below.

During operation, the inlet strainer must always be completely covered by the pumped liquid.

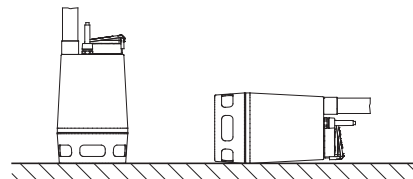

TM002920

*Position of the pump*

When the pipe or hose has been connected, place the pump in its operating position.

Position the pump so that the pump inlet will not be blocked or partly blocked by sludge, mud or similar materials.

In the case of permanent installation, the pit must be cleared of sludge, pebbles, etc. before the pump is installed.

#### 3.2.4 Pipe connection


For permanent installation, we recommend that you fit a union, a non-return valve and an isolating valve in the outlet pipe.

### 3.2.5 Adjusting the float switch cable length

For pumps supplied with a float switch, the difference in level between start and stop can be adjusted by changing the free cable length between the float switch and the pump handle.

- An increased free cable length will result in fewer starts and stops and a large difference in level.
- A reduced free cable length will result in more frequent starts and stops and a small difference in level.

The stop level must be above the pump inlet to prevent the pump from taking in air.

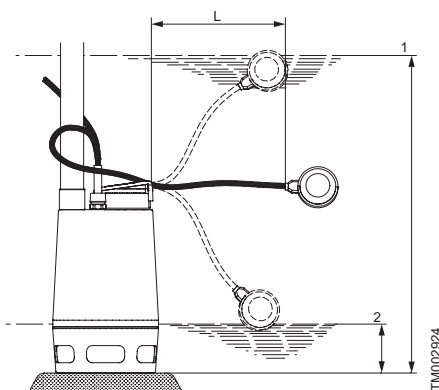

Start and stop levels

Pos.	Description
1	Start
2	Stop

The start and stop levels vary according to the cable length.

UNILIFT AP start and stop levels				
Pump type	Minimum cable length (L): 100 mm		Maximum cable length (L): 250 mm	
	Start [mm]	Stop [mm]	Start [mm]	Stop* [mm]
AP12.40	360	230	370	100
AP12.50	410	250	380	110
AP35	440	280	450	155
AP50	460	320	450	190

\* Minimum stop level during continuous operation or when using an external controller.

## 4. Electrical connection

### DANGER

#### Electric shock

Death or serious personal injury



- Switch off the power supply before you start any work on the product.
- Make sure that the power supply cannot be switched on accidentally.

### DANGER

#### Electric shock

Death or serious personal injury



- The installation must be fitted with a residual-current device (RCD) with a tripping current less than 30 mA.

### DANGER

#### Electric shock

Death or serious personal injury



- Make sure that the power supply plug delivered with the product is in compliance with local regulations.
- The plug must have the same protective earth (PE) connection system as the power outlet. If not, use a suitable adapter if allowed by local regulations.

### DANGER

#### Electric shock

Death or serious personal injury



- Power cables without a plug must be connected to a supply disconnecting device incorporated in the fixed wiring according to the local wiring rules.
- If the power cable is damaged, it must be replaced by the manufacturer, the manufacturer's service partner or a similarly qualified person.



All electrical connections must be carried out by a qualified person in accordance with local regulations.



Depending on local regulations, a pump with minimum 10 m of mains cable must be used if the pump is used as a portable pump for different applications.



Make sure that the product is suitable for the supply voltage and frequency available at the installation site. Voltage and frequency are marked on the pump nameplate.

The pump must be connected to an external main switch. If the pump is not installed close to the switch, the switch must be of a lockable type.


Three-phase pumps must be connected to an external motor-protective circuit breaker with differential release. The rated current of the motor-protective circuit breaker must correspond to the electrical data marked on the pump nameplate.

If a level switch is connected to a three-phase pump, the motor-protective circuit breaker must be magnetically operated.

Single-phase pumps incorporate thermal overload protection and require no additional motor protection.




If the motor is overloaded, it will stop automatically. When the motor has cooled to normal temperature, it restarts automatically.

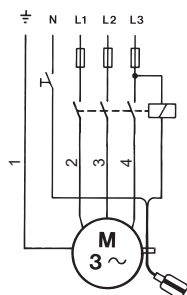

TM002011

Wiring diagram

Pos.	Description
1	Yellow and green
2	Grey
3	Brown
4	Black

 

TM1040337

Wiring diagram

Pos.	Description
1	Yellow and green
2	Blue
3	Brown

#### 4.1 Checking the direction of rotation

##### Three-phase pumps only

Check the direction of rotation every time the pump is connected to a new installation.

1. Position the pump so that you can observe the impeller.
2. Start the pump for a short period.
3. Observe the rotation of the impeller. The correct direction of rotation is indicated by an arrow on the inlet strainer (clockwise when seen from the bottom). If the impeller rotates in the wrong direction, reverse the direction of rotation by interchanging two of the phases to the motor.

If the pump is connected to a pipe system, check the direction of rotation in this way:

1. Start the pump and check the quantity of water or the pressure.
2. Stop the pump and interchange two of the phases to the motor.
3. Start the pump and check the quantity of water or the pressure.
4. Stop the pump.

Compare the results taken under points 1 and 3. The largest quantity of water indicates the correct direction of rotation.

## 5. Starting up the product

### DANGER

#### Electric shock

Death or serious personal injury




- Do not use the pump in swimming pools, garden ponds or similar places if there are people in the water.



The pump may be run briefly to check the direction of rotation without being submerged in the pumped liquid.

1. Before starting the pump, check that the inlet strainer is fitted to the pump and submerged in the pumped liquid.
2. Open the isolating valve, if fitted, and check the level switch setting.

## 6. Product introduction

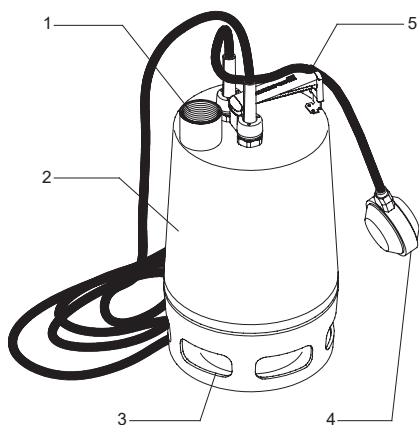

TM0029 13

UNILIFT AP

Pos.	Description
1	Outlet
2	Pump sleeve
3	Inlet strainer
4	Level switch
5	Handle with clamp

## 6.1 Intended use

The Grundfos UNILIFT AP pump is a single-stage submersible pump designed for pumping wastewater.

The pump is capable of pumping water which contains a limited quantity of solids, however not stones and similar materials, without being blocked or damaged.

The pump is available for automatic as well as manual operation and can be installed in a permanent installation or used as a portable pump.

Applications	AP12	AP35	AP50
Drainage of flooded cellars or buildings	•	•	•
Groundwater lowering	•	•	•
Pumping of water from drain water collecting pits	•	•	•
Pumping of water from surface water pits with inflow from roof gutters, shafts, tunnels, etc.	•	•	•
Emptying and filling of swimming pools, ponds, pits, etc.	•	•	•
Pumping of fibre-containing wastewater from laundries and light industries		•	•
Pumping of domestic wastewater from septic tanks and sludge treating systems		•	•
Pumping of domestic wastewater without discharge from water closets		•	•

Incorrect application of the pump, for example resulting in blocking of the pump, and wear are not covered by the warranty.

## 6.2 Pumped liquids

The pump is capable of pumping water containing a limited quantity of spherical particles. Pumping of spherical particles exceeding the maximum particle size for the pump may block or damage the pump.

Maximum particle size: See section Technical data.


The pump is not suitable for these liquids:

- sewage
- liquids containing long fibres
- flammable liquids (oil, petrol, etc.)
- aggressive liquids
- liquids containing solids exceeding the pump's recommended maximum particle size.

## Related information

### 9.1 Storage temperature

### 6.3.1 Nameplate

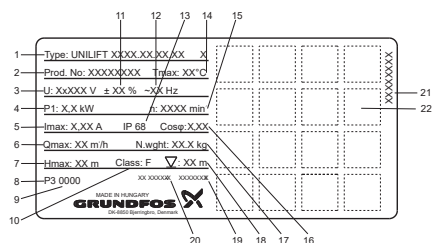

*Nameplate example*

Pos.	Description
1	Product type
2	Product number
3	Supply voltage [V]
4	Power input [kW]
5	Max. current [A]
6	Max. flow rate [m <sup>3</sup> /h]
7	Max. head [m]
8	Factory code
9	Production code (year and week)
10	Insulation class
11	Voltage tolerance [%]
12	Frequency [Hz]
13	Enclosure class
14	Max. liquid temperature [°C]
15	Speed [min <sup>-1</sup> ]
16	Cosinus phi
17	Net weight [kg]
18	Max. installation depth [m]
19	ID number for Safety Instruction
20	ID number for EN standards
21	Nameplate layout
22	Approvals

**Example: UNILIFT AP35B.50.08.A1.V**

Code	Explanation	Designation
UNILIFT AP	Type range	
35		Maximum solids size [mm]
[ ]	AP Pump	Pump type
B	AP Basic	
50		Nominal diameter of outlet port
08		Power output, $P_2 / 100$ [W]
A	Automatic operation with float switch	Level control
[ ]	Manual operation without float switch	
1	Single-phase	Motor
3	Three-phase	
V	Vortex impeller	Impeller

## 7. Servicing the product

### **DANGER**

#### **Electric shock**

Death or serious personal injury



- Switch off the power supply before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.

### **CAUTION**

#### **Sharp element**

Minor or moderate personal injury



- Wear personal protective equipment.

### **CAUTION**

#### **Toxic material**

Minor or moderate personal injury



- The product will be classified as contaminated if it has been used for a liquid which is injurious to health or toxic.
- Wear personal protective equipment.

### **CAUTION**

#### **Biological hazard**

Minor or moderate personal injury



- Flush the product thoroughly with clean water and rinse the parts in water after dismantling.
- Wear personal protective equipment.



If the power cable or the level switch is damaged, it must be replaced by a service workshop authorised by Grundfos.



Service must be carried out by specially trained persons.

Furthermore, all rules and regulations covering safety, health and environment must be observed.

1. If the pump has been used for liquids other than clean water, flush the pump thoroughly with clean water before carrying out maintenance and service.
2. Rinse the pump parts in water after dismantling.

## 7.1 Maintaining the product

- Check the pump and replace the oil once a year. If the pump is used for pumping liquids containing abrasive particles or it is operating continuously, the pump must be checked at shorter intervals.
- If the drained oil contains water or other impurities, we recommend that you replace the shaft seal. Contact Grundfos Service.

## 7.2 Oil

In the case of long operating time or continuous operation, the oil must be replaced as follows:

Liquid temperature	The oil must be replaced after
20 °C	4500 operating hours
40 °C	3000 operating hours
55 °C	1500 operating hours

The pump contains 78 ml non-poisonous oil.  
Used oil must be disposed of in accordance with local regulations.

## 7.3 Construction

The construction of the pump will appear from the table below and figures A, B and C at the end of these instructions.

Pos.	Description
6	Pump housing
37a	O-ring
49	Impeller
55	Pump sleeve with motor
66	Washer
67	Lock nut
84	Inlet strainer
105	Shaft seal
182	Level switch
188a	Screws
193	Screws

## 7.4 Service kits

Service kit	Part number
Shaft seal, standard	96429307
Shaft seal, FKM	96429308
Oil	96010646

## 7.5 Contaminated pumps



### CAUTION Biological hazard

Minor or moderate personal injury

- Flush the product thoroughly with clean water and rinse the parts in water after dismantling.
- Wear personal protective equipment.

## 8. Fault finding the product



### **DANGER**

#### **Electric shock**

Death or serious personal injury

- Switch off the power supply before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.



### **CAUTION**

#### **Sharp element**

Minor or moderate personal injury

- Wear personal protective equipment.



### **CAUTION**

#### **Toxic material**

Minor or moderate personal injury

- The product will be classified as contaminated if it has been used for a liquid which is injurious to health or toxic.
- Wear personal protective equipment.

### 8.1 The motor does not start

Cause	Remedy
No power supply.	Connect the power supply.
The pump was stopped by the float switch.	Adjust or replace the float switch.
The fuses have blown.	Replace the fuses.
The motor protection or thermal relay has tripped.	Wait until the motor protection trips in again or reset the relay.
The impeller is blocked by impurities.	Clean the impeller.
Short circuit in the cable or motor.	Replace the defective part.

### 8.2 The motor protection or thermal relay trips after a short time of operation

Cause	Remedy
The liquid temperature is too high.	Use another pump type. Contact your local Grundfos supplier or sales support.
The impeller is blocked or partly blocked by impurities.	Clean the pump.
Phase failure.	Call an electrician.
Too low voltage.	Call an electrician.
The overload setting of the motor-protective circuit breaker is too low.	Adjust the setting.
Incorrect direction of rotation.	Reverse the direction of rotation.

#### **Related information**

##### *4.1 Checking the direction of rotation*

### 8.3 The pump runs constantly or gives too little water

Cause	Remedy
The pump is partly blocked by impurities.	Clean the pump.
The outlet pipe or valve is partly blocked by impurities.	Clean the outlet pipe or valve.
The impeller is not properly fixed to the shaft.	Tighten the impeller.

Cause	Remedy
Incorrect direction of rotation.	Reverse the direction of rotation.
Incorrect setting of the float switch.	Adjust the float switch.
The pump is too small for the application.	Replace the pump.
The impeller is worn.	Replace the impeller.

**Related information**

*4.1 Checking the direction of rotation*

**8.4 The pump runs but gives no water.**

Cause	Remedy
The pump is blocked by impurities.	Clean the pump.
The outlet pipe or valve is blocked by impurities.	Clean the outlet pipe or valve.
The impeller is not properly fixed to the shaft.	Tighten the impeller.
There is air in the pump.	Vent the pump and the outlet pipe.
The liquid level is too low. The inlet strainer is not completely submerged in the pumped liquid.	Submerge the pump in the liquid or adjust the level switch.
Pumps with float switch: The float switch does not move freely.	Adjust the float switch.

**Related information**

*3.2.5 Adjusting the float switch cable length*

## 9. Technical data

### 9.1 Storage temperature

Down to -30 °C.

### 9.2 Operating conditions

Minimum liquid temperature	0 °C
Maximum liquid temperature	Max. liquid temperature: +55 °C, continuously. For UNILIFT AP 12, AP 35 and AP 50 without float switch, where the media cannot touch the cable and the plug: up to + 70 °C every 30 min. for time periods below 3 min.
Installation depth	Maximum 10 m below liquid level
pH value	4-10
Density	Maximum 1100 kg/m <sup>3</sup>
Viscosity	Maximum 10 mm <sup>2</sup> /s
Maximum particle size	Max. spherical diameter: UNILIFT AP12: 12 mm UNILIFT AP35: 35 mm UNILIFT AP50: 50 mm
Technical data	See the pump nameplate.



Always have at least 3 m free cable above liquid level. This limits the installation depth to 7 m for pumps with 10 m cable and to 2 m for pumps with 5 m cable.

### 9.3 Sound pressure level

The sound pressure level of the pump is lower than the limiting values stated in the EC Council Directive 2006/42/EC relating to machinery.

## 10. Disposing of the product

This product or parts of it must be disposed of in an environmentally sound way.

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.




The crossed-out wheeled bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal authorities. The separate collection and recycling of such products will help protect the environment and human health.

See also end-of-life information at [www.grundfos.com/product-recycling](http://www.grundfos.com/product-recycling).



## Appendix A

## A.1. Appendix

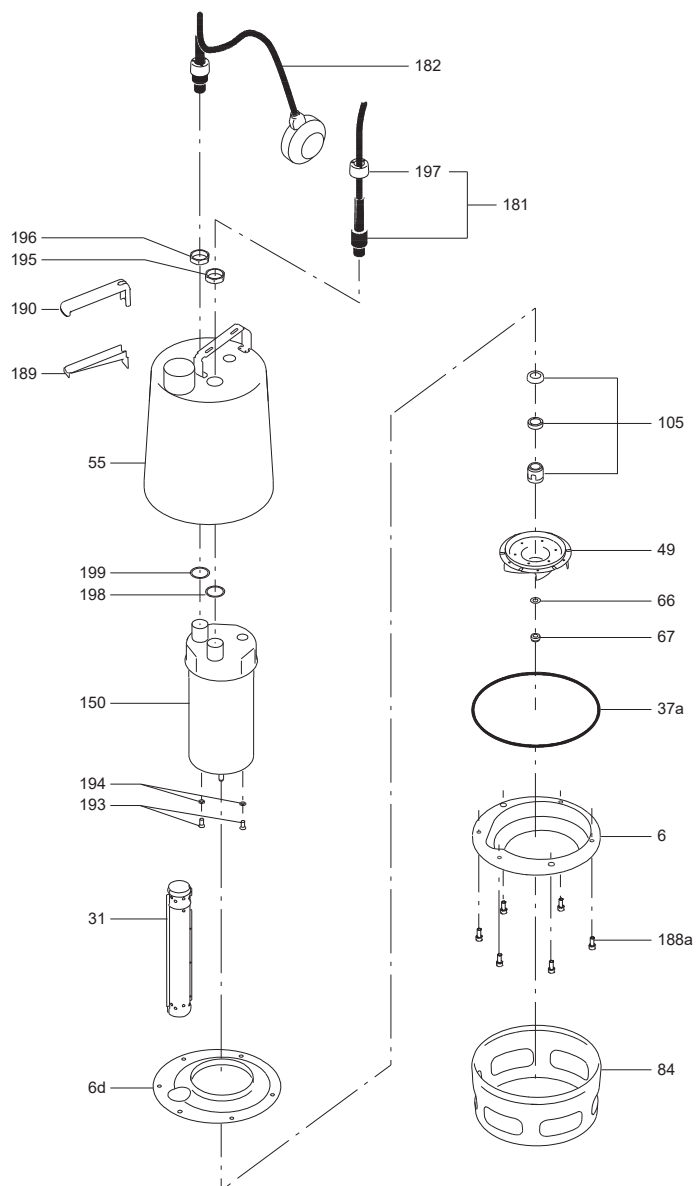

TM025230

## Appendix B

### B.1. GRUNDFOS WARRANTY - AUSTRALIA AND NEW ZEALAND

#### Free from manufacturing defects

1. The relevant Grundfos entity, as specified below, warrants that from the date of purchase and for the period related to the specific product purchased (**Warranty Period**) the products purchased (**Equipment**) by you (**the Customer**) in the relevant country will, with normal use, be free from manufacturing defects and material defects (**Warranty**), subject to the terms set out herein.

**FOR EQUIPMENT PURCHASED IN AUSTRALIA:** : This Warranty is provided by Grundfos Pumps Pty Ltd (ACN 007920765) of 515 South Road Regency Park SA 5010 PH: (08) 8461 4611 Email: *contact-au@grundfos.com* (**Grundfos Australia**)

**FOR EQUIPMENT PURCHASED IN NEW ZEALAND:** This Warranty is provided by Grundfos Pumps NZ Limited (Company number 108507) of 17 Beatrice Tinsley Crescent, Albany, North Shore City, 0632 PH: (09) 41532540 Email: *contact-nz@grundfos.com* (**Grundfos NZ**).

(In this Warranty references to "Grundfos" shall mean either Grundfos Australia or Grundfos NZ, as applicable)

2. The relevant **Warranty Period** varies between different items of Equipment and can be confirmed by your Equipment supplier or by contacting the relevant Grundfos entity at the above address.

#### Non Transferable

3. This Warranty is non- transferable and only applies to the first person to purchase and to use or install the Equipment.

#### Conditions

4. The Customer must provide the original proof of purchase for the Equipment.
5. This Warranty only applies where a defect has arisen, wholly or substantially, as a result of faulty manufacture, parts or workmanship and where such defect appears during the Warranty Period.
6. The Warranty does not apply in the following circumstances:
  - a. where the damage arises due to normal wear and tear;
  - b. where the Equipment was not installed in accordance with Grundfos' installation and operating instructions for the Equipment;
  - c. where the Customer failed to specify a site condition or specification at the time of ordering the Equipment, which subsequently affects the operation of the Equipment;
  - d. where damage results because the Equipment is installed to operate at a duty point other than what has been specified at the time of ordering;
  - e. the Equipment has been stored by the Customer prior to installation and operation and such period of storage is not in accordance with the requirements set out in the Equipment's operation and installation manual;
  - f. where the Customer attempts to repair the Equipment;
  - g. where damage is caused by abuse, mishandling or failure to follow operating instructions;
  - h. where the servicing or modification of the Equipment was conducted by someone other than by Grundfos or its authorised service agent; or
  - i. where damage occurs during shipping or other transit.
7. This Warranty does not cover:
  - a. repair of Equipment polluted by poisonous media or other liquids injurious to the environment;
  - b. the cost of disassembly, assembly and installation; or
  - c. the Equipment where protection devices have been installed but have not been used or monitored.

### Excluded products

8. This Warranty does not apply to Equipment that Grundfos imports that is not manufactured by Grundfos (or one of its related companies). However:
  - a. **FOR EQUIPMENT PURCHASED IN AUSTRALIA:** The Customer is entitled to the benefit of the warranty provided by the overseas manufacturer of that Equipment (if any), and any rights the Customer may have under the Australian Consumer Law (**ACL**).
  - b. **FOR EQUIPMENT PURCHASED IN NEW ZEALAND:** The Customer is entitled to the benefit of the warranty provided by the overseas manufacturer of that Equipment (if any), and any rights the Customer may have under the Consumer Guarantees Act 1993 (**CGA**) that have not otherwise been lawfully excluded.

### Warranty is additional to statutory consumer rights

9. This Warranty is in addition to and does not exclude, restrict or modify in any way any non-excludable statutory rights the Customer may have, including any rights the Customer may have under the ACL or the CGA (as applicable).
10. **FOR EQUIPMENT PURCHASED IN AUSTRALIA:** Grundfos Australia provides the following advice to all Customers who are consumers as defined by the ACL and to whom the ACL applies, as required by the ACL:  
*Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.*
11. **FOR EQUIPMENT PURCHASED IN NEW ZEALAND:** Grundfos NZ provides the following advice to all Customers who are consumers as defined by the CGA and to whom the CGA applies:  
*Unless the provisions of the CGA have been lawfully excluded, the guarantees and the remedies for failure to comply with those guarantees as set out in the CGA shall apply. Such remedies include the repair or replacement of the Equipment or, where the failure is of a substantial character, the rejection of the Equipment or compensation for the reduction in value of the Equipment. In addition to these remedies, you are also entitled to compensation for reasonably foreseeable loss or damage resulting from the failure.*

### How to claim

12. Instructions for making a Warranty claim:
  - a. The Customer must inform Grundfos as soon as any Warranty claim arises. The Customer must contact Grundfos:
    - i. in writing, by notice sent to:
 

**FOR EQUIPMENT PURCHASED IN AUSTRALIA:**

**Grundfos Pumps Pty Ltd**  
**515 South Road, Regency Park, South Australia, 5010;**

**FOR EQUIPMENT PURCHASED IN NEW ZEALAND:**

**Grundfos Pumps New Zealand Ltd**  
**17 Beatrice Tinsley Crescent, Albany, North Shore City, 0632; or**
    - ii. by returning the item to the place of purchase and requesting them to complete the required documentation (a Goods Return Advice or a Field Warranty Claim Form) and send it to Grundfos.
  - b. The Customer must provide Grundfos with a description of the problem encountered with the Equipment, the Equipment model number, serial number, and date of purchase. Most importantly, the Customer must provide Grundfos the original proof of purchase. The Customer will bear the cost of notifying Grundfos of the Warranty claim.

**What Grundfos will do**

13. If Grundfos is informed of any claim within the Warranty Period and that claim is within the terms of this Warranty, Grundfos will make arrangements for the service, repair or replacement of the Equipment, at the sole discretion and cost of Grundfos. The Customer will bear the cost of freight and insurance to transport any products to Grundfos, or to the place of purchase (as applicable). Grundfos will bear the cost of freight for the return and dispatch of the repaired or replaced Equipment if the claim is accepted under this Warranty.
14. If a Warranty claim is not accepted, Grundfos will inform the Customer in writing that the Warranty claim was not accepted and the reasons for non-acceptance. The Customer will bear the cost of any freight for the return and dispatch of the Equipment, and the cost of any repairs undertaken by Grundfos if requested by the Customer to do so.

**Warranty Periods**

Unless otherwise stated below, all Grundfos product comes as standard with a 2 Year Warranty.

1 Year Warranty

- |                               |                          |       |
|-------------------------------|--------------------------|-------|
| • Start Controllers           | • Wellmaster Accessories | • DSA |
| • Grundfos Ultra 6"-12" Ultra | • Dosing accessories     | • DSS |
| • Ultra 4" Motor TX & GX      | • DSB                    | • DIA |
| • DIS                         | • OCD                    | • UV  |
| • DIT                         | • VGA                    |       |

3 Year Warranty

- |                  |       |                              |
|------------------|-------|------------------------------|
| • Grundfos SP 4" | • CRI | • Grundfos SP w/MP204 6"-12" |
|------------------|-------|------------------------------|

5 Year Warranty

- |                  |                                   |       |
|------------------|-----------------------------------|-------|
| • Pressure Tanks | • Wellmaster Flexible Rising Main | • CRN |
|------------------|-----------------------------------|-------|

10 Year Warranty

- Fixed Solar Array

25 Year Linear Performance Warranty


- Solar Modules

## Appendix C


**C.1. Argentinian supplement sheet**

**Only for Argentinean market // Solo para el mercado argentino:**

La bomba UNILIFT AP(B)/KP está determinada para instalaciones fijas y debe conectarse a una bornera o un tablero Grundfos modelo LCD108.

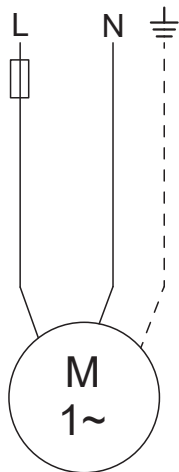**Bomba monofásica:**

Cable marrón: LINEA  
Cable celeste: NEUTRO  
Cable verde/amarillo: TIERRA

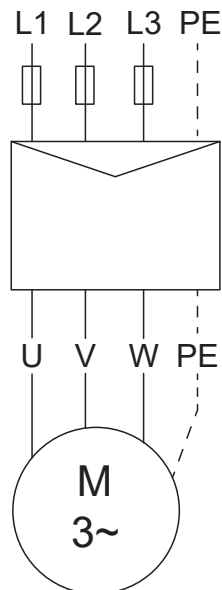**Bomba trifásica:**

Cable marrón: L1  
Cable celeste o gris: L2  
Cable negro: L3  
Cable verde/amarillo: TIERRA (PE)

**Argentina**

Bombas GRUNDFOS de Argentina S.A.  
Ruta Panamericana km. 37.500 Industrias  
1619 - Garín Pcia. de B.A.  
Tel.: +54-3327 414 444  
Fax: +54-3327 45 3190

**Australia**

GRUNDFOS Pumps Pty. Ltd.  
P.O. Box 2040  
Regency Park  
South Australia 5942  
Tel.: +61-8-8461-4611  
Fax: +61-8-8340-0155

**Austria**

GRUNDFOS Pumpen Vertrieb  
Ges.m.b.H.  
Grundfosstraße 2  
A-5082 Grödig/Salzburg  
Tel.: +43-6246-883-0  
Fax: +43-6246-883-30

**Belgium**

N.V. GRUNDFOS Bellux S.A.  
Boomsesteenweg 81-83  
B-2630 Aartselaar  
Tel.: +32-3-870 7300  
Fax: +32-3-870 7301

**Bosnia and Herzegovina**

GRUNDFOS Sarajevo  
Zmaja od Bosne 7-7A  
BiH-71000 Sarajevo  
Tel.: +387 33 592 480  
Fax: +387 33 590 465  
www.ba.grundfos.com  
E-mail: grundfos@bih.net.ba

**Brazil**

BOMBAS GRUNDFOS DO BRASIL  
Av. Humberto de Alencar Castelo  
Branco, 630  
CEP 09850 - 300  
São Bernardo do Campo - SP  
Tel.: +55-11 4393 5533  
Fax: +55-11 4343 5015

**Bulgaria**

Grundfos Bulgaria EOOD  
Slatina District  
Iztocna Tangenta street no. 100  
BG - 1592 Sofia  
Tel.: +359 2 49 22 200  
Fax: +359 2 49 22 201  
E-mail: bulgaria@grundfos.bg

**Canada**

GRUNDFOS Canada inc.  
2941 Brighton Road  
Oakville, Ontario  
L6H 6C9  
Tel.: +1-905 829 9533  
Fax: +1-905 829 9512

**China**

GRUNDFOS Pumps (Shanghai) Co. Ltd.  
10F The Hub, No. 33 Suhong Road  
Minhang District  
Shanghai 201106 PRC  
Tel.: +86 21 612 252 22  
Fax: +86 21 612 253 33

**Columbia**

GRUNDFOS Colombia S.A.S.  
Km 1.5 vía Siberia-Cota Conj. Potrero  
Chico,  
Parque Empresarial Arcos de Cota Bod.  
1A.  
Cota, Cundinamarca  
Tel.: +57(1)-2913444  
Fax: +57(1)-8764586

**Croatia**

GRUNDFOS CROATIA d.o.o.  
Buzinski prilaz 38, Buzin  
HR-10010 Zagreb  
Tel.: +385 1 6595 400  
Fax: +385 1 6595 499  
www.hr.grundfos.com

**Czech Republic**

GRUNDFOS Sales Czechia and Slovakia  
s.r.o.  
Čajkovského 21  
779 00 Olomouc  
Tel.: +420-585-716 111

**Denmark**

GRUNDFOS DK A/S  
Martin Bachs Vej 3  
DK-8850 Bjerringbro  
Tel.: +45-87 50 50 50  
Fax: +45-87 50 51 51  
E-mail: info\_GDK@grundfos.com  
www.grundfos.com/DK

**Estonia**

GRUNDFOS Pumps Eesti OÜ  
Peterburi tee 92G  
11415 Tallinn  
Tel.: + 372 606 1690  
Fax: + 372 606 1691

**Finland**

OY GRUNDFOS Pumput AB  
Trukkikuja 1  
FI-01360 Vantaa  
Tel.: +358-(0) 207 889 500

**France**

Pompes GRUNDFOS Distribution S.A.  
Parc d'Activités de Chesnes  
57, rue de Malacombe  
F-38290 St. Quentin Fallavier (Lyon)  
Tel.: +33-4 74 82 15 15  
Fax: +33-4 74 94 10 51

**Germany**

GRUNDFOS GMBH  
Schlüterstr. 33  
40699 Erkrath  
Tel.: +49-(0) 211 929 69-0  
Fax: +49-(0) 211 929 69-3799  
E-mail: infoservice@grundfos.de  
Service in Deutschland:  
kundendienst@grundfos.de

**Greece**

GRUNDFOS Hellas A.E.B.E.  
20th km. Athinon-Markopoulou Av.  
P.O. Box 71  
GR-19002 Peania  
Tel.: +0030-210-66 83 400  
Fax: +0030-210-66 46 273

**Hong Kong**

GRUNDFOS Pumps (Hong Kong) Ltd.  
Unit 1, Ground floor, Siu Wai Industrial  
Centre  
29-33 Wing Hong Street & 68 King Lam  
Street, Cheung Sha Wan  
Kowloon  
Tel.: +852-27861706 / 27861741  
Fax: +852-27858664

**Hungary**

GRUNDFOS South East Europe Kft.  
Tópark u. 8  
H-2045 Törökbálint  
Tel.: +36-23 511 110  
Fax: +36-23 511 111

**India**

GRUNDFOS Pumps India Private Limited  
118 Old Mahabalipuram Road  
Thoraipakkam  
Chennai 600 097  
Tel.: +91-44 2496 6800

**Indonesia**

PT GRUNDFOS Pompa  
Graha Intrub Lt. 2 & 3  
Jln. Cililitan Besar No.454. Makassar,  
Jakarta Timur  
ID-Jakarta 13650  
Tel.: +62 21-469-51900  
Fax: +62 21-460 6910 / 460 6901

**Ireland**

GRUNDFOS (Ireland) Ltd.  
Unit A, Merrywell Business Park  
Ballymount Road Lower  
Dublin 12  
Tel.: +353-1-4089 800  
Fax: +353-1-4089 830

**Italy**

GRUNDFOS Pompe Italia S.r.l.  
Via Gran Sasso 4  
I-20060 Truccazzano (Milano)  
Tel.: +39-02-95838112  
Fax: +39-02-95309290 / 95838461

**Japan**

GRUNDFOS Pumps K.K.  
1-2-3, Shin-Miyakoda, Kita-ku  
Hamamatsu  
431-2103 Japan  
Tel.: +81 53 428 4760  
Fax: +81 53 428 5005

**Kazakhstan**

Grundfos Kazakhstan LLP  
7' Kyz-Zhibek Str., Kok-Tobe micr.  
KZ-050020 Almaty Kazakhstan  
Tel.: +7 (727) 227-98-55/56

**Korea**

GRUNDFOS Pumps Korea Ltd.  
6th Floor, Aju Building 679-5  
Yeoksam-dong, Kangnam-ku, 135-916  
Seoul, Korea  
Tel.: +82-2-5317 600  
Fax: +82-2-5633 725

**Latvia**

SIA GRUNDFOS Pumps Latvia  
Deglava biznesa centrs  
Augusta Deglava ielā 60  
LV-1035, Rīga,  
Tel.: + 371 714 9640, 7 149 641  
Fax: + 371 914 9646

**Lithuania**

GRUNDFOS Pumps UAB  
Smolensko g. 6  
LT-03201 Vilnius  
Tel.: + 370 52 395 430  
Fax: + 370 52 395 431

**Malaysia**

GRUNDFOS Pumps Sdn. Bhd.  
7 Jalan Peguam U1/25  
Glenmarie Industrial Park  
40150 Shah Alam, Selangor  
Tel.: +60-3-5569 2922  
Fax: +60-3-5569 2866

**Mexico**

Bombas GRUNDFOS de México  
S.A. de C.V.  
Boulevard TLC No. 15  
Parque industrial Stiva Aeropuerto  
Apodaca, N.L. 66600  
Tel.: +52-81-8144 4000  
Fax: +52-81-8144 4010

**Netherlands**

GRUNDFOS Netherlands  
Veluwezoom 35  
1326 AE Almere  
Postbus 22015  
1302 CA ALMERE  
Tel.: +31-88-478 6336  
Fax: +31-88-478 6332  
E-mail: info\_gnl@grundfos.com

**New Zealand**

GRUNDFOS Pumps NZ Ltd.  
17 Beatrice Tinsley Crescent  
North Harbour Industrial Estate  
Albany, Auckland  
Tel.: +64-9-415 3240  
Fax: +64-9-415 3250

**Norway**

GRUNDFOS Pumper A/S  
Strømsveien 344  
Postboks 235, Leirdal  
N-1011 Oslo  
Tel.: +47-22 90 47 00  
Fax: +47-22 32 21 50

**Poland**

GRUNDFOS Pompy Sp. z o.o.  
ul. Klonowa 23  
Baranowo k. Poznań  
PL-62-081 Przeźmierowo  
Tel.: (+48-61) 650 13 00  
Fax: (+48-61) 650 13 50

**Portugal**

Bombas GRUNDFOS Portugal, S.A.  
Rua Calvet de Magalhães, 241  
Apartado 1079  
P-2770-153 Paço de Arcos  
Tel.: +351-21-440 76 00  
Fax: +351-21-440 76 90

**Romania**

GRUNDFOS Pompe România SRL  
S-PARK BUSINESS CENTER, Clădirea  
A2, etaj 2  
Str. Tipografilor, Nr. 11-15, Sector 1, Cod  
013714  
București, Romania  
Tel.: 004 021 2004 100  
E-mail: romania@grundfos.ro

**Serbia**

Grundfos Srbija d.o.o.  
Omladinskih brigada 90b  
11070 Novi Beograd  
Tel.: +381 11 2258 740  
Fax: +381 11 2281 769  
www.rs.grundfos.com

**Singapore**

GRUNDFOS (Singapore) Pte. Ltd.  
25 Jalan Tukang  
Singapore 619264  
Tel.: +65-6681 9688  
Fax: +65-6681 9689

**Slovakia**

GRUNDFOS s.r.o.  
Prievozská 4D 821 09 BRATISLAVA  
Tel.: +421 2 5020 1426  
sk.grundfos.com

**Slovenia**

GRUNDFOS LJUBLJANA, d.o.o.  
Leskoškova 9e, 1122 Ljubljana  
Tel.: +386 (0) 1 568 06 10  
Fax: +386 (0) 1 568 06 19  
E-mail: tehnika-si@grundfos.com

**South Africa**

GRUNDFOS (PTY) LTD  
16 Lascelles Drive, Meadowbrook Estate  
1609 Germiston, Johannesburg  
Tel.: (+27) 10 248 6000  
Fax: (+27) 10 248 6002  
E-mail: lgradidge@grundfos.com

**Spain**

Bombas GRUNDFOS España S.A.  
Camino de la Fuentecilla, s/n  
E-28110 Algete (Madrid)  
Tel.: +34-91-848 8800  
Fax: +34-91-628 0465

**Sweden**

GRUNDFOS AB  
Box 333 (Lunnagårdsgatan 6)  
431 24 Mölndal  
Tel.: +46 31 332 23 000  
Fax: +46 31 331 94 60

**Switzerland**

GRUNDFOS Pumpen AG  
Bruggacherstrasse 10  
CH-8117 Fällanden/ZH  
Tel.: +41-44-806 8111  
Fax: +41-44-806 8115

**Taiwan**

GRUNDFOS Pumps (Taiwan) Ltd.  
7 Floor, 219 Min-Chuan Road  
Taichung, Taiwan, R.O.C.  
Tel.: +886-4-2305 0868  
Fax: +886-4-2305 0878

**Thailand**

GRUNDFOS (Thailand) Ltd.  
92 Chaloe Phrakiat Rama 9 Road  
Dokmai, Pravej, Bangkok 10250  
Tel.: +66-2-725 8999  
Fax: +66-2-725 8998

**Turkey**

GRUNDFOS POMPA San. ve Tic. Ltd.  
Sti.  
Gebze Organize Sanayi Bölgesi  
İhsan dede Caddesi  
2. yol 200. Sokak No. 204  
41490 Gebze/ Kocaeli  
Tel.: +90 - 262-679 7979  
Fax: +90 - 262-679 7905  
E-mail: satis@grundfos.com

**Ukraine**

ТОВ "ГРУНДФОС УКРАЇНА"  
Бізнес Центр Європа  
Столичне шосе, 103  
м. Київ, 03131, Україна  
Tel.: (+38 044) 237 04 00  
Fax: (+38 044) 237 04 01  
E-mail: ukraine@grundfos.com

**United Arab Emirates**

GRUNDFOS Gulf Distribution  
P.O. Box 16768  
Jebel Ali Free Zone, Dubai  
Tel.: +971 4 8815 166  
Fax: +971 4 8815 136

**United Kingdom**

GRUNDFOS Pumps Ltd.  
Grovebury Road  
Leighton Buzzard/Beds. LU7 4TL  
Tel.: +44-1525-850000  
Fax: +44-1525-850011

**U.S.A.**

Global Headquarters for WU  
856 Koomey Road  
Brookshire, Texas 77423 USA  
Phone: +1-630-236-5500

**Uzbekistan**

Grundfos Tashkent, Uzbekistan  
The Representative Office of Grundfos  
Kazakhstan in Uzbekistan  
38a, Oybek street, Tashkent  
Tel.: (+998) 71 150 3290 / 71 150 3291  
Fax: (+998) 71 150 3292

**96011045 05.2024**

ECM: 1394305

[www.grundfos.com](http://www.grundfos.com)

**GRUNDFOS** 

Trademarks displayed in this material, including but not limited to Grundfos and the Grundfos logo, are registered trademarks owned by The Grundfos Group. © 2024 Grundfos Holding A/S, all rights reserved.