

# CRE, CRIE, CRNE, SPKE, MTRE, CME

Installation and operating instructions



Other languages

<http://net.grundfos.com/qr/i/98358864>

be  
think  
innovate

GRUNDFOS 

# English (GB) Installation and operating instructions

Original installation and operating instructions		13.	Description of functions	28
<b>CONTENTS</b>				
	<b>Page</b>			
<b>1.</b>	<b>Symbols used in this document</b>	<b>3</b>		
<b>2.</b>	<b>Abbreviations and definitions</b>	<b>4</b>		
<b>3.</b>	<b>General information</b>	<b>4</b>		
<b>4.</b>	<b>General description</b>	<b>4</b>		
4.1	Pumps without factory-fitted sensor	4	13.1	Setpoint
4.2	Pumps with factory-fitted pressure sensor	4	13.2	Operating mode
4.3	Settings	5	13.3	Set manual speed
4.4	Radio communication	5	13.4	"Set user-defined speed"
4.5	Battery	5	13.5	"Control mode"
<b>5.</b>	<b>Receiving the product</b>	<b>5</b>	13.6	Setting the proportional pressure
5.1	Transporting the product	5	13.7	Analog inputs
5.2	Inspecting the product	5	13.8	Pt100/1000 inputs
<b>6.</b>	<b>Mechanical installation</b>	<b>5</b>	13.9	Digital inputs
6.1	Handling the product	5	13.10	Digital inputs/outputs
6.2	Mounting	6	13.11	"Signal relays" 1 and 2 (Relay outputs)
6.3	Cable entries	6	13.12	Analog output
6.4	Cable glands	6	13.13	"Controller" (Controller settings)
6.5	Ensuring motor cooling	6	13.14	Operating range
6.6	Outdoor installation	6	13.15	External setpoint function
6.7	Drain holes	6	13.16	Predefined setpoints
<b>7.</b>	<b>Electrical installation</b>	<b>7</b>	13.17	Limit-exceeded function
7.1	Protection against electric shock, indirect contact	7	13.18	"LiqTec" (LiqTec function)
7.2	Cable requirements	7	13.19	"Stop function" (Low-flow stop function)
7.3	Mains supply	8	13.20	Stop at min. speed
7.4	Additional protection	9	13.21	Pipe filling function
7.5	Connection terminals	9	13.22	"Pulse flowmeter" (Pulse flowmeter setup)
7.6	Signal cables	14	13.23	Ramps
7.7	Bus connection cable	14	13.24	Standstill heating
<b>8.</b>	<b>Operating conditions</b>	<b>15</b>	13.25	Alarm handling
8.1	Maximum number of starts and stops	15	13.26	Motor bearing monitoring
8.2	Ambient temperature	15	13.27	"Service"
8.3	Installation altitude	15	13.28	"Number" (Pump number)
8.4	Humidity	16	13.29	"Radio communication" (Enable/disable radio comm.)
8.5	Motor cooling	16	13.30	Language
<b>9.</b>	<b>User interfaces</b>	<b>16</b>	13.31	"Date and time" (Set date and time)
<b>10.</b>	<b>Standard control panel</b>	<b>17</b>	13.32	"Unit configuration" (Units)
10.1	Setpoint setting	17	13.33	"Buttons on product" (Enable/disable settings)
<b>11.</b>	<b>Advanced control panel</b>	<b>19</b>	13.34	Delete history
11.1	Home display	20	13.35	Define Home display
11.2	Startup guide	20	13.36	Display settings
11.3	Menu overview for advanced control panel	21	13.37	"Store settings" (Store actual settings)
<b>12.</b>	<b>Grundfos GO Remote</b>	<b>24</b>	13.38	"Recall settings" (Recall stored settings)
12.1	Communication	24	13.39	"Pump name"
12.2	Menu overview for Grundfos GO Remote	25	13.40	"Connection code"
			13.41	Run start-up guide
			13.42	Alarm log
			13.43	Warning log
			13.44	Assist
			13.45	Assisted pump setup
			13.46	Setup, analog input
			13.47	Setting of date and time
			13.48	"Multi-pump setup" (Setup of multi-pump system)
			13.49	Description of control mode
			13.50	Assisted fault advice

14.	<b>Bus signal</b>	57
15.	<b>Priority of settings</b>	58
16.	<b>Grundfos Eye</b>	59
17.	<b>Signal relays</b>	60
18.	<b>Installing a communication interface module</b>	61
19.	<b>Identification of functional module</b>	63
20.	<b>Identification of control panel</b>	63
21.	<b>Changing the position of the control panel</b>	64
22.	<b>Servicing the product</b>	65
22.1	Motor	65
22.2	Pump	65
23.	<b>Cleaning the product</b>	65
24.	<b>Factory settings</b>	66
25.	<b>Megging</b>	68
26.	<b>Technical data, single-phase motors</b>	68
26.1	Supply voltage	68
26.2	Leakage current	68
27.	<b>Technical data, three-phase motors</b>	68
27.1	Supply voltage	68
27.2	Leakage current (AC)	69
28.	<b>Inputs/outputs</b>	69
29.	<b>Other technical data</b>	71
29.1	Sound pressure level	72
30.	<b>Disposing of the product</b>	72



Read this document before installing the product. Installation and operation must comply with local regulations and accepted codes of good practice.

## 1. Symbols used in this document

### DANGER



Indicates a hazardous situation which, if not avoided, will result in death or serious personal injury.

### WARNING



Indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.

### CAUTION



Indicates a hazardous situation which, if not avoided, could result in minor or moderate personal injury.



Tips and advice that make the work easier.



If these instructions are not observed, it may result in malfunction or damage to the equipment.



A blue or grey circle with a white graphical symbol indicates that an action must be taken.



A red or grey circle with a diagonal bar, possibly with a black graphical symbol, indicates that an action must not be taken or must be stopped.

## 2. Abbreviations and definitions

AI	Analog input.
AL	Alarm, out of range at lower limit.
AO	Analog output.
AU	Alarm, out of range at upper limit.
CIM	Communication interface module.
Current sinking	The ability to draw current into the terminal and guide it towards GND in the internal circuitry.
Current sourcing	The ability to push current out of the terminal and into an external load which must return it to GND.
DI	Digital input.
DO	Digital output.
ELCB	Earth leakage circuit breaker.
FM	Functional module.
GDS	Grundfos Digital Sensor. Factory-fitted sensor in some Grundfos pumps.
GENIbus	Proprietary Grundfos fieldbus standard.
GFCI	Ground fault circuit interrupter. (USA and Canada).
GND	Ground.
Grundfos Eye	Status indicator light.
LIVE	Low voltage with the risk of electric shock if the terminals are touched.
OC	Open collector: Configurable open-collector output.
PE	Protective earth.
PELV	Protective extra-low voltage. A voltage that cannot exceed ELV under normal conditions and under single-fault conditions, except earth faults in other circuits.
RCD	Residual-current device
SELV	Safety extra-low voltage. A voltage that cannot exceed ELV under normal conditions and under single-fault conditions, including earth faults in other circuits.

## 3. General information

These installation and operating instructions are a supplement to the installation and operating instructions for the corresponding standard pumps CR, CRI, CRN, SPK, MTR and CM. For instructions not mentioned specifically in this manual, see the installation and operating instructions for the standard pump.

## 4. General description

Grundfos E-pumps are fitted with frequency-controlled permanent-magnet motors for single-phase or three-phase mains connection.

### 4.1 Pumps without factory-fitted sensor

The pumps have a built-in PI controller and can be set for an external sensor enabling the control of the following parameters:

- constant pressure
- constant differential pressure
- constant temperature
- constant differential temperature
- constant flow rate
- constant level
- constant curve
- constant other value.

The pumps have been factory-set to constant-curve control mode. You can change the control mode with R100 or Grundfos GO Remote.

### 4.2 Pumps with factory-fitted pressure sensor

The pumps have a built-in PI controller and are set for a pressure sensor enabling the control of the outlet pressure.

The pumps have been factory-set to constant-pressure control mode. The pumps are typically used to keep a constant pressure in variable-demand systems.

### 4.3 Settings

The description of settings applies both to pumps without factory-fitted sensor and to pumps with a factory-fitted pressure sensor.

#### Setpoint

You can set the desired setpoint in three ways:

- on the pump control panel
- via an input for external setpoint signal
- with the Grundfos wireless R100 remote control or Grundfos GO Remote.

#### Other settings

Make all other settings with R100 or Grundfos GO Remote.

You can read important parameters, such as the actual value of the control parameter and power consumption, via R100 or Grundfos GO Remote.

If special or customised settings are required, use Grundfos PC Tool. Contact your local Grundfos company for more information.

### 4.4 Radio communication

This product incorporates a radio module for remote control which is a class 1 device and which you can use anywhere in the EU without restrictions.

For use in USA and Canada, see page 73.

Some variants of the product and products sold in China and Korea have no radio module.

This product can communicate with the Grundfos GO Remote and other products of the same type via the built-in radio module.

In some cases, an external antenna may be required. Only Grundfos-approved external antennas may be connected to this product, and only by a Grundfos-approved installer.

### 4.5 Battery

A Li-ion battery is fitted in CRE, CRIE, CRNE, SPKE and MTRE pumps. The Li-ion battery complies with the Battery Directive (2006/66/EC). The battery does not contain mercury, lead and cadmium.

## 5. Receiving the product

### 5.1 Transporting the product

#### WARNING



#### Falling objects

- Death or serious personal injury
- Secure the product during transportation to prevent it from tilting or falling down.

#### CAUTION



#### Crushing of feet

- Minor or moderate personal injury
- Wear safety shoes when moving the product.

- Motors from 2.2 to 5.5 kW: Do not stack more than two motors in their original packaging.
- Motors from 5.5 to 11 kW: Do not stack the motors.

### 5.2 Inspecting the product

Before you install the product, do the following.

1. Check that the product is as ordered.
2. Check that no visible parts have been damaged.
3. If parts are damaged or missing, contact your local Grundfos sales company.

## 6. Mechanical installation

### 6.1 Handling the product

Observe local regulations setting limits for manual lifting or handling. The motor weight is stated on the nameplate.

#### CAUTION



#### Back injury

- Minor or moderate personal injury
- Use lifting equipment.

#### CAUTION



#### Crushing of feet

- Minor or moderate personal injury
- Wear safety shoes and attach lifting equipment to the motor eyebolts when handling the product.



Do not lift the product by the terminal box.

## 6.2 Mounting

### CAUTION



#### Crushing of feet

- Minor or moderate personal injury
- Secure the product to a solid foundation by bolts through the holes in the flange or the base plate.



In order to maintain the UL mark, additional requirements apply to the equipment. See page 73.

## 6.3 Cable entries


See the size of the cable entries in section 29. *Other technical data.*

## 6.4 Cable glands

The number and size of cable glands delivered with the pump depends on the motor size. See section 29. *Other technical data.*

## 6.5 Ensuring motor cooling

Leave at least 50 mm between the end of the fan cover and a wall or other fixed objects. See fig. 1.

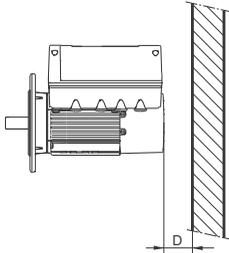

**Fig. 1** Minimum distance (D) from the motor to a wall or other fixed objects

TM05 5236 3512


## 6.6 Outdoor installation

If you install the motor outdoors, provide the motor with a suitable cover and open the drain holes to avoid condensation on the electronic components. See figures 2 and 3.



When fitting a cover to the motor, observe the guideline in section 6.5 *Ensuring motor cooling.*

The cover must be sufficiently large to ensure that the motor is not exposed to direct sunlight, rain or snow. Grundfos does not supply covers. We therefore recommend that you have a cover built for the specific application. In areas with high humidity, we recommend that you connect the motor permanently to the mains supply and activate the built-in standstill heating function. See section 13.24 *Standstill heating*, page 48.

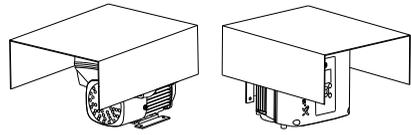

TM05 3496 3512

**Fig. 2** Examples of covers (not supplied by Grundfos)




In order to maintain the UL mark, additional requirements apply to the equipment. See page 73.

## 6.7 Drain holes

When the motor is installed in moist surroundings or areas with high humidity, the bottom drain hole must be open. The enclosure class of the motor will then be lower. This helps prevent condensation in the motor as the motor becomes self-venting, and it allows water and humid air to escape.

The motor has a plugged drain hole on the drive side. You can turn the flange 90 ° to both sides or 180 °.

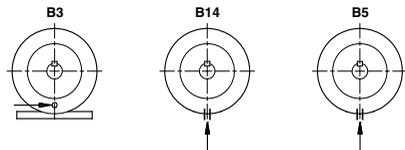

TM02 9037 1604

**Fig. 3** Drain holes

## 7. Electrical installation

### DANGER

#### Electric shock



- Death or serious personal injury
- Switch off the power supply to the motor and to the signal relays. Wait at least 5 minutes before you make any connections in the terminal box. Make sure that the power supply cannot be accidentally switched on.

### DANGER

#### Electric shock



- Death or serious personal injury
- Check that the supply voltage and frequency correspond to the values stated on the nameplate.

If the power supply cable is damaged, it must be replaced by the manufacturer, the manufacturer's service partner or a similarly qualified person.

The user or the installer is responsible for the installation of correct earthing and protection according to local regulations. All operations must be carried out by a qualified electrician.

### 7.1 Protection against electric shock, indirect contact

#### WARNING

#### Electric shock



- Death or serious personal injury
- Connect the motor to a protective earth and provide protection against indirect contact in accordance with local regulations.

Protective-earth conductors must always have a yellow/green (PE) or yellow/green/blue (PEN) colour marking.

#### 7.1.1 Protection against mains voltage transients

The motor is protected against mains voltage transients in accordance with EN 61800-3.

#### 7.1.2 Motor protection

The motor requires no external motor protection. The motor incorporates thermal protection against slow overloading and blocking.

## 7.2 Cable requirements

### 7.2.1 Cable cross-section

#### DANGER

#### Electric shock



- Death or serious personal injury
- Always comply with local regulations as to cable cross-sections.

#### 1 x 200-230 V

Power [kW]	Conductor type	Cross section	
		[mm <sup>2</sup> ]	[AWG]
0.25 - 1.5	Solid	1.5 - 2.5	16-12
	Stranded	1.5 - 2.5	16-12

#### 3 x 380-500 V

Power [kW]	Conductor type	Cross section	
		[mm <sup>2</sup> ]	[AWG]
0.25 - 2.2	Solid	1.5 - 10	16-8
	Stranded	1.5 - 10	16-8
3.0 - 11	Solid	2.5 - 10	14-8
	Stranded	2.5 - 10	14-8

#### 3 x 200-240 V

Power [kW]	Conductor type	Cross section	
		[mm <sup>2</sup> ]	[AWG]
1.1 - 1.5	Solid	1.5 - 10	16-8
	Stranded	1.5 - 10	16-8
2.2 - 5.5	Solid	2.5 - 10	14-8
	Stranded	2.5 - 10	14-8

### 7.2.2 Conductors

#### Type

Stranded or solid copper conductors.

#### Temperature rating

Temperature rating for conductor insulation: 60 °C (140 °F).

Temperature rating for outer cable sheath: 75 °C (167 °F).

### 7.3 Mains supply

#### DANGER



#### Electric shock

- Death or serious personal injury
- Use the recommended fuse size. See section 26.1 Supply voltage.

#### 7.3.1 Single-phase supply voltage

- 1 x 200-240 V - 10 %/+ 10 %, 50/60 Hz, PE.


Check that the supply voltage and frequency correspond to the values stated on the nameplate.



If you want to supply the motor through an IT network, make sure that you have a suitable motor variant. If you are in doubt, contact Grundfos.


The wires in the motor terminal box must be as short as possible. Excepted from this is the separated earth conductor which must be so long that it is the last one to be disconnected in case the cable is inadvertently pulled out of the cable entry.

For maximum backup fuse, see section 26.1 Supply voltage.

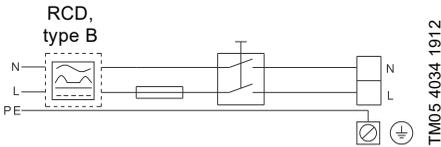

TM05 4034 1912

**Fig. 4** Example of a mains-connected motor with mains switch, backup fuse and additional protection

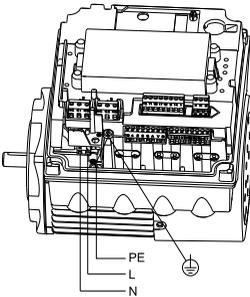

TM05 3494 1512

**Fig. 5** Mains connection, single-phase motors

#### 7.3.2 Three-phase supply voltage

Three-phase motors are available for the voltages below:

- 3 x 380-500 V - 10 %/+ 10 %, 50/60 Hz, PE
- 3 x 200-240 V - 10 %/+ 10 %, 50/60 Hz, PE.

Check that the supply voltage and frequency correspond to the values stated on the nameplate.

The wires in the motor terminal box must be as short as possible. Excepted from this is the separated earth conductor which must be so long that it is the last one to be disconnected in case the cable is inadvertently pulled out of the cable entry.

In order to avoid loose connections, make sure that you have pressed home the terminal block for L1, L2 and L3 in its socket when you connect the supply cable.

For maximum backup fuse, see section 27.1 Supply voltage.




If you want to supply the motor through an IT network, make sure that you have a suitable motor variant. If you are in doubt, contact Grundfos.

Only the following motors can be supplied through an IT network:

- Motors with speed of 1450-2000/2200 rpm and up to 1.5 kW
- Motors with speed of 2900-4000 rpm or 4000-5900 rpm and up to 2.2 kW.




Corner earthing is not allowed for supply voltages above 3 x 240 V and 3 x 480 V, 50/60 Hz.

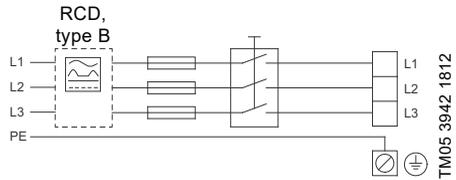

TM05 3942 1812

**Fig. 6** Example of a mains-connected motor with mains switch, backup fuses and additional protection

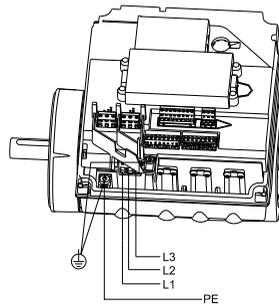

TM05 3495 1512

**Fig. 7** Mains connection, three-phase motors

## 7.4 Additional protection

### DANGER



#### Electric shock

- Death or serious personal injury
- Only use residual-current circuit breakers (ELCB, GFCI, RCD) of type B.

The residual-current circuit breaker must be marked with the following symbol:



The total leakage current of all the electrical equipment in the installation must be taken into account. You find the leakage current of the motor in sections [26.2 Leakage current](#) and [27.2 Leakage current \(AC\)](#).

This product can cause a direct current in the protective earth conductor.

#### Overvoltage and undervoltage protection

Overvoltage and undervoltage may occur in case of unstable power supply or a faulty installation. The motor is stopped if the voltage falls outside the permissible voltage range. The motor restarts automatically when the voltage is again within the permissible voltage range. Therefore, no additional protection relay is required.



The motor is protected against transients from the power supply according to EN 61800-3. In areas with high lightning intensity, we recommend external lightning protection.

#### Overload protection

If the upper load limit is exceeded, the motor automatically compensates for this by reducing the speed and stops if the overload condition persists. The motor remains stopped for a set period. After this period, the motor automatically attempts to restart. The overload protection prevents damage to the motor. Consequently, no additional motor protection is required.

#### Overtemperature protection

The electronic unit has a built-in temperature sensor as an additional protection. When the temperature rises above a certain level, the motor automatically compensates for this by reducing the speed and stops if the temperature keeps rising. The motor remains stopped for a set period. After this period, the motor automatically attempts to restart.

#### Protection against phase unbalance

Three-phase motors must be connected to a power supply with a quality corresponding to IEC 60146-1-1, class C, to ensure correct motor operation at phase unbalance. This also ensures long life of the components.

## 7.5 Connection terminals

The descriptions and terminal overviews in this section apply to both single- and three-phase motors.

For maximum torques, see section [Torques](#), page [71](#).

### 7.5.1 Connection terminals, CRE, CRIE, CRNE, SPKE and MTRE pumps

CRE, CRIE, CRNE, SPKE and MTRE pumps have a number of inputs and outputs enabling the pumps to be used in advanced applications where many inputs and outputs are required.

The pumps have these connections:

- three analog inputs
- one analog output
- two dedicated digital inputs
- two configurable digital inputs or open-collector outputs
- Grundfos Digital Sensor input and output
- two Pt100/1000 inputs
- two LiqTec sensor inputs
- two signal relay outputs
- GENibus connection.

See [fig. 8](#).



Digital input 1 is factory-set to be start-stop input where open circuit results in stop. A jumper has been factory-fitted between terminals 2 and 6. Remove the jumper if digital input 1 is to be used as external start-stop or any other external function.

**DANGER**

**Electric shock**

- Death or serious personal injury
- Make sure that the wires to be connected to the connection groups below are separated from each other by reinforced insulation in their entire lengths.



• Inputs and outputs

All inputs and outputs are internally separated from the mains-conducting parts by reinforced insulation and galvanically separated from other circuits. All control terminals are supplied by protective extra-low voltage (PELV), thus ensuring protection against electric shock.

• Signal relay outputs

– Signal relay 1:

LIVE:

You can connect supply voltages up to 250 VAC.

PELV:



The output is galvanically separated from other circuits. Therefore, you can connect the supply voltage or protective extra-low voltage to the output as desired.

– Signal relay 2:

PELV:

The output is galvanically separated from other circuits. Therefore, you can connect the supply voltage or protective extra-low voltage to the output as desired.

• Mains supply (terminals N, PE, L or L1, L2, L3, PE).

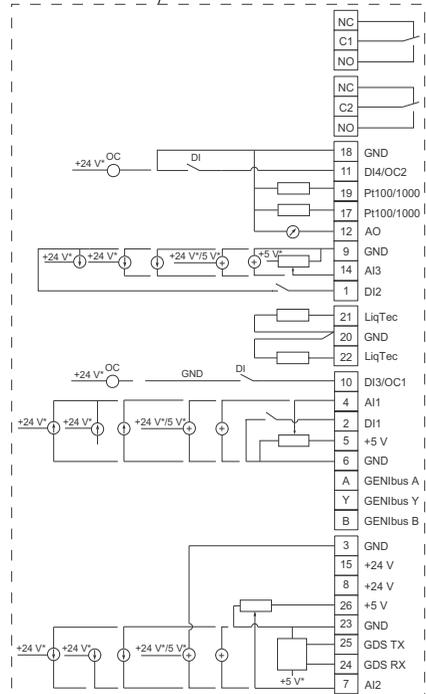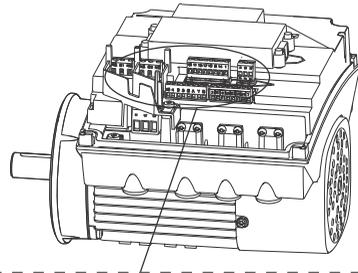

TM05 3509 3512

\* If you use an external supply source, there must be a connection to GND.

**Fig. 8** Connection terminals, CRE, CRIE, CRNE, SPKE and MTRE pumps

Terminal	Type	Function
NC	Normally closed contact	Signal relay 1 (LIVE or PELV)
C1	Common	
NO	Normally open contact	
NC	Normally closed contact	Signal relay 2 (PELV only)
C2	Common	
NO	Normally open contact	
18	GND	Ground
11	DI4/OC2	Digital input/output, configurable. Open collector: Max. 24 V resistive or inductive.
19	Pt100/1000 input 2	Pt100/1000 sensor input
17	Pt100/1000 input 1	Pt100/1000 sensor input
12	AO	Analog output: 0-20 mA / 4-20 mA 0-10 V
9	GND	Ground
14	AI3	Analog input: 0-20 mA / 4-20 mA 0-10 V
1	DI2	Digital input, configurable
21	LiqTec sensor input 1	LiqTec sensor input (white conductor)
20	GND	Ground (brown and black conductors)
22	LiqTec sensor input 2	LiqTec sensor input (blue conductor)
10	DI3/OC1	Digital input/output, configurable. Open collector: Max. 24 V resistive or inductive.
4	AI1	Analog input: 0-20 mA / 4-20 mA 0.5 - 3.5 V / 0-5 V / 0-10 V
2	DI1	Digital input, configurable
5	+5 V	Supply to potentiometer and sensor
6	GND	Ground

Terminal	Type	Function
A	GENIbus, A	GENIbus, A (+)
Y	GENIbus, Y	GENIbus, GND
B	GENIbus, B	GENIbus, B (-)
3	GND	Ground
15	+24 V	Supply
8	+24 V	Supply
26	+5 V	Supply to potentiometer and sensor
23	GND	Ground
25	GDS TX	Grundfos Digital Sensor output
24	GDS RX	Grundfos Digital Sensor input
7	AI2	Analog input: 0-20 mA / 4-20 mA 0.5 - 3.5 V / 0-5 V / 0-10 V

### 7.5.2 Connection terminals, CME pumps

The CME pump has these connections:

- two analog inputs
- two digital inputs or one digital input and one open-collector output
- Grundfos Digital Sensor input and output
- two signal relay outputs
- GENIbus connection.

See fig. 9.



Digital input 1 is factory-set to be start-stop input where open circuit results in stop. A jumper has been factory-fitted between terminals 2 and 6. Remove the jumper if digital input 1 is to be used as external start-stop or any other external function.

#### **DANGER**

##### **Electric shock**



- Death or serious personal injury
- Make sure that the wires to be connected to the connection groups below are separated from each other by reinforced insulation in their entire lengths.

- Inputs and outputs

All inputs and outputs are internally separated from the mains-conducting parts by reinforced insulation and galvanically separated from other circuits. All control terminals are supplied by protective extra-low voltage (PELV), thus ensuring protection against electric shock.

- Signal relay outputs

- Signal relay 1:

LIVE:

You can connect supply voltages up to 250 VAC to the output.

PELV:



The output is galvanically separated from other circuits. Therefore, you can connect the supply voltage or protective extra-low voltage to the output as desired.

- Signal relay 2:

PELV:

The output is galvanically separated from other circuits. Therefore, you can connect the supply voltage or protective extra-low voltage to the output as desired.

- Mains supply (terminals N, PE, L or L1, L2, L3, PE).

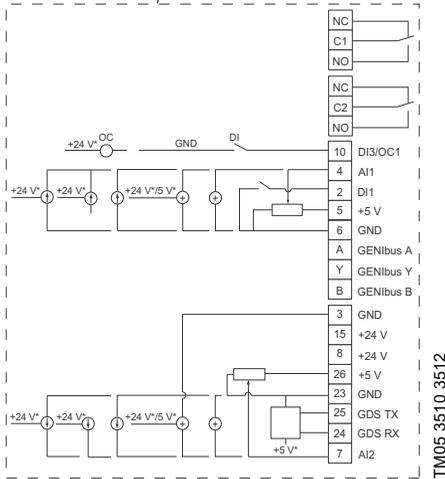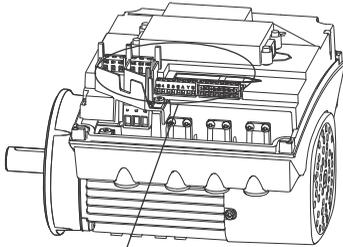

TM05 3510 3512


\* If you use an external supply source, there must be a connection to GND.

**Fig. 9** Connection terminals, CME pump (optional for CRE, CRIE, CRNE, SPKE and MTRÉ pumps)

Terminal	Type	Function
NC	Normally closed contact	
C1	Common	Signal relay 1 (LIVE or PELV)
NO	Normally open contact	
NC	Normally closed contact	
C2	Common	Signal relay 2 (PELV only)
NO	Normally open contact	
10	DI3/OC1	Digital input/output, configurable. Open collector: Max. 24 V resistive or inductive.
4	AI1	Analog input: 0-20 mA / 4-20 mA / 0.5 - 3.5 V / 0-5 V / 0-10 V
2	DI1	Digital input, configurable
5	+5 V	Supply to potentiometer and sensor
6	GND	Ground
A	GENibus, A	GENibus, A (+)
Y	GENibus, Y	GENibus, GND
B	GENibus, B	GENibus, B (-)
3	GND	Ground
15	+24 V	Supply
8	+24 V	Supply
26	+5 V	Supply to potentiometer and sensor
23	GND	Ground
25	GDS TX	Grundfos Digital Sensor output
24	GDS RX	Grundfos Digital Sensor input
7	AI2	Analog input: 0-20 mA / 4-20 mA / 0.5 - 3.5 V / 0-5 V / 0-10 V

## 7.6 Signal cables

- Use screened cables with a cross-sectional area of minimum  $0.5 \text{ mm}^2$  and maximum  $1.5 \text{ mm}^2$  for the external on/off switch, digital inputs, setpoint and sensor signals.
- Connect the screens of the cables to the frame at both ends with good connection. The screens must be as close as possible to the terminals. See fig. 10.

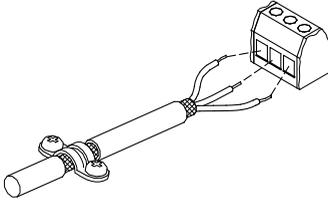

**Fig. 10** Stripped cable with screen and wire connections

- Always tighten screws for frame connections whether a cable is fitted or not.
- The wires in the motor terminal box must be as short as possible.

## 7.7 Bus connection cable


### 7.7.1 New installations

For the bus connection, use a screened 3-core cable with a cross-sectional area of minimum  $0.5 \text{ mm}^2$  and maximum  $1.5 \text{ mm}^2$ .

If the motor is connected to a unit with a cable clamp which is identical to the one on the motor, connect the screen to this cable clamp.

If the unit has no cable clamp leave the screen unconnected at this end. See fig. 11.

TM02 1325 4402

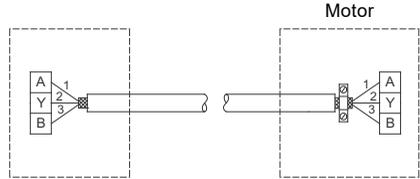


TM05 3973 1812

**Fig. 11** Connection with screened 3-core cable

### 7.7.2 Replacing a motor

- If a 2-core cable is used in the installation, connect it as shown in fig. 12.

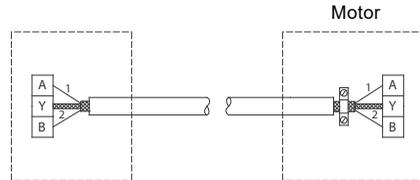

TM02 8842 0904

**Fig. 12** Connection with screened 2-core cable

- If a screened 3-core cable is used in the installation, follow the instructions in section [7.7.1 New installations](#).

## 8. Operating conditions

### 8.1 Maximum number of starts and stops

The number of starts and stops via the power supply must not exceed four times per hour.

When switched on via the power supply, the pump starts after approximately 5 seconds.

If a higher number of starts and stops is desired, use the input for external start-stop when starting/stopping the pump.

When started via an external on/off switch, the pump starts immediately.

### 8.2 Ambient temperature

#### 8.2.1 Ambient temperature during storage and transportation

Minimum: -30 °C

Maximum: 60 °C.

#### 8.2.2 Ambient temperature during operation

	3 x 200-240 V	3 x 380-500 V
Minimum	-20 °C	-20 °C
Maximum	40 °C	50 °C

The motor can operate with the rated power output (P2) at 50 °C, but continuous operation at higher temperatures reduces the expected product life. If the motor is to operate at ambient temperatures between 50 and 60 °C, select an oversized motor. Contact Grundfos for further information.

### 8.3 Installation altitude

Installation altitude is the height above sea level of the installation site.

Motors installed up to 1000 m above sea level can be loaded 100 %.

The motors can be installed up to 3500 m above sea level.



Motors installed more than 1000 m above sea level must not be fully loaded due to the low density and consequent low cooling effect of the air.


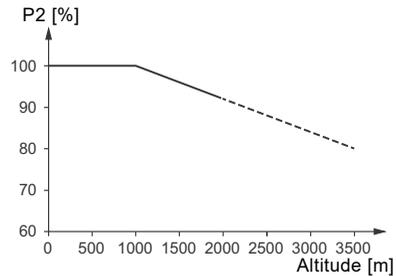


Fig. 13 Motor output power in relation to altitude

TM05 5243 3717

In order to maintain the galvanic isolation and ensure correct clearance according to EN 60664-1:2007, you must adapt the supply voltage to the altitude:


Supply voltage [V]

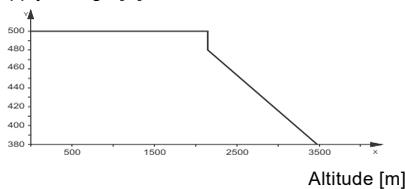

TM06 9866 3617

**Fig. 14** Supply voltage for three-phase motor in relation to altitude

Supply voltage [V]

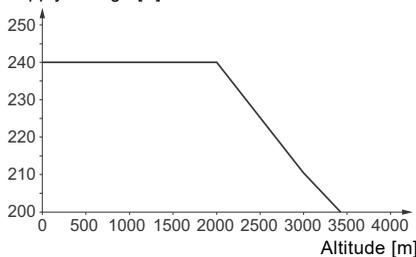

TM06 9867 3617

**Fig. 15** Supply voltage for single-phase motor in relation to altitude

## 8.4 Humidity

Maximum humidity: 95 %.

If the humidity is constantly high and above 85 %, open the drain holes in the drive-end flange. See section [6.7 Drain holes](#).

## 8.5 Motor cooling

To ensure cooling of motor and electronics, observe the following:

- Position the motor in such a way that adequate cooling is ensured. See section [6.5 Ensuring motor cooling](#).
- The temperature of the cooling air must not exceed 50 °C.
- Keep cooling fins and fan blades clean.

## 9. User interfaces

### WARNING



#### Hot surface

Death or serious personal injury

- Only touch the buttons on the display as the product may be very hot.

You can make the pump settings by means of the following user interfaces:

#### Control panels

- Standard control panel.  
See section [10. Standard control panel](#).
- Advanced control panel.  
See section [11. Advanced control panel](#).

#### Remote controls

- Grundfos GO Remote.  
See section [12. Grundfos GO Remote](#).
- Grundfos R100 remote control.  
See section [13. Description of functions](#).

If the power supply to the pump is switched off, the settings are stored.

## 10. Standard control panel

The pumps are fitted with this control panel as standard.

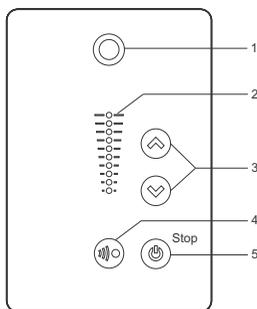


Fig. 16 Standard control panel

TM05 4848 3512

Pos.	Symbol	Description
1		Grundfos Eye Shows the operating status of the pump. For further information, see section 16. <i>Grundfos Eye</i> .
2	-	Light fields for indication of setpoint.
3		Up and down. Changes the setpoint.
4		Allows radio communication with Grundfos GO Remote and other products of the same type. When you try to establish radio communication between the pump and Grundfos GO Remote or another pump, the green indicator light in Grundfos Eye on the pump flashes continuously. Press  on the pump control panel to allow radio communication with Grundfos GO Remote and other products of the same type.
5		Makes the pump ready for operation or starts and stops the pump. <b>Start</b> If you press the button when the pump is stopped, the pump only starts if no other functions with higher priority have been enabled. See section 15. <i>Priority of settings</i> . <b>Stop</b> If you press the button when the pump is running, the pump always stops. The "Stop" text next to the button is on.

## 10.1 Setpoint setting

Set the desired setpoint of the pump by pressing or . The green light fields on the control panel indicate the setpoint set.

### 10.1.1 Pump in constant pressure control mode

The following example applies to a pump in an application where a pressure sensor gives a feedback to the pump. If the sensor is retrofitted to the pump, you must set it up manually as the pump does not automatically register a connected sensor. See section 13.7 *Analog inputs*.

Figure 17 shows that the light fields 5 and 6 are activated, indicating a desired setpoint of 3 bar with a sensor measuring range from 0 to 6 bar. The setting range is equal to the sensor measuring range.

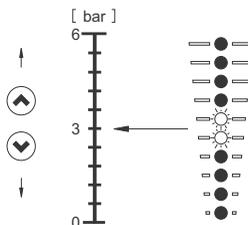


Fig. 17 Setpoint set to 3 bar, constant pressure control

TM05 4894 3512

### 10.1.2 Pump in constant-curve control mode

In constant-curve control mode, the pump performance lies between the maximum and minimum curve of the pump. See fig. 18.

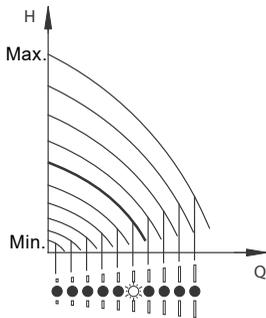


Fig. 18 Pump in constant-curve control mode

Setting to maximum curve:

- Press continuously to change over to the maximum curve of the pump (top light field flashes). When the top light field is on, press for 3 seconds until the light field starts flashing.
- To go back, press continuously until the desired setpoint is indicated.

**Example:** Pump set to maximum curve.

Figure 19 shows that the top light field is flashing, indicating maximum curve.

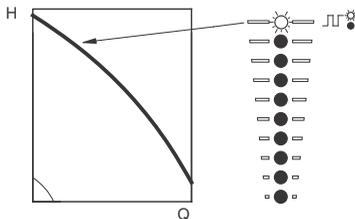


Fig. 19 Maximum curve duty

Setting to minimum curve:

- Press continuously to change over to the minimum curve of the pump (bottom light field flashes). When the bottom light field is on, press for 3 seconds until the light field starts flashing.
- To go back, press continuously until the desired setpoint is indicated.

**Example:** Pump set to minimum curve.

Figure 20 shows that the bottom light field is flashing, indicating minimum curve.

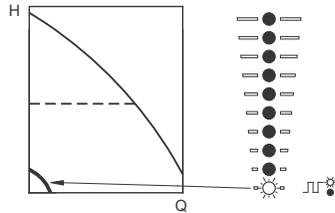


Fig. 20 Minimum curve duty

### 10.1.3 Start-stop of pump

Stop the pump by pressing . When the pump is stopped, the "Stop" text next to the button is on. You can also stop the pump by continuously pressing until none of the light fields are on.

Start the pump by pressing or by continuously pressing until the desired setpoint is indicated.

If you have stopped the pump by pressing , it can only be given free to operation by pressing again. If you have stopped the pump by pressing , it can only be restarted by pressing .

You can also stop the pump with Grundfos GO Remote or via a digital input set to External stop. See section 15. *Priority of settings*.

### 10.1.4 Resetting of fault indications

You can reset a fault indication in one of the following ways:

- Via the digital input if you have set it to Alarm resetting.
- Briefly press or on the pump. This does not change the setting of the pump. You cannot reset a fault indication by pressing or if the buttons have been locked.
- Switch off the power supply until the indicator lights are off.
- Switch the external start-stop input off and then on again.
- With Grundfos GO Remote.


TM05 4895 2812

TM05 4896 2812

TM05 4897 2812

## 11. Advanced control panel

The pumps can be fitted with the advanced control panel as an option.

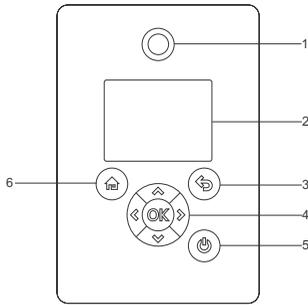

TMM05 4849 1013

**Fig. 21** Advanced control panel

Pos.	Symbol	Description
1		Grundfos Eye Shows the operating status of the pump. For further information, see section <a href="#">16. Grundfos Eye</a> .
2	-	Graphical colour display.
3		Goes one step back.
4		Navigates between main menus, displays and digits. When you change the menu, the display always shows the top display of the new menu.
		Navigates between submenus. Changes value settings. <b>Note:</b> If you have disabled the possibility to make settings with the Enable/disable settings function, then you can enable it again temporarily by pressing these buttons simultaneously for at least 5 seconds. See section <a href="#">13.33 "Buttons on product" (Enable/disable settings)</a> .

Pos.	Symbol	Description
4		Saves changed values, resets alarms and expands the value field. Enables radio communication with Grundfos GO Remote and other products of the same type. When you try to establish radio communication between the pump and Grundfos GO Remote or another pump, the green indicator light in Grundfos Eye flashes. A note also appears in the pump display stating that a wireless device wants to connect to the pump. Press  on the pump control panel to allow radio communication with Grundfos GO Remote and other products of the same type.
5		Makes the pump ready for operation/starts and stops the pump. <b>Start:</b> If you press the button when the pump is stopped, the pump only starts if no other functions with higher priority have been enabled. See section <a href="#">15. Priority of settings</a> . <b>Stop:</b> If you press the button when the pump is running, the pump is always stopped. When you stop the pump via this button, the  icon appears in the bottom of the display.
6		Goes to the Home menu.

## 11.1 Home display

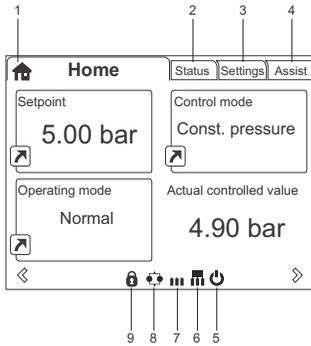


Fig. 22 Example of Home display

TM06 4516 2415

Pos.	Symbol	Description
9		Indicates that the possibility to make settings has been disabled for protective reasons. See section <a href="#">13.33 "Buttons on product" (Enable/disable settings)</a> .

## 11.2 Startup guide

The pump incorporates a startup guide which is started at the first startup. See section [13.41 Run start-up guide](#). After the startup guide, the main menus appear in the display.

Pos.	Symbol	Description
1		Home This menu shows up to four user-defined parameters. You can select parameters shown as shortcut icon  , and when pressing  you go directly to the "Settings" display for the selected parameter.
2	-	Status This menu shows the status of the pump and system as well as warnings and alarms.
3	-	Settings This menu gives access to all setting parameters. You can make detailed settings of the pump in this menu. See section <a href="#">13. Description of functions</a> .
4	-	Assist This menu enables assisted pump setup, provides a short description of the control modes and offers fault advice. See section <a href="#">13.44 Assist</a> .
5		Indicates that the pump has been stopped via the  button.
6		Indicates that the pump is functioning as master pump in a multipump system.
7		Indicates that the pump is functioning as a slave pump in a multipump system.
8		Indicates that the pump is operating in a multipump system. See section <a href="#">13.48 "Multi-pump setup" (Setup of multi-pump system)</a> .

## 11.3 Menu overview for advanced control panel

### 11.3.1 Home

Home	CRE, CRIE, CRNE, SPKE, MTRE	CME	Multipump system
	•	•	•

### 11.3.2 Status

Status	CRE, CRIE, CRNE, SPKE, MTRE	CME	Multipump system
Operating status	•	•	•
Operating mode, from	•	•	•
Control mode	•	•	•
Pump performance	•	•	•
Actual controlled value	•	•	•
Resulting setpoint	•	•	•
Speed	•	•	•
Acc. flow and specific energy	•	•	•
Power and energy consumption	•	•	•
Measured values	•	•	•
Analog input 1	•	•	•
Analog input 2	•	•	•
Analog input 3	•	• <sup>1)</sup>	• <sup>1)</sup>
Pt100/1000 input 1	•	• <sup>1)</sup>	• <sup>1)</sup>
Pt100/1000 input 2	•	• <sup>1)</sup>	• <sup>1)</sup>
Analog output	•	• <sup>1)</sup>	• <sup>1)</sup>
Warning and alarm	•	•	•
Actual warning or alarm	•	•	•
Warning log	•	•	•
Alarm log	•	•	•
Operating log	•	•	•
Operating hours	•	•	•
Fitted modules	•	•	•
Date and time	•	•	•
Product identification	•	•	•
Motor bearing monitoring	•	•	•
Multi-pump system			•
System operating status			•
System performance			•
System input power and energy			•
Pump 1, multi-pump system			•
Pump 2, multi-pump system			•
Pump 3, multi-pump system			•
Pump 4, multi-pump system			•

<sup>1)</sup> Only available if an advanced functional module, type FM 300, is fitted.

## 11.3.3 "Settings"

Settings	CRE, CRIE, CRNE, SPKE, MTRE	CME	Multipump system	Section	Page
Setpoint	•	•	•	<a href="#">13.1 Setpoint</a>	28
Operating mode	•	•	•	<a href="#">13.2 Operating mode</a>	28
Set manual speed	•	•	•	<a href="#">13.3 Set manual speed</a>	28
Set user-defined speed	•	•	•	<a href="#">13.4 "Set user-defined speed"</a>	28
Control mode	•	•	•	<a href="#">13.5 "Control mode"</a>	29
Setting the proportional pressure	•	•	•	<a href="#">13.6 Setting the proportional pressure</a>	34
Analog inputs	•	•	•		
Analog input 1, setup	•	•	•	<a href="#">13.7 Analog inputs</a>	34
Analog input 2, setup	•	•	•		
Analog input 3, setup	•	• <sup>1)</sup>	• <sup>1)</sup>		
Pt100/1000 inputs	•	• <sup>1)</sup>	• <sup>1)</sup>		
Pt100/1000 input 1, setup	•	• <sup>1)</sup>	• <sup>1)</sup>	<a href="#">13.8 Pt100/1000 inputs</a>	35
Pt100/1000 input 2, setup	•	• <sup>1)</sup>	• <sup>1)</sup>		
Digital inputs	•	•	•		
Digital input 1, setup	•	•	•	<a href="#">13.9 Digital inputs</a>	36
Digital input 2, setup	•	• <sup>1)</sup>	• <sup>1)</sup>		
Digital inputs/outputs	•	•	•		
Digital input/output 3, setup	•	•	•	<a href="#">13.10 Digital inputs/outputs</a>	37
Digital input/output 4, setup	•	• <sup>1)</sup>	• <sup>1)</sup>		
Relay outputs	•	•	•		
Relay output 1	•	•	•	<a href="#">13.11 "Signal relays" 1 and 2 (Relay outputs)</a>	38
Relay output 2	•	•	•		
Analog output	•	• <sup>1)</sup>	• <sup>1)</sup>		
Output signal	•	• <sup>1)</sup>	• <sup>1)</sup>	<a href="#">13.12 Analog output</a>	39
Function of analog output	•	• <sup>1)</sup>	• <sup>1)</sup>		
Controller settings	•	•	•	<a href="#">13.13 "Controller" (Controller settings)</a>	40
Operating range	•	•	•	<a href="#">13.14 Operating range</a>	41
Setpoint influence	•	•	•	<a href="#">13.15 External setpoint function</a>	42
Ext. setpoint infl.	•	•	•	<a href="#">13.15 External setpoint function</a>	42
Predefined setpoints	•	• <sup>1)</sup>	• <sup>1)</sup>	<a href="#">13.16 Predefined setpoints</a>	43
Monitoring functions	•	•	•		
Motor bearing monitoring	•	•	•	<a href="#">13.26 Motor bearing monitoring</a>	48
Motor bearing maintenance	•	•	•	<a href="#">"Bearings replaced" (Motor bearing maintenance)</a>	49
Limit-exceeded function	•	•	•	<a href="#">13.17 Limit-exceeded function</a>	44
LiqTec function	•	•	•	<a href="#">13.18 "LiqTec" (LiqTec function)</a>	45
Alarm handling	•	•	•	<a href="#">13.25 Alarm handling</a>	48

<sup>1)</sup> Only available if an advanced functional module, type FM 300, is fitted.

Continued from page 22.

Settings	CRE, CRIE, CRNE, SPKE, MTRÉ	CME	Multipump system	Section	Page
Special functions	•	•	•		
Low-flow stop function	•	•	•	<a href="#">13.19 "Stop function" (Low-flow stop function)</a>	45
Stop at min. speed	•	•	•	<a href="#">13.20 Stop at min. speed</a>	47
Pipe filling function	•	•	•	<a href="#">13.21 Pipe filling function</a>	47
Pulse flowmeter setup	•	•	•	<a href="#">13.22 "Pulse flowmeter" (Pulse flowmeter setup)</a>	48
Ramps	•	•	•	<a href="#">13.23 Ramps</a>	48
Standstill heating	•	•	•	<a href="#">13.24 Standstill heating</a>	48
Communication	•	•	•		
Pump number	•	•	•	<a href="#">13.28 "Number" (Pump number)</a>	49
Enable/disable radio comm.	•	•	•	<a href="#">13.29 "Radio communication" (Enable/disable radio comm.)</a>	49
General settings	•	•	•		
Language	•	•	•	<a href="#">13.30 Language</a>	49
Set date and time	•	•	•	<a href="#">13.31 "Date and time" (Set date and time)</a>	50
Units	•	•	•	<a href="#">13.32 "Unit configuration" (Units)</a>	50
Enable/disable settings	•	•	•	<a href="#">13.33 "Buttons on product" (Enable/disable settings)</a>	50
Delete history	•	•	•	<a href="#">13.34 Delete history</a>	50
Define Home display	•	•	•	<a href="#">13.35 Define Home display</a>	51
Display settings	•	•	•	<a href="#">13.36 Display settings</a>	51
Store actual settings	•	•	•	<a href="#">13.37 "Store settings" (Store actual settings)</a>	51
Recall stored settings	•	•	•	<a href="#">13.38 "Recall settings" (Recall stored settings)</a>	51
Run start-up guide	•	•	•	<a href="#">13.41 Run start-up guide</a>	52

1) Only available if an advanced functional module, type FM 300, is fitted.

#### 11.3.4 Assist


Assist	CRE, CRIE, CRNE, SPKE, MTRÉ	CME	Multipump system	Section	Page
Assisted pump setup	•	•	•	<a href="#">13.45 Assisted pump setup</a>	53
Setup, analog input	•	•	•	<a href="#">13.46 Setup, analog input</a>	53
Setting of date and time	•	•	•	<a href="#">13.47 Setting of date and time</a>	54
Setup of multi-pump system	•	•	•	<a href="#">13.48 "Multi-pump setup" (Setup of multi-pump system)</a>	54
Description of control mode	•	•	•	<a href="#">13.49 Description of control mode</a>	57
Assisted fault advice	•	•	•	<a href="#">13.50 Assisted fault advice</a>	57

## 12. Grundfos GO Remote

The pump is designed for wireless radio or infrared communication with Grundfos GO Remote.

Grundfos GO Remote enables setting of functions and gives access to status overviews, technical product information and actual operating parameters.

Grundfos GO Remote offers the following mobile interfaces (MI).

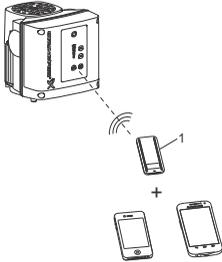

**Fig. 23** Grundfos GO Remote communicating with the pump via radio or infrared connection (IR)

TM06 6256 0916

## 12.1 Communication

When Grundfos GO Remote initiates communication with the pump, the indicator light in the middle of Grundfos Eye flashes green. See section [16. Grundfos Eye](#).

Furthermore, on pumps fitted with an advanced control panel a text appears in the display saying that a wireless device is trying to establish connection. Press **OK** on the pump in order to establish connection with Grundfos GO Remote or press **⏮** to reject connection.

Establish communication using one of these communication types:

- radio communication
- infrared communication.

### 12.1.1 Radio communication

Radio communication can take place at distances up to 30 m. The first time Grundfos GO Remote communicates with the pump, you must enable communication by pressing **🔊** or **OK** on the pump control panel. Later when communication takes place, the pump is recognised by Grundfos GO Remote and you can select the pump from the "List" menu.

### 12.1.2 Infrared communication

When communicating via infrared light, Grundfos GO Remote must be pointed at the pump control panel.

Pos.	Description
1	Grundfos MI 301: Separate module enabling radio or infrared communication. You can use the module in conjunction with an Android or iOS-based smart device with Bluetooth connection.

## 12.2 Menu overview for Grundfos GO Remote

Dashboard	CRE, CRIE, CRNE, SPKE, MTRE	CME	Multipump system
	•	•	•
"Status"	CRE, CRIE, CRNE, SPKE, MTRE	CME	Multipump system
"System mode"			• <sup>2)</sup>
"Resulting setpoint"	•	•	
"Resulting system setpoint"			• <sup>2)</sup>
"Actual controlled value"	•	•	• <sup>2)</sup>
"Motor speed"	•	•	
"Power consumption"	•	•	
"Power cons., sys."			• <sup>2)</sup>
"Energy consumption"	•	•	
"Energy cons., sys."			• <sup>2)</sup>
"Acc. flow, specific energy"	•	•	• <sup>2)</sup>
"Operating hours"	•	•	
"Operating hours, system"			• <sup>2)</sup>
"Pt100/1000 input 1"	•	• <sup>1)</sup>	
"Pt100/1000 input 2"	•	• <sup>1)</sup>	
"Analog output"	•	• <sup>1)</sup>	
"Analog input 1"	•	•	
"Analog input 2"	•	•	
"Analog input 3"	•	• <sup>1)</sup>	
"Digital input 1"	•	•	
"Digital input 2"	•	• <sup>1)</sup>	
"Digital in/output 3"	•	•	
"Digital in/output 4"	•	• <sup>1)</sup>	
"Fitted modules"	•	•	
"Pump 1"			• <sup>2)</sup>
"Pump 2"			• <sup>2)</sup>
"Pump 3"			• <sup>2)</sup>
"Pump 4"			• <sup>2)</sup>

1) Only available if an advanced functional module, type FM 300, is fitted.

2) Only available if Grundfos GO Remote is connected to a multipump system.

"Settings"	CRE, CRIE, CRNE, SPKE, MTRÉ	CME	Multipump system	Section	Page
"Setpoint"	•	•	•	<a href="#">13.1 Setpoint</a>	28
"Operating mode"	•	•	•	<a href="#">13.2 Operating mode</a>	28
"Set user-defined speed"	•	•	•	<a href="#">13.4 "Set user-defined speed"</a>	28
"Control mode"	•	•	•	<a href="#">13.5 "Control mode"</a>	29
"Setting the proportional pressure"	•	•	•	<a href="#">13.6 Setting the proportional pressure</a>	34
"Pipe-filling function"	•	•	•	<a href="#">13.21 Pipe filling function</a>	47
"Buttons on product"	•	•		<a href="#">13.33 "Buttons on product" (Enable/disable settings)</a>	50
"LiqTec"	•	• <sup>1)</sup>		<a href="#">13.18 "LiqTec" (LiqTec function)</a>	45
"Stop function"	•	•	•	<a href="#">13.19 "Stop function" (Low-flow stop function)</a>	45
"Stop at min. speed"	•	•	•	<a href="#">13.20 Stop at min. speed</a>	47
"Controller"	•	•	•	<a href="#">13.13 "Controller" (Controller settings)</a>	40
"Operating range"	•	•	•	<a href="#">13.14 Operating range</a>	41
"Ramps"	•	•		<a href="#">13.23 Ramps</a>	48
"Number"	•	•		<a href="#">13.28 "Number" (Pump number)</a>	49
"Radio communication"	•	•		<a href="#">13.29 "Radio communication" (Enable/disable radio comm.)</a>	49
"Analog input 1"	•	•			
"Analog input 2"	•	•		<a href="#">13.7 Analog inputs</a>	34
"Analog input 3"	•	• <sup>1)</sup>			
"Pt100/1000 input 1"	•	• <sup>1)</sup>		<a href="#">13.8 Pt100/1000 inputs</a>	35
"Pt100/1000 input 2"	•	• <sup>1)</sup>			
"Digital input 1"	•	•		<a href="#">13.9 Digital inputs</a>	36
"Digital input 2"	•	• <sup>1)</sup>			
"Digital in/output 3"	•	•		<a href="#">13.10 Digital inputs/outputs</a>	37
"Digital in/output 4"	•	• <sup>1)</sup>			
"Pulse flowmeter"	•	•		<a href="#">13.22 "Pulse flowmeter" (Pulse flowmeter setup)</a>	48
"Predefined setpoint"	•	•	•	<a href="#">13.16 Predefined setpoints</a>	43
"Analog output"	•	• <sup>1)</sup>		<a href="#">13.12 Analog output</a>	39
"External setpoint funct."	•	•		<a href="#">13.15 External setpoint function</a>	42
"Signal relay 1"	•	•		<a href="#">13.11 "Signal relays" 1 and 2 (Relay outputs)</a>	38
"Signal relay 2"	•	•			

<sup>1)</sup> Only available if an advanced functional module, type FM 300, is fitted.

Continues on page 27.

Continued from page 26.

"Settings"	CRE, CRIE, CRNE, SPKE, MTRÉ	CME	Multipump system	Section	Page
"Limit 1 exceeded"	•	•	•	<a href="#">13.17 Limit-exceeded function</a>	44
"Limit 2 exceeded"	•	•	•		
"Alternating operation, time"			• <sup>2)</sup>		
"Sensor to be used"			• <sup>2)</sup>	<a href="#">13.48 "Multi-pump setup" (Setup of multi-pump system)</a>	54
"Time for pump changeover"			• <sup>1) + 2)</sup>		
"Standstill heating"	•	•		<a href="#">13.24 Standstill heating</a>	48
"Alarm handling"	•	•	•	<a href="#">13.25 Alarm handling</a>	48
"Motor bearing monitoring"	•	•		<a href="#">13.26 Motor bearing monitoring</a>	48
"Service"	•	•		<a href="#">13.27 "Service"</a>	49
"Date and time"	•	• <sup>1)</sup>		<a href="#">13.31 "Date and time" (Set date and time)</a>	50
"Store settings"	•	•		<a href="#">13.37 "Store settings" (Store actual settings)</a>	51
"Recall settings"	•	•		<a href="#">13.38 "Recall settings" (Recall stored settings)</a>	51
"Undo"	•	•	•	<a href="#">13.38.1 "Undo"</a>	51
"Pump name"	•	•	•	<a href="#">13.39 "Pump name"</a>	51
"Connection code"	•	•	•	<a href="#">13.40 "Connection code"</a>	52
"Unit configuration"	•	•		<a href="#">13.32 "Unit configuration" (Units)</a>	50

1) Only available if an advanced functional module, type FM 300, is fitted.

2) Only available if Grundfos GO Remote is connected to a multipump system.

"Alarms and warnings"	CRE, CRIE, CRNE, SPKE, MTRÉ	CME	Multipump system	Section	Page
"Alarm log"	•	•	•	<a href="#">13.42 Alarm log</a>	52
"Warning log"	•	•	•	<a href="#">13.43 Warning log</a>	53
"Reset alarm" button	•	•	•		

"Assist"	CRE, CRIE, CRNE, SPKE, MTRÉ	CME	Multipump system	Section	Page
"Assisted pump setup"	•	•		<a href="#">13.45 Assisted pump setup</a>	53
"Assisted fault advice"	•	•	•	<a href="#">13.50 Assisted fault advice</a>	57
"Multi-pump setup"	•	•	•	<a href="#">13.48 "Multi-pump setup" (Setup of multi-pump system)</a>	54

## 13. Description of functions

### 13.1 Setpoint

Pump variant	Setpoint
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

You can set the setpoint for all control modes when you have selected the desired control mode. See section [13.5 "Control mode"](#).

#### Factory setting

See section [24. Factory settings](#).

### 13.2 Operating mode

Pump variant	Operating mode
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

Possible operating modes:

- Normal  
The pump runs according to the selected control mode.
- Stop  
The pump stops.
- Min.  
You can use the minimum curve mode in periods in which a minimum flow is required. When operating according to the minimum curve, the pump is operating like an uncontrolled pump.
- Max.  
You can use the maximum curve mode in periods in which a maximum flow is required. When operating according to the maximum curve, the pump is operating like an uncontrolled pump.
- Manual  
The pump is operating at a manually set speed. In Manual the setpoint via bus is over-ruled. See section [13.3 Set manual speed](#).
- "User-defined speed"  
The motor is operating at a speed set by the user. See section [13.4 "Set user-defined speed"](#).

All operating modes are illustrated in fig. 24.

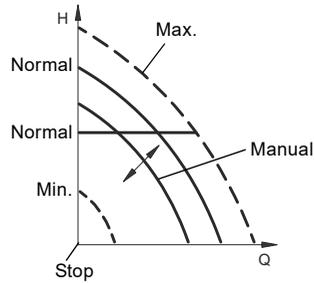


Fig. 24 Operating modes

#### Factory setting

See section [24. Factory settings](#).

### 13.3 Set manual speed

This menu is only available in the advanced control panel. With Grundfos GO Remote, you set the speed via the Setpoint menu.

You can set the pump speed in % of the maximum speed. When you have set the operating mode to Manual, the pump starts running at the set speed. The speed can then be changed manually via Grundfos GO Remote or via the advanced control panel.

#### Factory setting

See section [24. Factory settings](#).

### 13.4 "Set user-defined speed"

You can set the motor speed in % of the maximum speed. When you have set the operating mode to "User-defined speed", the motor runs at the set speed.

### 13.5 "Control mode"

Pump variant	Control mode
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

Possible control modes:

- "Proportional pressure"
- "Constant pressure" (Const. pressure)
- "Constant temperature" (Const. temp.)
- "Constant differential pressure" (Con. diff. press.)
- "Constant differential temperature" (Con. diff. temp.)
- "Constant flow rate" (Const. flow rate)
- "Constant level" (Const. level)
- "Constant other value" (Const. other val.)
- "Constant curve" (Const. curve.)
  - \* Requires a measured differential pressure and pump data entered into the controller. See [13.6.5 "Pump data"](#)

#### Factory setting


See section [24. Factory settings](#).

#### 13.5.1 "Proportional pressure"

Pump variant	"Proportional pressure"
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

We recommend this control mode if the pump is installed in a circulating system.

The head of the pump is reduced at decreasing water demand and increased at rising water demand. See [Fig. 25](#).

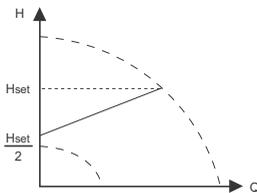

**Fig. 25** "Proportional pressure"


This control mode is especially suitable in systems with relatively large pressure losses in the distribution pipes. The head of the pump increases proportionally to the system flow rate to compensate for the large pressure losses in the distribution pipes.

For the settings of proportional pressure, see [13.6 Setting the proportional pressure](#).

#### 13.5.2 "Constant pressure"

Pump variant	"Constant pressure"
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

We recommend this control mode if the pump is to deliver a constant pressure, independently of the flow in the system. See [fig. 26](#).

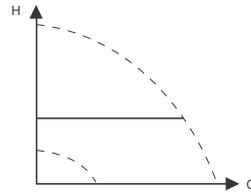


**Fig. 26** "Constant pressure"

This control mode uses the factory-fitted pressure sensor, if any, which measures the outlet pressure of the pump.

For pumps without a factory-fitted sensor, you must connect a pressure sensor to one of the analog inputs of the pump. You can set the pressure sensor in the Assist menu. See section [13.45 Assisted pump setup](#).

#### Examples

- One external pressure sensor.

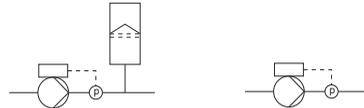

**Fig. 27** "Constant pressure"

#### Controller settings

For recommended controller settings, see section [13.13 "Controller" \(Controller settings\)](#).

#### Factory setting

See section [24. Factory settings](#).

TM05 7901 1613

### 13.5.3 "Constant temperature"

Pump variant	"Constant temperature"
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

This control mode ensures a constant temperature. Constant temperature is a comfort control mode that you can use in domestic hot-water systems to control the flow to maintain a fixed temperature in the system. See fig. 28.

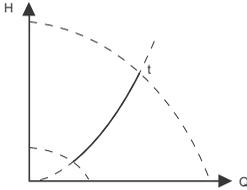


Fig. 28 "Constant temperature"

This control mode requires a temperature sensor placed at the location where the temperature is to be controlled. See the examples below:

#### Examples

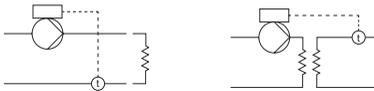


Fig. 29 "Constant temperature"

#### Controller settings

For recommended controller settings, see section 13.13 "Controller" (Controller settings).

#### Factory setting

See section 24. Factory settings.

### 13.5.4 "Constant differential pressure"

Pump variant	"Constant differential pressure"
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

The pump maintains a constant differential pressure, independently of the flow in the system. See fig. 30.


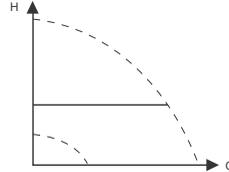


Fig. 30 "Constant differential pressure"

This control mode requires either a differential-pressure sensor or two external pressure sensors. See the examples below:

#### Examples

- One differential-pressure sensor. The pump uses the input from the sensor to control the differential pressure. You can set the sensor manually or by using the Assist menu. See section 13.45 Assisted pump setup.

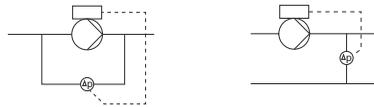

- Two pressure sensors. Constant differential-pressure control is achievable with two pressure sensors. The pump uses the inputs from the two sensors and calculates the differential pressure. Both sensors must have the same unit and must be set as feedback sensors. You can set the sensors manually, sensor by sensor, or by using the Assist menu. See section 13.45 Assisted pump setup.



Fig. 31 "Constant differential pressure"

#### Controller settings

For recommended controller settings, see section 13.13 "Controller" (Controller settings).

#### Factory setting

See section 24. Factory settings.

TM05 7900 1613

TM05 7901 1613

### 13.5.5 "Constant differential temperature"

Pump variant	"Constant differential temperature"
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

The pump maintains a constant differential temperature in the system and the pump performance is controlled according to this. See fig. 32.

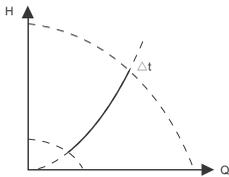



Fig. 32 "Constant differential temperature"

This control mode requires either two temperature sensors or one differential-temperature sensor. See the examples below. The temperature sensors can either be analog sensors connected to two of the analog inputs or two Pt100/Pt1000 sensors connected to the Pt100/1000 inputs, if these are available on the specific pump.

Set the sensor in the Assist menu under Assisted pump setup. See section [13.45 Assisted pump setup](#).

#### Examples

- One differential-temperature sensor. The pump uses the input from the sensor to control the differential temperature. You can set the sensor manually or by using the Assist menu. See section [13.45 Assisted pump setup](#).

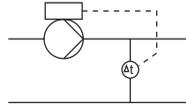

- Two temperature sensors. Constant differential-temperature control is achievable with two temperature sensors. The pump uses the input from the two sensors and calculates the differential temperature. Both sensors must have the same unit and must be set as feedback sensors. You can do this manually, sensor by sensor, or by using the Assist menu. See section [13.45 Assisted pump setup](#).

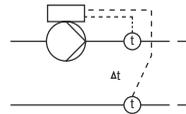


Fig. 33 Constant differential temperature

#### Controller settings

For recommended controller settings, see section [13.13 "Controller" \(Controller settings\)](#).

#### Factory setting


See section [24. Factory settings](#).

TM05 7954 1713

### 13.5.6 "Constant flow rate"

Pump variant	"Constant flow rate"
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•


The pump maintains a constant flow in the system, independently of the head. See fig. 34.

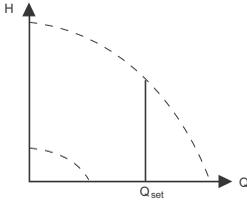

**Fig. 34** Constant flow rate

This control mode requires a flow sensor as shown below:

#### Example

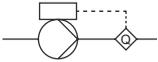

**Fig. 35** "Constant flow rate"

#### Controller settings

For recommended controller settings, see section 13.13 "Controller" (Controller settings).


#### Factory setting

See section 24. Factory settings.

### 13.5.7 "Constant level"

Pump variant	"Constant level"
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

The pump maintains a constant level, independently of the flow rate. See fig. 36.

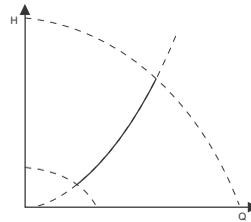

**Fig. 36** "Constant level"

This control mode requires a level sensor.

The pump can control the level in a tank in two ways:

- As an emptying function where the pump draws the liquid from a feed tank.
- As a filling function where the pump pumps the liquid into a storage tank.

See fig. 37.


TM05 7955 1713

TM05 7941 1613


The type of level control function depends on the setting of the built-in controller. See section [13.13 "Controller" \(Controller settings\)](#).

### Examples

- One level sensor.  
– emptying function (feed tank).

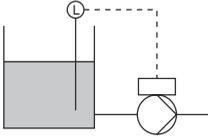

- One level sensor.  
– filling function (storage tank).

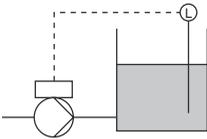

**Fig. 37** "Constant level"

### Controller settings

For recommended controller settings, see section [13.13 "Controller" \(Controller settings\)](#).

### Factory setting

See section [24. Factory settings](#).

### 13.5.8 "Constant other value"

Pump variant	"Constant other value"
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

Any other value is kept constant.

Use this control mode if you want to control a value which is not available in the Control mode menu. Connect a sensor measuring the controlled value to one of the analog inputs of the pump. The controlled value is shown in percentage of sensor range.

### Factory setting


See section [24. Factory settings](#).

### 13.5.9 "Constant curve"

Pump variant	"Constant curve"
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

You can set the pump to operate according to a constant curve, like an uncontrolled pump. See [fig. 38](#).

The desired speed can be set in % of maximum speed in the range from 13 to 100 %.

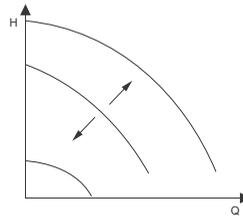

**Fig. 38** "Constant curve"

### Controller settings

For recommended controller settings, see section [13.13 "Controller" \(Controller settings\)](#).

### Factory setting

See section [24. Factory settings](#).

TM05 7957 1713

## 13.6 Setting the proportional pressure

### 13.6.1 "Control-curve function"

You can set the proportional curve either to quadratic or linear to match the system curve.

### 13.6.2 "Zero-flow head"

You can set this value in percentage of the setpoint and define how much the setpoint must be reduced at a closed valve. With a setting of 100 %, the control mode is equal to the constant differential pressure.

### 13.6.3 "Fixed inlet pressure"

This menu enables the use of a fixed inlet pressure.

### 13.6.4 "Inlet pressure"

Enter the fixed inlet pressure that is to be supplied to the pump.

### 13.6.5 "Pump data"

To enable the pump to operate in proportional pressure, the controller needs to process the pump curve. Enter the maximum head, rated head and rated flow from the pump nameplate.

## 13.7 Analog inputs

Available inputs depend on the functional module fitted in the pump:

Function (terminal)	FM 200* (standard)	FM 300* (advanced)
Analog input 1, setup (4)	•	•
Analog input 2, setup (7)	•	•
Analog input 3, setup (14)	-	•

\* See section 19. *Identification of functional module.*

If you want to set the analog input for a feedback sensor, we recommend that you do this via the Assisted pump setup menu. See section 13.45 *Assisted pump setup.*

If you want to set an analog input for other purposes, you can do this manually.

You can set the analog inputs via the Setup, analog input menu. See section 13.46 *Setup, analog input.*

If you make the manual setting via Grundfos GO Remote, you need to enter the menu for the analog input under the Settings menu.

## Function

The analog inputs can be set to these functions:

- Not active
- Feedback sensor  
The sensor is used for the selected control mode.
- Ext. setpoint infl.  
See section 13.15 *External setpoint function.*
- Other function.

## Measured parameter

Select one of the parameters listed below, i.e. the parameter to be measured in the system by the sensor connected to the actual analog input. See fig. 39.

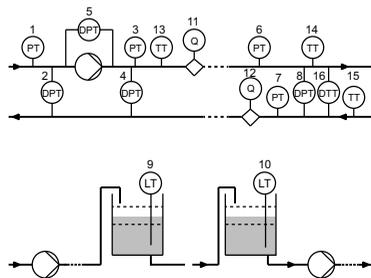


Fig. 39 Overview of sensor locations

Sensor function/measured parameter	Pos.
Inlet pressure	1
Diff. press., inlet	2
Discharge press.	3
Diff. press., outlet	4
Diff. press., pump	5
Press. 1, external	6
Press. 2, external	7
Diff. press., ext.	8
Storage tank level	9
Feed tank level	10
Pump flow	11
Flow, external	12
Liquid temp.	13
Temperature 1	14
Temperature 2	15
Diff. temp., ext.	16
Ambient temp.	Not shown
Other parameter	Not shown

TMO6 2328 3914

**Unit**

Parameter	Possible units
Pressure	bar, m, kPa, psi, ft
Level	m, ft, in
Pump flow	m <sup>3</sup> /h, l/s, yd <sup>3</sup> /h, gpm
Liquid temperature	°C, °F
Other parameter	%

**Electrical signal**

Select signal type:

- 0.5-3.5 V
- 0-5 V
- 0-10 V
- 0-20 mA
- 4-20 mA.

**Sensor range, minimum value**

Set the minimum value of the connected sensor.

**Sensor range, maximum value**

Set the maximum value of the connected sensor.

**Factory setting**

See section [24. Factory settings](#).

**13.7.1 Setting two sensors for differential measurement**

In order to measure the difference of a parameter between two points, set the corresponding sensors as follows:

Parameter	Analog input for sensor 1	Analog input for sensor 2
Pressure, option 1	Differential pressure, inlet	Differential pressure, outlet
Pressure, option 2	Pressure 1, external	Pressure 2, external
Flow	Pump flow	Flow, external
Temperature	Temperature 1	Temperature 2



If you want to use the control mode "constant differential pressure", you must choose the function Feedback sensor for the analog input of both sensors.

**13.8 Pt100/1000 inputs**

Available inputs depend on the functional module fitted in the pump:

Function (terminal)	FM 200* (standard)	FM 300* (advanced)
Pt100/1000 input 1, setup (17 and 18)	-	•
Pt100/1000 input 2, setup (18 and 19)	-	•

\* See section [19. Identification of functional module](#).

If you want to set the Pt100/1000 input for a feedback sensor, we recommend that you do this via the Assisted pump setup menu. See section [13.45 Assisted pump setup](#).

If you want to set a Pt100/1000 input for other purposes, you can do this manually.

You can set the analog inputs via the Setup, analog input menu. See section [13.46 Setup, analog input](#).

If you make the manual setting via Grundfos GO Remote, you need to enter the menu for the Pt100/1000 input under the Settings menu.


**Function**

The Pt100/1000 inputs can be set to these functions:

- Not active
- Feedback sensor  
The sensor is used for the selected control mode.
- Ext. setpoint infl.  
See section [13.15 External setpoint function](#).
- Other function.

### Measured parameter

Select one of the parameters listed below, i.e. the parameter to be measured in the system by the PT100/1000 sensor connected to the actual PT100/1000 input. See fig. 40.

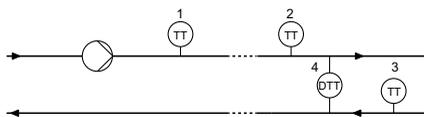

**Fig. 40** Overview of PT100/1000 sensor locations

Parameter	Pos.
Liquid temp.	1
Temperature 1	2
Temperature 2	3
Ambient temp.	Not shown

### Measuring range

-50 to 204 °C.

### Factory setting

See section 24. [Factory settings](#).

## 13.9 Digital inputs

Pump variant	Digital inputs
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

Available inputs depend on the functional module fitted in the pump:

Function (terminal)	FM 200* (standard)	FM 300* (advanced)
Digital input 1, setup (2 and 6)	•	•
Digital input 2, setup (1 and 9)	-	•

\* See section 19. [Identification of functional module](#).

To set a digital input, make the settings below.

### Function

Select one of these functions:

- Not active.  
When set to Not active, the input has no function.
- External stop.  
When the input is deactivated (open circuit), the pump stops.
- Min. (minimum speed).  
When the input is activated, the pump runs at the set minimum speed.

- Max. (maximum speed).  
When the input is activated, the pump runs at the set maximum speed.
- "User-defined speed"  
When the input is activated, the motor runs at a speed set by the user.
- External fault.  
When the input is activated, a timer is started. If the input is activated for more than 5 seconds, the pump is stopped and a fault is indicated. This function depends on input from external equipment.
- Alarm resetting.  
When the input is activated, a possible fault indication is reset.
- Dry running.  
When this function is selected, lack of inlet pressure or water shortage can be detected. When lack of inlet pressure or water shortage (dry running) is detected, the pump is stopped. The pump cannot restart as long as the input is activated.  
This requires the use of an accessory, such as these:
  - a pressure switch installed on the inlet side of the pump
  - a float switch installed on the inlet side of the pump.
- Accumulated flow.  
When this function is selected, the accumulated flow can be registered. This requires the use of a flowmeter which can give a feedback signal as a pulse per defined volume of water. See section 13.22 ["Pulse flowmeter" \(Pulse flowmeter setup\)](#).
- Predefined setpoint digit 1 (applies only to digital input 2).  
When digital inputs are set to predefined setpoint, the pump operates according to a setpoint based on the combination of the activated digital inputs. See section 13.16 [Predefined setpoints](#).
- Active output.  
When the input is activated, the related digital output is activated. See 13.10 [Digital inputs/outputs](#). This is done without any changes to pump operation.
- Local motor stop.  
When the input is activated, the given pump in a multipump system stops without affecting the performance of the other pumps in the system.

The priority of the selected functions in relation to each other appears from section 15. [Priority of settings](#).

A stop command always has the highest priority.

**Activation delay**

Select the activation delay (T1).

It is the time between the digital signal and the activation of the selected function.

Range: 0-6000 seconds.

**Duration timer mode**


Select the mode. See fig. 41.

- Not active
- active with interrupt (mode A)
- active without interrupt (mode B)
- active with after-run (mode C).

Select the duration time (T2).

It is the time which, together with the mode, determines how long the selected function is active.

Range: 0 to 15,000 seconds.

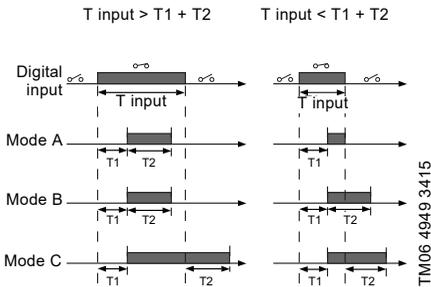

**Fig. 41** Duration timer function of digital inputs

**Factory setting**

See section 24. *Factory settings*.

**13.10 Digital inputs/outputs**


Pump variant	Digital inputs/outputs
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

Available inputs/outputs depend on the functional module fitted in the pump:

Function (terminal)	FM 200* (standard)	FM 300* (advanced)
Digital input/output 3, setup (6 and 10)	•	•
Digital input/output 4, setup (11 and 18)	-	•

\* See section 19. *Identification of functional module*.

You can select if the interface is to be used as input or output. The output is an open collector and you can connect it to e.g. an external relay or controller such as a PLC.

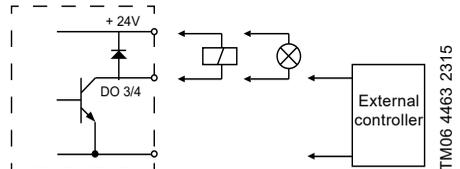

**Fig. 42** Example of configurable digital inputs/outputs

To set a digital input/output, make the settings below.

**Mode**

You can set the digital input/output 3 and 4 to act as digital input or digital output:

- Digital input
- Digital output.

**Function**

You can set the digital input/output 3 and 4 to the functions stated in the table below:

**Possible functions, digital input/output 3**

Function if input (See details in section 13.9 Digital inputs)	Function if output (See details in section 13.11 "Signal relays" 1 and 2 (Relay outputs))
<ul style="list-style-type: none"> <li>• Not active</li> <li>• External stop</li> <li>• Min.</li> <li>• Max.</li> <li>• "User-defined speed"</li> <li>• External fault</li> <li>• Alarm resetting</li> <li>• Dry running</li> <li>• Accumulated flow</li> <li>• Predefined setpoint digit 2</li> <li>• Active output</li> <li>• Local motor stop</li> </ul>	<ul style="list-style-type: none"> <li>• Not active</li> <li>• Ready</li> <li>• Alarm</li> <li>• Operation</li> <li>• Pump running</li> <li>• Warning</li> <li>• Limit 1 exceeded</li> <li>• Limit 2 exceeded</li> <li>• Digital input 1, state</li> <li>• Digital input 2, state</li> <li>• Digital input 3, state</li> <li>• Digital input 4, state</li> </ul>

**Possible functions, digital input/output 4**

Function if input (See details in section 13.9 Digital inputs)	Function if output (See details in section 13.11 "Signal relays" 1 and 2 (Relay outputs))
<ul style="list-style-type: none"> <li>• Not active</li> <li>• External stop</li> <li>• Min.</li> <li>• Max.</li> <li>• "User-defined speed"</li> <li>• External fault</li> <li>• Alarm resetting</li> <li>• Dry running</li> <li>• Accumulated flow</li> <li>• Predefined setpoint digit 3</li> <li>• Active output</li> <li>• Local motor stop</li> </ul>	<ul style="list-style-type: none"> <li>• Not active</li> <li>• Ready</li> <li>• Alarm</li> <li>• Operation</li> <li>• Pump running</li> <li>• Warning</li> <li>• Limit 1 exceeded</li> <li>• Limit 2 exceeded</li> <li>• Digital input 1, state</li> <li>• Digital input 2, state</li> <li>• Digital input 3, state</li> <li>• Digital input 4, state</li> </ul>

**Duration timer mode (only for input)**


Select the duration timer mode. See fig. 41.

- Not active
- active with interrupt (mode A)
- active without interrupt (mode B)
- active with after-run (mode C)

Select the duration time (T2).

It is the time which, together with the mode, determines how long the selected function is active.

Range: 0 to 15,000 seconds.

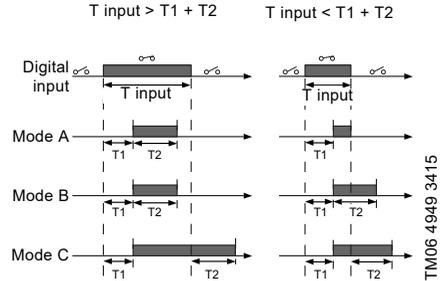

**Fig. 43** Duration timer function of digital inputs

**Factory setting**

See section 24. *Factory settings*.

**13.11 "Signal relays" 1 and 2 (Relay outputs)**

Pump variant	"Signal relays" 1 and 2 (Relay outputs)
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

The pump incorporates two signal relays for potential-free signalling. For further information, see section 25. *Megging*.

**Function**

You can configure the signal relays to be activated by one of the following incidents:

- Not active.
- Ready.  
The pump can be running or is ready to run and no alarms are present.
- Alarm.  
There is an active alarm and the pump is stopped.

- "Operating" (Operation).  
"Operating" equals "Running" but the pump is still in operation when the pump is stopped due to low flow. See section ["Low-flow detection"](#) on page 46.
- "Running" (Pump running).  
The pump is running.
- Warning.  
There is an active warning.
- Digital input 1, state  
If digital input 1 is activated, the output is also activated.
- Digital input 2, state  
If digital input 2 is activated, the output is also activated.
- Digital input 3, state  
If digital input 3 is activated, the output is also activated.
- Digital input 4, state  
If digital input 4 is activated, the output is also activated.
- Limit 1 exceeded  
When this function is activated, the signal relay is activated. See section [13.17 Limit-exceeded function](#).
- Limit 2 exceeded.  
When this function is activated, the signal relay is activated. See section [13.17 Limit-exceeded function](#).
- "External fan control" (Control of external fan).  
When you select "External fan control", the relay is activated if the internal temperature of the motor electronics reach a preset limit value.

### Factory setting

See section [24. Factory settings](#).

## 13.12 Analog output

Pump variant	Analog output
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

Whether the analog output is available or not, depends on the functional module fitted in the pump:

Function (terminal)	FM 200* (standard)	FM 300* (advanced)
Analog output	-	•

\* See section [19. Identification of functional module](#).

The analog output enables the reading of certain operating data to external control systems.

To set the analog output, make the settings below.

### Output signal

- 0-10 V
- 0-20 mA
- 4-20 mA.

### Function of analog output

- Actual speed

Signal range [V, mA]	Actual speed [%]		
	0	100	200
0-10 V	0 V	5 V	10 V
0-20 mA	0 mA	10 mA	20 mA
4-20 mA	4 mA	12 mA	20 mA

The reading is a percentage of the rated speed.

- Actual value

Signal range [V, mA]	"Actual value"	
	Sensor <sub>min</sub>	Sensor <sub>max</sub>
0-10 V	0 V	10 V
0-20 mA	0 mA	20 mA
4-20 mA	4 mA	20 mA

The reading is a percentage of the range between the minimum and maximum value.

- Resulting setpoint

Signal range [V, mA]	Resulting setpoint [%]	
	0	100
0-10 V	0 V	10 V
0-20 mA	0 mA	20 mA
4-20 mA	4 mA	20 mA

The reading is a percentage of the external setpoint range.

- Motor load

Signal range [V, mA]	Motor load [%]	
	0	100
0-10 V	0 V	10 V
0-20 mA	0 mA	20 mA
4-20 mA	4 mA	20 mA

The reading is a percentage of the range between 0 and 200 % of the maximum permissible load at the actual speed.

- Motor current

Signal range [V, mA]	Motor current [%]		
	0	100	200
0-10 V	0 V	5 V	10 V
0-20 mA	0 mA	10 mA	20 mA
4-20 mA	4 mA	12 mA	20 mA

The reading is a percentage of the range between 0 % and 200 % of the rated current.

- Limit 1 exceeded and Limit 2 exceeded

Signal range [V, mA]	Limit-exceeded function	
	Output not active	Output active
0-10 V	0 V	10 V
0-20 mA	0 mA	20 mA
4-20 mA	4 mA	20 mA

This function is typically used for monitoring of secondary parameters in the system. If the limit is exceeded, an output, a warning or an alarm is activated.

- Flow rate

Signal range [V, mA]	Flow rate [%]		
	0	100	200
0-10 V	0 V	5 V	10 V
0-20 mA	0 mA	10 mA	20 mA
4-20 mA	4 mA	12 mA	20 mA

The reading is a percentage of the range between 0 and 200 % of the nominal flow.

**Factory setting**

See section 24. *Factory settings*.

**13.13 "Controller" (Controller settings)**

Pump variant	"Controller" (Controller settings)
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

The pumps have a factory default setting of gain ( $K_p$ ) and integral time ( $T_i$ ).

However, if the factory setting is not the optimum setting, you can change the gain and the integral time:





- Set the gain within the range from 0.1 to 20.
- Set the integral-action time within the range from 0.1 to 3600 seconds.  
If you select 3600 seconds, the controller functions as a P controller.

Furthermore, you can set the controller to inverse control.

This means that if you increase the setpoint, the speed is reduced. In the case of inverse control, you must set the gain within the range from -0.1 to -20.

**Guidelines for setting of PI controller**

The tables below show the recommended controller settings:

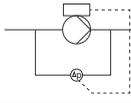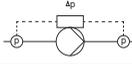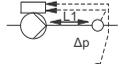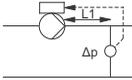Constant differential pressure	$K_p$	$T_i$
	0.5	0.5
		
	0.5	L1 < 5 m: 0.5 L1 > 5 m: 3 L1 > 10 m: 5
		

L1: distance in metres between pump and sensor.

Constant temperature	$K_p$		$T_i$
	Heating system <sup>1)</sup>	Cooling system <sup>2)</sup>	
	0.5	-0.5	$10 + 5L2$
	0.5	-0.5	$30 + 5L2$

- 1) In heating systems, an increase in pump performance results in a rise in temperature at the sensor.
- 2) In cooling systems, an increase in pump performance results in a drop in temperature at the sensor.

L2: distance in metres between heat exchanger and sensor.

Constant differential temperature	$K_p$	$T_i$
	-0.5	$10 + 5L2$

L2: Distance [m] between heat exchanger and sensor.

Constant flow rate	$K_p$	$T_i$
	0.5	0.5

Constant pressure	$K_p$	$T_i$
	0.5	0.5
	0.5	0.5

Constant level	$K_p$	$T_i$
	-10	0
	10	0

**General rules of thumb**

If the controller is too slow-reacting, increase the gain.

If the controller is hunting or unstable, dampen the system by reducing the gain or increasing the integral time.

**Factory setting**

See section 24. [Factory settings](#).


**13.14 Operating range**

Pump variant	Operating range
CME	•
CRE, CRIE, CRNE, SPKE, MTR	•

Set the operating range as follows:

- Set the minimum speed within the range from fixed minimum speed to user-set maximum speed.
- Set the maximum speed within the range from user-set minimum speed to fixed maximum speed.

The range between the user-set minimum and maximum speeds is the operating range. See fig. 44.

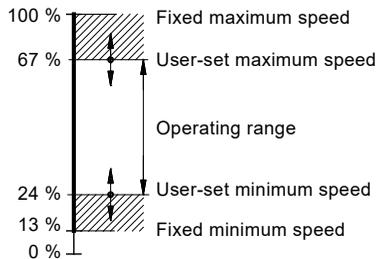

**Fig. 44** Example of minimum and maximum settings

**Factory setting**

See section 24. [Factory settings](#).

TM00 6785 5095



- Linear with Stop  
In the input signal range from 20 to 100 %, the setpoint is influenced linearly.  
If the input signal is below 10 %, the pump changes to operating mode Stop.  
If the input signal is increased above 15 %, the operating mode is changed back to Normal.  
See fig. 48.

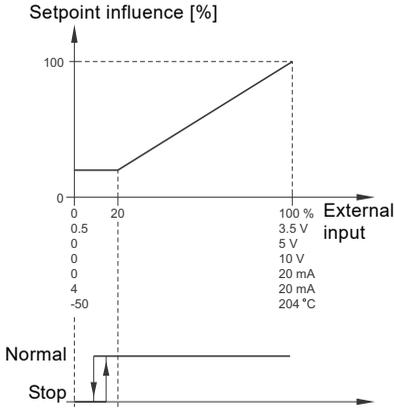


Fig. 48 Linear with Stop

- Influence table.  
The setpoint is influenced by a curve made out of two to eight points. There is a straight line between the points and a horizontal line before the first point and after the last point.

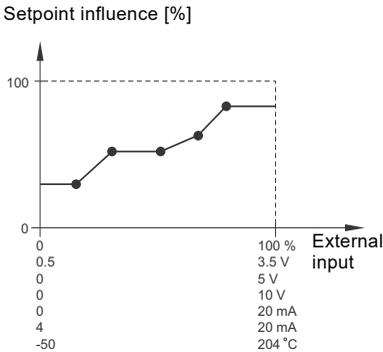


Fig. 49 Influence table (example with five points)

**Factory setting**

See section 24. [Factory settings](#).

**13.16 Predefined setpoints**

Pump variant	Predefined setpoints
CME	-
CRE, CRIE, CRNE, SPKE, MTRÉ	•

You can set and activate seven predefined setpoints by combining the input signals to digital inputs 2, 3 and 4. See the table below.

Set the digital inputs 2, 3 and 4 to Predefined setpoints if all seven predefined setpoints are to be used. You can also set one or two of the digital inputs to Predefined setpoints but this limits the number of predefined setpoints available.

Digital inputs			Setpoint
2	3	4	
0	0	0	Normal setpoint or stop
1	0	0	Predefined setpoint 1
0	1	0	Predefined setpoint 2
1	1	0	Predefined setpoint 3
0	0	1	Predefined setpoint 4
1	0	1	Predefined setpoint 5
0	1	1	Predefined setpoint 6
1	1	1	Predefined setpoint 7

0: Open contact  
1: Closed contact

**Example**

Figure 50 shows how you can use the digital inputs to set seven predefined setpoints. Digital input 2 is open and digital inputs 3 and 4 are closed. If you compare with the table above, you can see that Predefined setpoint 6 is activated.

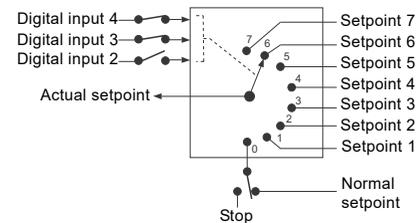


Fig. 50 Principle sketch showing how predefined setpoints function

If all digital inputs are open, the pump stops or runs at the normal setpoint. Set the desired action with Grundfos GO Remote or with the advanced control panel.

**Factory setting**

See section 24. [Factory settings](#).

TM06 4167 1615

TM06 4170 1615

TM06 4269 1815

### 13.17 Limit-exceeded function

Pump variant	Limit-exceeded function
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

This function can monitor a measured parameter or one of the internal values such as speed, motor load or motor current. If a set limit is reached, a selected action can take place. You can set two limit-exceeded functions meaning that you can monitor two parameters or two limits of the same parameter simultaneously.

The function requires setting of the following:

#### "Measured"

Here you set the measured parameter which is to be monitored.

#### "Limit"

Here you set the limit which activates the function.

#### "Hysteresis band"

Here you set the hysteresis band.

#### "Limit exceeded when"

Here you can set if you want the function to activate when the selected parameter exceeds or drops below the set limit.

- Above limit.  
The function is activated if the measured parameter exceeds the set limit.
- Below limit.  
The function is activated if the measured parameter drops below the set limit.

#### "Action"

If the value exceeds a limit, you can set an action. You can select the following actions:

- No action.  
The pump remains in its current state. Use this setting if you only want to have a relay output when the limit is reached. See section [13.11 "Signal relays" 1 and 2 \(Relay outputs\)](#).
- Warning/alarm.  
A warning is given.
- Stop.  
The pump stops.
- Min..  
The pump reduces speed to minimum.
- Max..  
The pump increases speed to maximum.
- "User-defined speed"  
The pumps runs at a speed set by the user.
- Alarm + Stop  
An alarm is given, and the pump stops.
- Alarm + Min.  
An alarm is given, and the pump decreases speed to minimum.
- Alarm + Max.  
An alarm is given, and the pump increases speed to maximum.

- Alarm + User-defined speed  
An alarm is given, and the pump runs at the speed set by the user.

#### Detection delay

You can set a detection delay which ensures that the monitored parameter stays above or below a set limit in a set time before the function is activated.

#### Resetting delay

The resetting delay is the time from which the measured parameter differs from the set limit including the set hysteresis band and until the function is reset.

#### Example:

The function is to monitor the outlet pressure from a CRE pump. If the pressure is below 5 bar for more than 5 seconds, a warning must be given. If the outlet pressure is above 7 bar for more than 8 seconds, reset the limit exceeded warning.

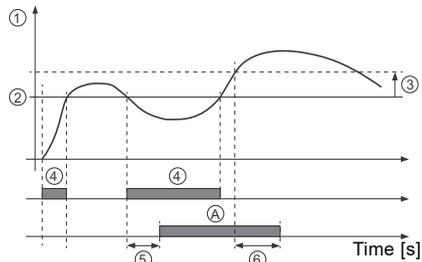


Fig. 51 Limit exceeded (example)

Pos.	Setting parameter	Setting
1	"Measured"	Outlet pressure
2	"Limit"	5 bar
3	"Hysteresis band"	2 bar
4	"Limit exceeded when"	Below limit
5	"Detection delay"	5 seconds
6	"Resetting delay"	8 seconds
A	"Limit exceeded function active"	-
-	"Action"	Warning

#### Factory setting

See section [24. Factory settings](#).

### 13.18 "LiqTec" (LiqTec function)

Pump variant	"LiqTec" (LiqTec function)
CME	-
CRE, CRIE, CRNE, SPKE, MTRE	•

You can enable the function of the LiqTec sensors in this display. A LiqTec sensor protects the pump against dry running.

The function requires that a LiqTec sensor has been fitted and connected to the pump.

When you have enabled the LiqTec function, it stops the pump if dry running occurs. Restart the pump manually if it has been stopped due to dry running.

#### "Dry running detection delay"

You can set a detection delay in order to make sure that the pump is given a chance to start up before the LiqTec function stops the pump due to dry running.

Range: 0-254 seconds.

#### Factory setting

See section 24. *Factory settings*.

### 13.19 "Stop function" (Low-flow stop function)

Pump variant	"Stop function" (Low-flow stop function)
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

You can set the "Low-flow stop function" to these values:

- Not active
- Energy-optimal mode
- High-comfort mode
- "User-defined mode" (Customised operating mode).

When the low-flow stop function is active, the flow is monitored. If the flow becomes lower than the set minimum flow ( $Q_{\min}$ ), the pump changes from continuous operation at constant pressure to start-stop operation and stops if the flow reaches zero.

The advantages of enabling the "Low-flow stop function" are the following:

- no unnecessary heating of the pumped liquid
- reduced wear of the shaft seals
- reduced noise from operation.

The disadvantages of enabling the "Low-flow stop function" may be the following:

- The delivered pressure is not completely constant as it fluctuates between the start and stop pressures.
- The frequent starts/stops of the pump may in some applications cause acoustic noise.

The impact of the above disadvantages very much depends on the setting selected for the stop function.

The High-comfort mode setting minimises pressure fluctuations and acoustic noise.

Select Energy-optimal mode if the main priority is to reduce the energy consumption as much as possible.

Possible settings of the stop function:

- Energy-optimal mode  
The pump automatically adjusts the parameters for the stop function so that the energy consumption during the start-stop operation period is minimised.  
In this case, the stop function uses the factory-set values of the minimum flow ( $Q_{\min1}$ ) and other internal parameters. See fig. 52.
- High-comfort mode:  
The pump automatically adjusts the parameters for the stop function so that the disturbances during the start-stop operation period are minimised.  
In this case, the stop function uses the factory-set values of the minimum flow ( $Q_{\min2}$ ) and other internal parameters. See fig. 52.
- "User-defined mode" (Customised operating mode):  
The pump uses the parameters set for  $\Delta H$  and minimum flow ( $Q_{\min3}$ ) respectively for the stop function. See fig. 52.

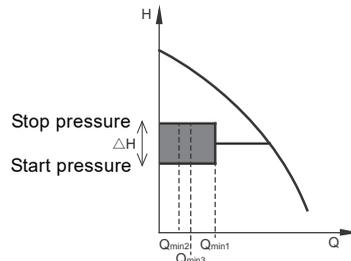


Fig. 52 Difference between start and stop pressures ( $\Delta H$ ) and minimum flow rate

In start-stop operation, the pressure varies between the start and stop pressures. See fig. 52.

In "User-defined mode" (Customised operating mode),  $\Delta H$  has been factory-set to 10 % of the actual setpoint.  $\Delta H$  can be set within the range from 5 to 30 % of actual setpoint.

The pump changes to start-stop operation if the flow becomes lower than the minimum flow.

The minimum flow is set in % of the nominal flow of the pump (see the pump nameplate).

In "User-defined mode" (Customised operating mode), the minimum flow has been factory-set to 10 % of nominal flow.

### Factory setting

See section 24. *Factory settings*.

### "Low-flow detection"

Low flow can be detected in two ways:

1. A built-in low-flow detection function which is active if none of the digital inputs are set for flow switch.
2. A flow switch connected to one of the digital inputs.

#### 1. Low-flow detection function:


The pump checks the flow regularly by reducing the speed for a short time. If there is no or only a small change in pressure, this means that there is low flow. The speed is increased until the stop pressure (actual setpoint +  $0.5 \times \Delta H$ ) is reached and the pump stops. When the pressure has fallen to the start pressure (actual setpoint -  $0.5 \times \Delta H$ ), the pump restarts.

- If the flow is higher than the set minimum flow, the pump returns to continuous operation at constant pressure.
  - If the flow is still lower than the set minimum flow ( $Q_{\min}$ ), the pump continues in start-stop operation until the flow is higher than the set minimum flow ( $Q_{\min}$ ). When the flow is higher than the set minimum flow rate ( $Q_{\min}$ ), the pump returns to continuous operation.
2. Flow switch:  
When the digital input is activated for more than 5 seconds because there is low flow, the speed is increased until the stop pressure (actual setpoint +  $0.5 \times \Delta H$ ) is reached, and the pump stops. When the pressure has fallen to start pressure, the pump restarts. If there is still no flow, the pump quickly reaches the stop pressure and stops. If there is flow, the pump continues operating according to the setpoint.


### Operating conditions for the low-flow stop function

You can only use the stop function if the system incorporates a pressure sensor, a non-return valve and a diaphragm tank.

! Always install the non-return valve before the pressure sensor. See figures 53 and 54.

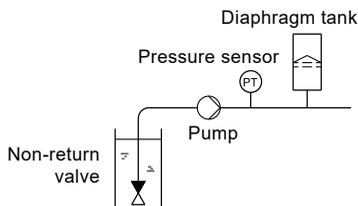

**Fig. 53** Position of the non-return valve and pressure sensor in system with suction lift operation

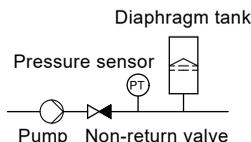

**Fig. 54** Position of the non-return valve and pressure sensor in a system with a positive inlet pressure

### "Set minimum flow"

Set the minimum flow ( $Q_{\min}$ ) in this display. This setting determines at which flow rate the system is to change from continuous operation at constant pressure to start-stop operation. The setting range is 5 to 30 % of rated flow.

### Factory setting

See section 24. *Factory settings*.

## "Diaphragm tank volume"

The stop function requires a diaphragm tank of a certain minimum size. Set the size of the installed tank in this display.

In order to reduce the number of start-stops per hour or to reduce the  $\Delta H$ , install a larger tank.

Install the tank immediately after the pump. The precharge pressure must be 0.7 x actual setpoint.

Recommended diaphragm tank size:

Rated flow rate of pump [m <sup>3</sup> /h]	Typical diaphragm tank size [litres]
0-6	8
7-24	18
25-40	50
41-70	120
71-100	180

### Factory setting

See section 24. *Factory settings*.

## 13.20 Stop at min. speed

This function stops the pump when consumption is low or not present. This variant of the stop function can be utilised, for example, in constant level applications, where a boost of pressure before stop is not optimal.

The function monitors the speed of the pump. When the PI-controller has forced speed to a minimum due to the feedback value, after a preset period of time, the pump will be stopped. The pump will remain stopped until the feedback value decreases and the PI-controller starts the pump again.

### "Enable stop at min. speed"

The selection enables the stop at min. speed function.

### "Delay"

The required amount of time the pump must be running at minimum speed before it is stopped.

### "Restart speed"

The speed of the pump, specified in percentage, at which the pump is set to start again (hysteresis). The restart speed must be set higher than the minimum speed of the pump.

## 13.21 Pipe filling function

Pump variant	Pipe filling function
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

This function is typically used in pressure-boosting applications and ensures a smooth startup of systems with for instance empty pipes.

Startup takes place in two phases. See fig. 55.

1. Filling phase.

The pipes are slowly filled with water. When the pressure sensor of the system detects that the pipes have been filled, phase two begins.

2. Pressure build-up phase.

The system pressure is increased until the setpoint is reached. The pressure build-up takes place over a pressure build-up time. If the setpoint is not reached within a given time, a warning or an alarm can be given, and the pumps can be stopped at the same time.

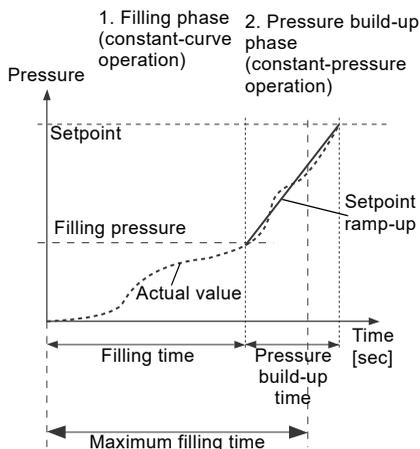


Fig. 55 Filling and pressure build-up phases

### Setting range

- "Filling speed".  
Fixed speed of the pump during the filling phase.
- "filling pressure".  
The pressure that the pump must reach before the maximum filling time.
- "max. filling time".  
The time in which the pump must reach the filling pressure.
- Max. time reaction.  
Reaction of the pump if the maximum filling time is exceeded:
  - warning
  - alarm (pump stops).
- Pressure build-up time.  
Ramp time from when the filling pressure is reached until the setpoint must be reached.



When you activate this function, the function always starts when the pump has been in operating mode "Stop" and is changed to "Normal".

### Factory setting

See section 24. *Factory settings*.

TM03 9037 3207

### 13.22 "Pulse flowmeter" (Pulse flowmeter setup)

Pump variant	"Pulse flowmeter" (Pulse flowmeter setup)
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

You can connect an external pulse flowmeter to one of the digital inputs in order to register the actual and accumulated flows. Based on this, you can also calculate the specific energy.

To enable a pulse flowmeter, set one of the digital-input functions to Accumulated flow and set the pumped volume per pulse. See section [13.9 Digital inputs](#).

#### Factory setting

See section [24. Factory settings](#).

### 13.23 Ramps

Pump variant	Ramps
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

The ramps determine how quickly the pump can accelerate and decelerate during start-stop or setpoint changes.

You can set the following:

- acceleration time, 0.1 to 300 seconds
- deceleration time, 0.1 to 300 seconds.

The times apply to the acceleration from 0 rpm to maximum (fixed) speed and the deceleration from maximum (fixed) speed to 0 rpm, respectively.

At short deceleration times, the deceleration of the pump may depend on load and inertia as there is no possibility of actively braking the pump.

If the power supply is switched off, the deceleration of the pump only depends on load and inertia.

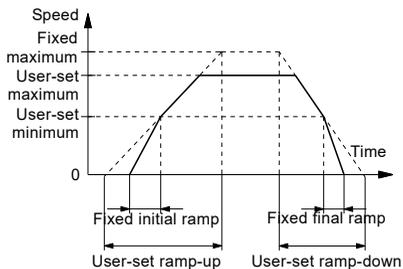


Fig. 56 Ramp-up and Ramp-down

#### Factory setting

See section [24. Factory settings](#).

### 13.24 Standstill heating

Pump variant	Standstill heating
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

You can use this function to avoid condensation in humid environments. When you set the function to Active and the pump is in operating mode Stop, a low AC voltage is applied to the motor windings. The voltage is not high enough to make the motor rotate but ensures that sufficient heat is generated to avoid condensation in the motor including the electronic parts in the drive.



Remember to remove the drain plugs and fit a cover over the motor.

#### Factory setting

See section [24. Factory settings](#).

### 13.25 Alarm handling

The alarm handling determines how the pump must react in case of a sensor failure.

Input	Alarm handling
"Analog input 1"	<b>Warning:</b> no change of operation
"Analog input 2"	<b>Stop:</b> an alarm is given, and the pump stops
"Analog input 3"	<b>Min:</b> an alarm is given, and the pump reduces speed to minimum
"Built-in Grundfos sensor"	<b>Max:</b> an alarm is given, and the pump increases speed to maximum
"Liqtec input"	<b>User-defined speed:</b> an alarm is given, and the pump runs at a speed set by the user

### 13.26 Motor bearing monitoring

You can set the motor bearing monitoring function to these values:

- Active
- Not active.

When the function is set to Active, a counter in the controller starts counting the mileage of the bearings.



The counter continues counting even if the function is changed to Not active, but a warning will not be given when it is time for replacement.

When the function is changed to Active again, the accumulated mileage is again used to calculate the replacement time.

### 13.27 "Service"

#### "Time to next service" (Motor bearing service)

This display shows when to replace the motor bearings. The controller monitors the operating pattern of the motor and calculates the period between bearing replacements.

Displayable values:

- "in 2 years"
- "in 1 year"
- "in 6 months"
- "in 3 months"
- "in 1 month"
- "in 1 week"
- "Now"

#### "Bearing replacements"

Indicates the number of bearing replacements that have been done during the lifetime of the motor.

#### "Bearings replaced" (Motor bearing maintenance)

When the bearing monitoring function is active, the controller gives a warning when the motor bearings are due to be replaced.

When you have replaced the motor bearings, press [Bearings replaced].

### 13.28 "Number" (Pump number)

Pump variant	"Number" (Pump number)
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

You can allocate a unique number to the pump. This makes it possible to distinguish between pumps in connection with GENibus communication.

#### Factory setting

See section [24. Factory settings](#).

### 13.29 "Radio communication" (Enable/disable radio comm.)

Pump variant	"Radio communication" (Enable/disable radio comm.)
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

You can set the radio communication to either enabled or disabled. You can use this function in areas where radio communication is not allowed.



IR communication remains active.

#### Factory setting

See section [24. Factory settings](#).

### 13.30 Language

Pump variant	Language
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

This menu is only available in the advanced control panel.

In this menu, you select the desired language. A number of languages is available.

#### Factory setting

See section [24. Factory settings](#).

### 13.31 "Date and time" (Set date and time)

Pump variant	"Date and time" (Set date and time)
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

The availability of this menu depends on the functional module fitted in the pump:

Function (terminal)	FM 200* (standard)	FM 300* (advanced)
"Date and time"	-	•

\* See section [19. Identification of functional module](#).

You can set date and time as well as how you want them to be viewed in the display:

- Select date format:  
YYYY-MM-DD  
DD-MM-YYYY  
MM-DD-YYYY.
- Select time format:  
HH:MM 24-hour clock  
HH:MM am/pm 12-hour clock.
- Set date
- Set time.

#### Factory setting

See section [24. Factory settings](#).

### 13.32 "Unit configuration" (Units)

Pump variant	"Unit configuration" (Units)
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

In this menu, you can select between SI and US units. The setting can made generally for all parameters or you can customise for each parameter.

#### Factory setting

See section [24. Factory settings](#).

### 13.33 "Buttons on product" (Enable/disable settings)

Pump variant	"Buttons on product" (Enable/disable settings)
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

In this display, you can disable the possibility of making settings for protective reasons.

#### Grundfos GO Remote

If you set the buttons to "Not active" the buttons on the standard control panel are disabled. If you set the buttons to "Not active" on pumps fitted with an advanced control panel, see below.

#### Advanced control panel

If you have disabled the settings, you can still use the buttons to navigate through the menus but you cannot make changes in the Settings menu.

When you have disabled the possibility to make settings, the  symbol appears in the display.

Advanced control panel:

To unlock the motor and allow settings, press  and  simultaneously for at least 5 seconds.



Standard control panel:

The  button always remains active but you can only unlock all other buttons on the motor with Grundfos GO Remote.

#### Factory setting

See section [24. Factory settings](#).

### 13.34 Delete history

Pump variant	Delete history
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

This menu is only available in the advanced control panel.

In this menu, you can delete the following historic data:

- Delete operating log.
- Delete energy consumption.

### 13.35 Define Home display

Pump variant	Define Home display
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

This menu is only available in the advanced control panel.

In this menu, you can set the Home display to show up to four user-defined parameters.

#### Factory setting

See section 24. [Factory settings](#).

### 13.36 Display settings

Pump variant	Display settings
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

This menu is only available in the advanced control panel.

In this menu, you can adjust the display brightness and set whether or not the display is to turn off if no buttons have been activated for a period of time.

#### Factory setting

See section 24. [Factory settings](#).

### 13.37 "Store settings" (Store actual settings)

Pump variant	"Store settings" (Store actual settings)
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

#### Grundfos GO Remote

In this menu, you can store the actual settings for later use in the same pump or in other pumps of the same type.

#### Advanced control panel

In this menu, you can store the actual settings for later use in the same pump.

### 13.38 "Recall settings" (Recall stored settings)

Pump variant	"Recall settings" (Recall stored settings)
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

#### Grundfos GO Remote

In this menu, you can recall stored settings from a number of previously stored settings that the pump then uses.

#### Advanced control panel

In this menu, you can recall the last stored settings that the pump then uses.

#### 13.38.1 "Undo"

Pump variant	"Undo"
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

This menu is only available in Grundfos GO Remote.

In this display, you can undo all settings that have been made with Grundfos GO Remote in the current communication session. Once you have recalled settings, you cannot undo.

### 13.39 "Pump name"

Pump variant	"Pump name"
CME	•
CRE, CRIE, CRNE, SPKE, MTRE	•

This menu is only available in Grundfos GO Remote.

In this display, you can give the pump a name. In this way, you can easily identify the pump when connecting with Grundfos GO Remote.

### 13.40 "Connection code"

Pump variant	"Connection code"
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

This menu is only available in Grundfos GO Remote. You can set a connection code to avoid having to press the connection button each time and to restrict remote access to the product.

#### Setting the code in the product using Grundfos GO Remote

1. Connect Grundfos GO Remote to the product.
2. In the product dashboard, select "Settings".
3. Choose "Connection code".
4. Enter the wanted code and press [OK].  
The code must be a character string (ASCII).  
You can always change the code. The old code is not needed.

#### Setting the code in Grundfos GO Remote

You can define a default connection code in Grundfos GO Remote so that it automatically attempts to connect to the selected product via this code.

When you select a product with the same connection code in Grundfos GO Remote, Grundfos GO Remote automatically connects to the product and you do not have to press the connection button on the module.

Define the default code in Grundfos GO Remote in this way:

1. In the main menu, under "General", select "Settings".
2. Choose "Remote".
3. Enter the connection code in the field "Preset connection code". The field now says "Connection code set".

You can always change the default connection code by pressing [Delete] and entering a new one.

If Grundfos GO Remote fails to connect and ask you to press the connection button on the product, it means that the product has no connection code or has a different connection code. In this case, you can only establish connection via the connection button.



After setting a connection code, switch off the product until the light in Grundfos Eye turns off before you can use the new connection code.

### 13.41 Run start-up guide

Pump variant	Run start-up guide
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

This menu is only available in the advanced control panel.

The startup guide automatically starts when you start the pump for the first time.

You can always run the startup guide later via this menu.

The startup guide guides you through the general settings of the pump.

- Language. See section [13.30 Language](#).
- Select date format.\*  
See section [13.31 "Date and time" \(Set date and time\)](#).
- Set date.\*  
See section [13.31 "Date and time" \(Set date and time\)](#).
- Select time format.\*  
See section [13.31 "Date and time" \(Set date and time\)](#).
- Set time.\*  
See section [13.31 "Date and time" \(Set date and time\)](#).
- Setting of pump "
  - Go to Home
  - Run with Constant curve/Run with Constant pressure.  
See section [13.5 "Control mode"](#).
  - Go to "Assisted pump setup".  
See section [13.45 Assisted pump setup](#).
  - Return to factory settings.
- \* Applies only for pumps fitted with advanced functional module, FM 300. For further information, see section [19. Identification of functional module](#).

### 13.42 Alarm log

This menu contains a list of logged alarms from the product. The log shows the name of the alarm, when the alarm occurred and when it was reset.

### 13.43 Warning log

This menu contains a list of logged warnings from the product. The log shows the name of the warning, when the warning occurred and when it was reset.

### 13.44 Assist

This menu consist of a number of different assist functions which are small guides that take you through the steps needed to set the pump.

### 13.45 Assisted pump setup

Pump variant	Assisted pump setup
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

This menu guides you through the following:

#### Setting of pump

- Selection of control mode. See page 29.
- Configuration of feedback sensors.
- Adjusting the setpoint. See page 28.
- Controller settings. See page 40.
- Summary of settings.

#### Example of how to use the Assisted pump setup for setting up the pump to constant pressure:

##### Grundfos GO Remote

1. Open the Assist menu.
2. Select Assisted pump setup.
3. Select control mode "Constant pressure" (Const. pressure).
4. Read the description for this control mode.
5. Select which analog input to use as sensor input.
6. Select sensor function according to where the sensor is installed in the system. See fig. 39 on page 34.
7. Select electrical input signal according to the sensor specifications.
8. Select measuring unit according to the sensor specifications.
9. Set the minimum and maximum sensor range values according to the sensor specifications.
10. Set the desired setpoint.
11. Set the gain and integral time of the controller. See section 13.13 "Controller" (Controller settings).
12. Type the desired pump name.
13. Check the summary of settings and confirm them.

### Advanced control panel

1. Open the Assist menu.
2. Select Assisted pump setup.
3. Select control mode Const. pressure.
4. Select which analog input to be used as sensor input.
5. Select the measured parameter which is to be controlled. See fig. 39 on page 34.
6. Select measuring unit according to the sensor specifications.
7. Set the minimum and maximum sensor range values according to the sensor specifications.
8. Select electrical input signal according to the sensor specifications.
9. Set the desired setpoint.
10. Set the gain and integral time of the controller. See section 13.13 "Controller" (Controller settings).
11. Check the summary of settings and confirm them by pressing [OK].

### 13.46 Setup, analog input

Pump variant	Setup, analog input
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

This menu is only available in the advanced control panel.

This menu guides you through the following:

#### Setup, analog input

- "Analog inputs" 1 to 3. See page 34.
- "Pt100/1000 input" 1 and 2. See page 35.
- "Adjusting the setpoint". See page 28.
- "Summary".

### 13.47 Setting of date and time

Pump variant	Setting of date and time
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

This menu is only available in the advanced control panel.

Whether this menu is available or not, depends on the functional module fitted in the pump:

Function (terminal)	FM 200* (standard)	FM 300* (advanced)
"Setting of date and time"	-	•

\* See section [19. Identification of functional module](#).

This menu guides you through the following:

- Select date format. See section [13.31 "Date and time" \(Set date and time\)](#).
- Set date. See section [13.31 "Date and time" \(Set date and time\)](#).
- Select time format. See section [13.31 "Date and time" \(Set date and time\)](#).
- Set time. See section [13.31 "Date and time" \(Set date and time\)](#).

### 13.48 "Multi-pump setup" (Setup of multi-pump system)

Pump variant	"Multi-pump setup" (Setup of multi-pump system)
CME	•
CRE, CRIE, CRNE, SPKE, MTRÉ	•

The multipump function enables the control of up to four pumps connected in parallel without the use of external controllers. The pumps in a multipump system communicate with each other via the wireless GENlair connection or the wired GENI connection.

You can set a multipump system via the master pump, i.e. the first selected pump.

If two or more pumps in the system are configured with a sensor, they can all function as master pumps and take over the master pump function if the other should fail. This provides additional redundancy in the multipump system.

The multipump functions are described in the following sections.

#### 13.48.1 "Alternating operation"

Alternating operation functions as a duty/standby operating mode and is possible with two pumps of the same size and type connected in parallel. The main purpose of the function is to ensure an even amount of running hours and to ensure that the standby pump starts if the duty pump stops due to an alarm.

Each pump requires a non-return valve in series with the pump.

You can choose between two alternating operating modes:

- "Alternating operation, time"  
Change from one pump to the other is based on time.
- "Alternating operation, energy"  
Change from one pump to the other is based on energy consumption.

If the duty pump fails, the other pump starts. XX11B: New sections

#### 13.48.2 "Backup operation"

Backup operation is possible with two pumps of the same size and type connected in parallel. Each pump requires a non-return valve in series with the pump.

One pump is operating continuously. The backup pump is operated for a short time each day to prevent seizing up. If the duty pump stops due to a fault, the backup pump starts.

### 13.48.3 "Cascade operation"

Cascade operation is only available in CRE and CME pumps on request. Contact Grundfos for further information.

Cascade operation is possible with up to four pumps of the same size and type connected in parallel. Each pump requires a non-return valve in series with the pump.

Up to 4 pumps can be operating continuously depending on consumption. Pumps will be cut in and cut out to ensure a constant controlled value, for example, constant pressure, and to ensure a high system efficiency and an even amount of running hours.

### 13.48.4 "Alternating operation, time"

The interval of alternation between the two pumps. The function is only available in alternating operation. See section [13.48.1 "Alternating operation"](#).

### 13.48.5 "Time for pump changeover"

Time of day for a pump changeover to take place. The function is only available in alternating operation. See section [13.48.1 "Alternating operation"](#).

### 13.48.6 "Sensor to be used"

Defines the sensor to be used for controlling the pump system. If a sensor is placed in a way that enables it to measure the output from all pumps in the system, for example, in the manifold, then select "Master pump sensor".

If a sensor is placed on or across the individual pumps, for example, installed behind non-return valves and not able to measure the output from all pumps, then select "Running pump sensor".

### 13.48.7 Setting up a multipump system

You can set a multipump system in the following ways:

- [Grundfos GO Remote and wireless pump connection](#)
- [Grundfos GO Remote and wired pump connection](#)
- [Advanced control panel and wireless pump connection](#)
- [Advanced control panel and wired pump connection](#)

See step-by-step descriptions below.

### Grundfos GO Remote and wireless pump connection

1. Power on the pumps.
2. Establish contact to one of the pumps with Grundfos GO Remote.
3. Set the needed analog and digital inputs via Grundfos GO Remote according to the connected equipment and the required functionality. See section [13.45 Assisted pump setup](#).
4. Assign a pump name to the pump using Grundfos GO Remote. See section [13.39 "Pump name"](#).
5. Disconnect Grundfos GO Remote from the pump.
6. Establish contact to the next pump.
7. Set the needed analog and digital inputs via Grundfos GO Remote according to the connected equipment and the required functionality. See section [13.45 Assisted pump setup](#).
8. Assign a pump name to the pump using Grundfos GO Remote. See section [13.39 "Pump name"](#).
9. Repeat steps 5 to 8 if more pumps are installed in the system.
10. Select the "Assist" menu and choose Setup of multi-pump system.
11. Select the desired multipump function. See sections [13.48.1 "Alternating operation"](#), [13.48.2 "Backup operation"](#) and [13.48.3 "Cascade operation"](#).
12. Press [>] to continue.
13. Set the time for a pump changeover i.e. the time at which the alternation between the two pumps is to take place.



This step applies only if you have selected "Alternating operation, time" and if the motors are fitted with FM 300.

14. Press [>] to continue.
15. Select "Radio" as the communication method to be used between the pumps.
16. Press [>] to continue.
17. Select pump 2.
18. Select the pump from the list.
  - If applicable, select pump 3 (only in cascade)
  - If applicable, select pump 4 (only in cascade)



Use the [OK] or  button to identify the pump.

19. Press [>] to continue.
20. Confirm the setting by pressing [Send].
21. Press [Finish] in the "Setup complete" dialog box.
22. Wait for the green indicator light in the middle of Grundfos Eye to light up.

## Grundfos GO Remote and wired pump connection

1. Connect the pumps with each other with a 3-core screened cable between the GENIbus terminals A, Y, B.
2. Power on the pumps.
3. Establish contact to one of the pumps with Grundfos GO Remote.
4. Set the needed analog and digital inputs via Grundfos GO Remote according to the connected equipment and the required functionality. See section [13.45 Assisted pump setup](#).
5. Assign a pump name to the pump using Grundfos GO Remote. See section [13.39 "Pump name"](#).
6. Assign pump number 1 to the pump. See section [13.28 "Number" \(Pump number\)](#).
7. Disconnect Grundfos GO Remote from the pump.
8. Establish contact to the next pump.
9. Set the needed analog and digital inputs via Grundfos GO Remote according to the connected equipment and the required functionality. See section [13.45 Assisted pump setup](#).
10. Assign a pump name to the pump using Grundfos GO Remote. See section [13.39 "Pump name"](#).
11. Repeat steps 7 to 10 if more pumps are installed in the system.
12. Select the "Assist" menu and choose Setup of multi-pump system.
13. Select the desired multipump function. See sections [13.48.1 "Alternating operation"](#), [13.48.2 "Backup operation"](#) and [13.48.3 "Cascade operation"](#).
14. Press [>] to continue.
15. Set the time for a pump changeover i.e. the time at which the alternation between the two pumps is to take place.



This step applies only if you have selected "Alternating operation, time" and if the motors are fitted with FM 300.

16. Press [>] to continue.
17. Select "BUS cable" as the communication method to be used between the two pumps.
18. Press [>] to continue.
19. Press "Select pump 2".
20. Select the pump from the list.



Use the [OK] or  button to identify the pump.

21. Press [>] to continue.
22. Confirm the setting by pressing [Send].
23. Repeat steps 19 to 21 if more than two pumps are installed in the system. See section [13.48.3 "Cascade operation"](#).
24. Press [Finish] in the "Setup complete" dialog box.
25. Wait for the green indicator light in the middle of Grundfos Eye to light up.

## Advanced control panel and wireless pump connection

1. Power on the pumps.
  2. On the pumps, set the analog and digital inputs according to the connected equipment and the required functionality. See section [13.45 Assisted pump setup](#).
  3. Select the Assist menu on one of the pumps, and choose Setup of multi-pump system.
  4. Press [>] to continue.
  5. Select Wireless as the communication method to be used between the pumps.
  6. Press [>] to continue.
  7. Select the desired multipump function. See sections [13.48.1 "Alternating operation"](#), [13.48.2 "Backup operation"](#) and [13.48.3 "Cascade operation"](#) above.
  8. Press [>] three times to continue.
  9. Press [OK] to search for other pumps. The green indicator light in the middle of Grundfos Eye flashes on the other pumps.
  10. Press the connect button on the pumps which are to be added to the multipump system.
  11. Press [>] to continue.
  12. Set the time for a pump changeover i.e. the time at which the alternation between the two pumps is to take place.
-  This step applies only if you have selected "Alternating operation, time" and if the motors are fitted with FM 300.
13. Press [>] to continue.
  14. Press [OK] to confirm the setting. The multipump-function icons appear in the bottom of the control panels.

### Advanced control panel and wired pump connection

1. Connect the pumps with each other with a 3-core screened cable between the GENIbus terminals A, Y, B.
2. On the pumps, set the needed analog and digital inputs according to the connected equipment and the required functionality. See section [13.45 Assisted pump setup](#).
3. Assign pump number 1 to the first pump. See section [13.28 "Number" \(Pump number\)](#).
4. Assign pump number 2 to the next pump. See section [13.28 "Number" \(Pump number\)](#).
5. Assign pump number 3 and 4 if more than two pumps are installed in the system. See sections [13.48.3 "Cascade operation"](#) and [13.28 "Number" \(Pump number\)](#).
6. Select the Assist menu on one of the pumps and choose Setup of multi-pump system.
7. Press [>] to continue.
8. Select Wired GENIbus as the communication method to be used between the two pumps.
9. Press [>] twice to continue.
10. Select the desired multipump function. See sections [13.48.1 "Alternating operation"](#), [13.48.2 "Backup operation"](#) and [13.48.3 "Cascade operation"](#) above.
11. Press [>] to continue.
12. Press [OK] to search for other pumps.
13. Select the pump from the list.
14. Press [>] to continue.
15. Set the time for a pump changeover i.e. the time at which the alternation between the two pumps is to take place.



This step applies only if you have selected "Alternating operation, time" and if the motors are fitted with FM 300.

16. Press [>] to continue.
17. Press [OK] to confirm the setting.  
The multipump function icons appear in the bottom of the control panels.

### Disabling a multipump system via Grundfos GO Remote

1. Select the "Assist" menu.
2. Select Setup of multi-pump system.
3. Select "Disable".
4. Press [>] to continue.
5. Confirm the setting by pressing [Send].
6. Press [Finish].

### Disabling a multipump system via the advanced control panel

1. Select the Assist menu.
2. Select Setup of multi-pump system.
3. Press [>] to continue.
4. Confirm No multi-pump function by pressing [OK].
5. Press [>] to continue.
6. Press [OK] to confirm.

### 13.49 Description of control mode

This menu is only available in the advanced control panel.

This menu describes each of the possible control modes. See also section [13.5 "Control mode"](#).

### 13.50 Assisted fault advice

This menu gives guidance and corrective actions in case of pump failures.

## 14. Bus signal

The pump supports serial communication via an RS-485 input. The communication is carried out according to the Grundfos GENIbus protocol and enables connection to other pumps as well as a building management system or another external control system.

Via a bus signal, you can remote-set pump operating parameters, such as setpoint and operating mode. At the same time, the pump can, via the bus, provide status information about important parameters, such as actual value of control parameter, input power and fault indications.

Contact Grundfos for further information.



If you use a bus signal, the number of settings available via R100 or Grundfos GO Remote are reduced.

## 15. Priority of settings

You can always set the pump to stop by pressing  on the pump control panel. When the pump is not in Stop mode, you can always set the pump to stop by continuously pressing . Furthermore, you can set the pump to maximum speed by continuously pressing . You can always set the pump to operation at maximum speed or to stop with Grundfos GO Remote.

If two or more functions are enabled at the same time, the pump operates according to the function with the highest priority.

**Example:** If you have set the pump to maximum speed via the digital input, the pump control panel or Grundfos GO Remote can only set the pump to Manual or Stop.


The priority of the settings appears from the table below:

Priority	Start-stop button	Grundfos GO Remote or control panel on pump	Digital input	Bus communication
1	Stop			
2		Stop*		
3		Manual		
4		"Max. speed"* / "User-defined speed"		
5			Stop	
6			"User-defined speed"	
7				Stop
8				"Max. speed"
9				"Min. speed"
10				"Start"
11			"Max. speed"	
12		"Min. speed"		
13			"Min. speed"	
14			"Start"	
15		"Start"		

\* "Stop" and "Max. speed" settings made with Grundfos GO Remote or on the motor control panel can be overruled by another operating-mode command sent from a bus, for example "Start". If the bus communication is interrupted, the motor resumes its previous operating mode, for example "Stop", selected with Grundfos GO Remote or on the motor control panel.

## 16. Grundfos Eye

The operating condition of the pump is indicated by Grundfos Eye on the control panel. See fig. 57, A.

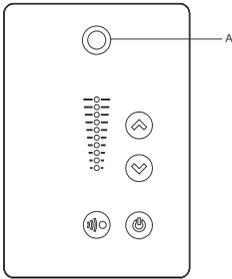

TM05 5993 4312

Fig. 57 Grundfos Eye


Grundfos Eye	Indication	Description
	No lights are on.	The power is off. The pump is not running.
	The two opposite green indicator lights are rotating in the direction of rotation of the pump when seen from the non-drive end.	The power is on. The pump is running.
	The two opposite green indicator lights are permanently on.	The power is on. The pump is not running.
	One yellow indicator light is rotating in the direction of rotation of the pump when seen from the non-drive end.	Warning. The pump is running.
	One yellow indicator light is permanently on.	Warning. The pump is stopped.
	The two opposite red indicator lights flash simultaneously.	Alarm. The pump is stopped.
	The green indicator light in the middle flashes quickly four times.	This is a feedback signal which the pump gives in order to ensure identification of itself.
	The green indicator light in the middle flashes continuously.	Grundfos GO Remote or another pump is trying to communicate with the pump. Press  on the pump control panel to allow communication.
	The green indicator light in the middle is permanently on.	Remote control with Grundfos GO Remote via radio. The pump is communicating with Grundfos GO Remote via radio connection.
	The green indicator light in the middle flashes quickly while Grundfos GO Remote is exchanging data with the pump. It takes a few seconds.	Remote control with Grundfos GO Remote via infrared light. The pump is receiving data from Grundfos GO Remote via infrared communication.

## 17. Signal relays

The pump has two outputs for potential-free signals via two internal relays.

You can set the signal outputs to Operation, Pump running, Ready, Alarm and Warning.

The functions of the two signal relays appear from the table below:

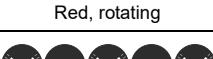Description	Grundfos Eye	Contact position of signal relays when activated					Operating mode
		Operation	Pump running	Ready	Alarm	Warning	
The power is off.	 Off						-
The pump runs in Normal mode.	 Green, rotating						Normal, Min. or Max.
The pump runs in Manual mode.	 Green, rotating						Manual
The pump is in operating mode Stop.	 Green, steady						Stop
Warning, but the pump is running.	 Yellow, rotating						Normal, Min. or Max.
Warning, but the pump runs in Manual mode.	 Yellow, rotating						Manual
Warning, but the pump was stopped via a Stop command.	 Yellow, steady						Stop
Alarm, but the pump is running.	 Red, rotating						Normal, Min. or Max.
Alarm, but the pump runs in Manual mode.	 Red, rotating						Manual
The pump is stopped due to an alarm.	 Red, flashing						Stop
The pump is stopped due to Low-flow stop function.	 Green, steady						Normal

## 18. Installing a communication interface module

### DANGER

#### Electric shock



- Death or serious personal injury
- Switch off the power supply to the motor and to the signal relays. Wait at least 5 minutes before starting any work on the motor. Make sure that the power supply cannot be accidentally switched on.

Always use an antistatic service kit when handling electronic components. This prevents static electricity from damaging the components.



When unprotected, place the component on the antistatic cloth.

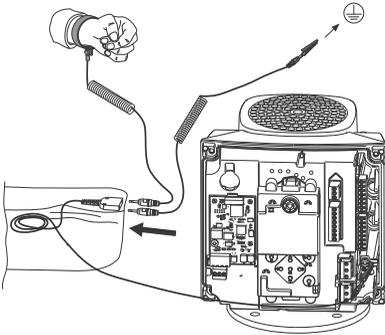


Fig. 58 Antistatic service kit

TM06 4462 2315

1. Loosen the four screws (fig. 59, A) and remove the terminal box cover (fig. 59, B).

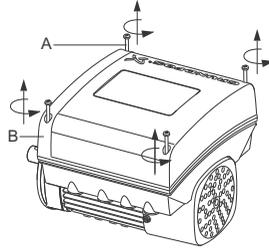


Fig. 59 Removing the terminal box cover

TM06 4081 1515

2. Remove the CIM cover (fig. 60, A) by pressing the locking tab (fig. 60, B) and lifting the end of the cover (fig. 60, C). Then lift the cover off the hooks (fig. 60, D).

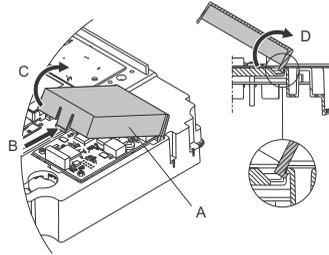


Fig. 60 Removing the CIM cover

TM06 4084 1515

3. Remove the securing screw (fig. 61, A).


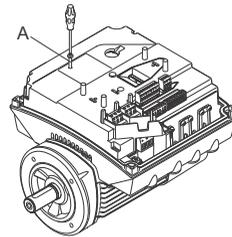


Fig. 61 Removing the securing screw


TM06 4082 1515

- Fit the CIM module by aligning it with the three plastic holders (fig. 62, A) and the connecting plug (fig. 62, B). Press home the module using your fingers.

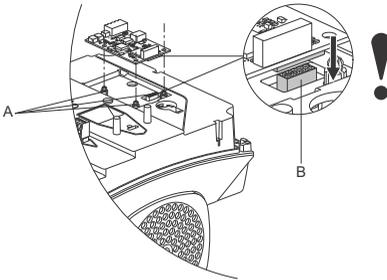


**Fig. 62** Fitting the CIM module

- Fit and tighten securing screw (fig. 61, A) to 1.3 Nm.
- Make the electrical connections to the CIM module as described in the instructions delivered with the module.
- Connect the cable screens of the bus cables to earth via one of the earth clamps (fig. 63, A).

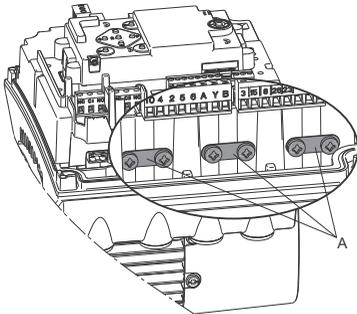


**Fig. 63** Connecting the cable screens to earth

- Route the wires for the CIM module. See the example in fig. 64.

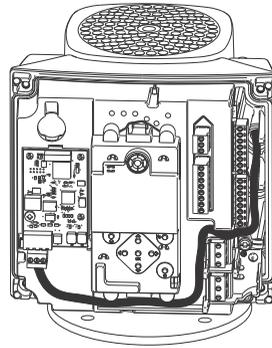

**Fig. 64** Example of wire routing

- Fit the CIM cover.
- If the CIM module is supplied with an FCC label, then place this on the terminal box. See fig. 65.

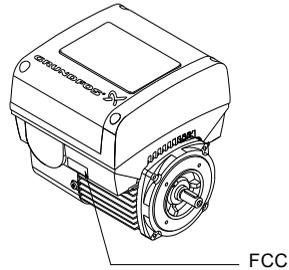

**Fig. 65** FCC label

- Fit the terminal box cover (fig. 59, B) and cross-tighten the four mounting screws (fig. 59, A) to 6 Nm.



Make sure that the terminal box cover is aligned with the control panel. See section 21. *Changing the position of the control panel.*

TM06 4083 1515

TM06 4085 1515

TM06 4195 1615

TM05 7028 0413

## 19. Identification of functional module

You can identify the fitted module in one of the following ways:

### Grundfos GO Remote


You can identify the functional module in the "Fitted modules" menu under "Status".

### Pump display

For pumps fitted with the advanced control panel, you can identify the functional module in the Fitted modules menu under Status.

### Motor nameplate

You can identify the fitted module on the motor nameplate. See fig. 66.

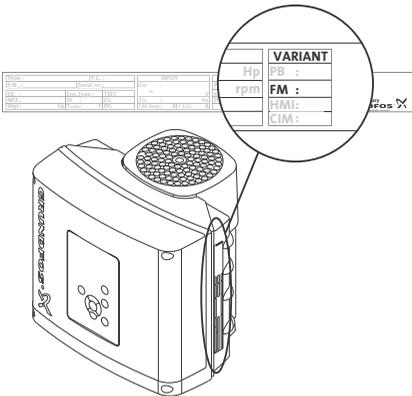

TM06 1889 3314

Fig. 66 Identification of functional module

Variant	Description
FM 200	Standard functional module
FM 300	Advanced functional module

## 20. Identification of control panel

You can identify the fitted module in one of the following ways:

### Grundfos GO Remote


You can identify the control panel in the "Fitted modules" menu under "Status".

### Pump display

For pumps fitted with the advanced control panel, you can identify the control panel in the Fitted modules menu under Status.

### Motor nameplate

You can identify the fitted control panel on the motor nameplate. See fig. 67.

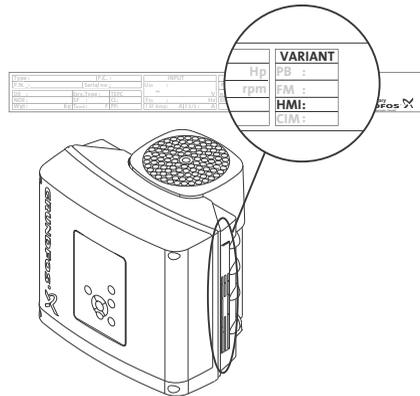

TM06 4013 1415

Fig. 67 Identification of control panel

Variant	Description
HMI 200	Standard control panel
HMI 300	Advanced control panel

## 21. Changing the position of the control panel

### DANGER

#### Electric shock



- Death or serious personal injury
- Switch off the power supply to the motor and to the signal relays. Wait at least 5 minutes before starting any work on the motor. Make sure that the power supply cannot be accidentally switched on.

You can turn the control panel 180°. Follow the instructions below.

1. Loosen the four screws (TX25) of the terminal box cover.

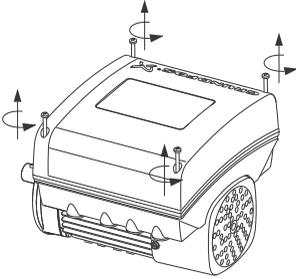


Fig. 68 Loosening the screws

2. Remove the terminal box cover.

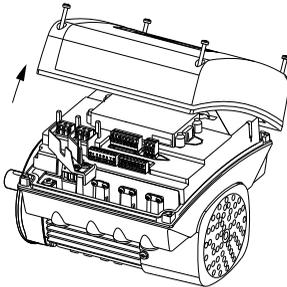


Fig. 69 Removing the terminal box cover

3. Press and hold in the two locking tabs (A) while gently lifting the plastic cover (B).

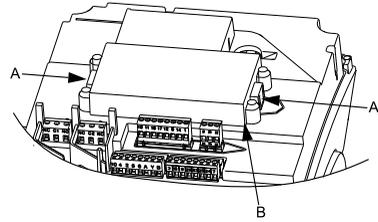


Fig. 70 Lifting the plastic cover

4. Turn the plastic cover 180°.



Do not twist the cable more than 90°.

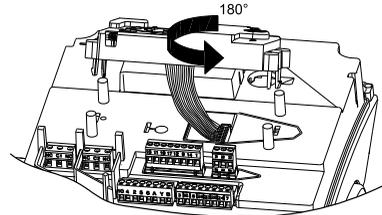


Fig. 71 Turning the plastic cover

5. Position the plastic cover correctly on the four rubber pins (C). Make sure that the locking tabs (A) are placed correctly.

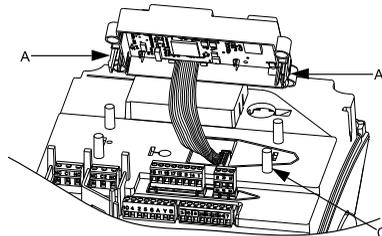


Fig. 72 Positioning the plastic cover

6. Fit the terminal box cover, and make sure that it is also turned 180° so that the buttons on the control panel are aligned with the buttons on the plastic cover.

7. Tighten the four screws (TX25) with 5 Nm.

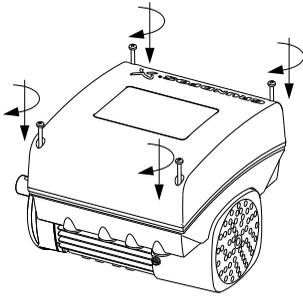


Fig. 73 Fitting the terminal box cover

TM05 5356 3612

## 23. Cleaning the product

### WARNING

#### Electric shock



- Death or serious personal injury
- Switch off the power supply to the motor and to the signal relays. Check that the terminal box cover is intact before spraying water on the product.

In order to avoid condensation in the motor, let the motor cool down before spraying it with cold water.

## 22. Servicing the product

### DANGER

#### Electric shock



- Death or serious personal injury
- Switch off the power supply to the motor and to the signal relays. Wait at least 5 minutes before starting any work on the motor. Make sure that the power supply cannot be accidentally switched on.

### DANGER

#### Magnetic field



- Death or serious personal injury
- Do not handle the motor or rotor if you have a pacemaker.

### 22.1 Motor

If service is needed on the product, please contact Grundfos Service.

### 22.2 Pump

Service documentation is available in Grundfos Product Center (<http://product-selection.grundfos.com/>).

If you have any questions, please contact the nearest Grundfos company or service workshop.

## 24. Factory settings

- Function is enabled.
- Function is disabled.
- Function is not available.

Settings	CRE, CRIE, CRNE, SPKE, MTRÉ			Function description on page
	With factory-fitted sensor	Without factory-fitted sensor	CME	
Setpoint	75 % of sensor range	75 % speed	75 % speed	28
Operating mode	Normal	Normal	Normal	28
Control mode	"Constant pressure"	"Constant curve"	"Constant curve"	29
Pipe filling function	Not active	Not active	Not active	47
"Buttons on product"	Active	Active	Active	50
"Stop function" (Low-flow stop function)	Not active	Not active	Not active	45
"Controller" (Controller settings)	●	●	●	
"Ti"	0.5	0.5	0.5	40
"Kp"	0.5	0.5	0.5	
Operating range	25-100 %	25-100 %	25-100 %	41
Ramps				
Ramp-up	1 second	1 second	1 second	48
Ramp-down	3 seconds	3 seconds	3 seconds	
"Number" (Pump number)	-	-	-	49
"Radio communication"	Active	Active	Active	49
"Analog input 1"	4-20 mA	Not active	Not active	
"Analog input 2"	Not active	Not active	Not active	34
"Analog input 3" <sup>1)</sup>	Not active	Not active	- <sup>1)</sup>	
"Pt100/1000 input 1" <sup>1)</sup>	Not active	Not active	- <sup>1)</sup>	
"Pt100/1000 input 2" <sup>1)</sup>	Not active	Not active	- <sup>1)</sup>	35
"Digital input 1"	External stop	External stop	External stop	
"Digital input 2" <sup>1)</sup>	Not active	Not active	- <sup>1)</sup>	36
"Digital in/output 3"	Not active	Not active	Not active	
"Digital in/output 4" <sup>1)</sup>	Not active	Not active	- <sup>1)</sup>	37
"Pulse flowmeter"	○	○	○	48
Predefined setpoints	0 bar	0 %	0 %	43
Analog output <sup>1)</sup>	"Speed"	"Speed"	- <sup>1)</sup>	39
External setpoint function	Not active	Not active	Not active	42
"Signal relay 1"	"Alarm"	"Alarm"	"Alarm"	
"Signal relay 2"	"Running"	"Running"	"Running"	38
Limit 1 exceeded	Not active	Not active	Not active	
Limit 2 exceeded	Not active	Not active	Not active	44

Settings	CRE, CRIE, CRNE, SPKE, MTRÉ			Function description on page
	With factory-fitted sensor	Without factory-fitted sensor	CME	
"LiqTec" <sup>1)</sup>	Not active	Not active	- <sup>1)</sup>	
"Detection delay time" <sup>1)</sup>	10 seconds	10 seconds	- <sup>1)</sup>	<a href="#">45</a>
Standstill heating	Not active	Not active	Not active	<a href="#">48</a>
Motor bearing monitoring	Not active	Not active	Not active	<a href="#">48</a>
"Pump name"	-	-	-	<a href="#">51</a>
"Connection code"	-	-	-	<a href="#">52</a>
"Unit configuration"	SI	SI	SI	<a href="#">50</a>

<sup>1)</sup> Only available if an advanced functional module, type FM 300, is fitted.

## 25. Megging

Do not meg an installation incorporating MGE motors, as the built-in electronics may be damaged.

## 26. Technical data, single-phase motors

### 26.1 Supply voltage

- 1 x 200-240 V - 10 %/+ 10 %, 50/60 Hz, PE.

Check that the supply voltage and frequency correspond to the values stated on the nameplate.

#### Recommended fuse size

Motor size [kW]	Min. [A]	Max. [A]
0.25 - 0.75	6	10
1.1 - 1.5	10	16

You can use standard as well as quick-blow or slow-blow fuses.

### 26.2 Leakage current

Earth leakage current less than 3.5 mA, AC.

Earth leakage current less than 10 mA, DC.

The leakage currents are measured in accordance with EN 61800-5-1:2007.

## 27. Technical data, three-phase motors

### 27.1 Supply voltage

Check that the supply voltage and frequency correspond to the values stated on the nameplate.

#### Recommended fuse size

- 3 x 380-500 V - 10 %/+ 10 %, 50/60 Hz, PE.

Motor size [kW]	Min. [A]	Max. [A]
0.25 - 1.1	6	6
1.5	6	10
2.2	6	16
3	10	16
4	13	16
5.5	16	32
7.5	20	32
11	32	32

- 3 x 200-240 V - 10 %/+ 10 %, 50/60 Hz, PE.

Motor size [kW]	Min. [A]	Max. [A]
1.1	10	20
1.5	10	20
2.2	13	35
3	16	35
4	25	35
5.5	32	35

Standard as well as quick-blow or slow-blow fuses may be used.

## 27.2 Leakage current (AC)

Speed [min <sup>-1</sup> ]	Power [kW]	Mains voltage [V]	Leakage current [mA]
1400-2000 1450-2200	0.25 - 1.5	≤ 400	< 3.5
		> 400	< 5
	2.2 - 4	≤ 400	< 3.5
		> 400	< 3.5
	5.5 - 7.5	≤ 400	< 3.5
		> 400	< 5
2900-4000	0.25 - 2.2	≤ 400	< 3.5
		> 400	< 5
	3 - 5.5	≤ 400	< 3.5
		> 400	< 3.5
	7.5 - 11	≤ 400	< 3.5
		> 400	< 5
4000-5900	0.25 - 2.2	≤ 400	< 3.5
		> 400	< 5
	3 - 5.5	≤ 400	< 3.5
		> 400	< 3.5
	7.5 - 11	≤ 400	< 3.5
		> 400	< 5

The leakage currents are measured without any load on the shaft and in accordance with EN 61800-5-1:2007.

## 28. Inputs/outputs

### Earth reference

All voltages refer to earth. All currents return to earth.

### Absolute maximum voltage and current limits

Exceeding the following electrical limits may result in severely reduced operating reliability and motor life:

Relay 1:

Maximum contact load: 250 VAC, 2 A or 30 VDC, 2 A.

Relay 2:

Maximum contact load: 30 VDC, 2 A.

GENI terminals: -5.5 to 9.0 VDC or less than 25 mADC.

Other input/output terminals: -0.5 to 26 VDC or less than 15 mADC.

### Digital inputs, DI

Internal pull-up current greater than 10 mA at  $V_i$  equal 0 VDC.

Internal pull-up to 5 VDC (currentless for  $V_i$  greater than 5 VDC).

Certain low logic level:  $V_i$  less than 1.5 VDC.

Certain high logic level:  $V_i$  greater than 3.0 VDC.

Hysteresis: No.

Screened cable: 0.5 - 1.5 mm<sup>2</sup>, 28-16 AWG.

Maximum cable length: 500 m.

### Open-collector digital outputs, OC

Current sinking capability: 75 mADC, no current sourcing.

Load types: Resistive or/and inductive.

Low-state output voltage at 75 mADC: maximum 1.2 VDC.

Low-state output voltage at 10 mADC: maximum 0.6 VDC.

Overcurrent protection: Yes.

Screened cable: 0.5 - 1.5 mm<sup>2</sup>, 28-16 AWG.

Maximum cable length: 500 m.

**Analog inputs, AI**

Voltage signal ranges:

- 0.5 - 3.5 VDC, AL AU.
- 0-5 VDC, AU.
- 0-10 VDC, AU.

Voltage signal:  $R_i$  greater than 100 k $\Omega$  at 25 °C.

Leak currents may occur at high operating temperatures. Keep the source impedance low.

Current signal ranges:

- 0-20 mADC, AU.
- 4-20 mADC, AL AU.

Current signal:  $R_i$  is equal 292  $\Omega$ .

Current overload protection: Yes. Change to voltage signal.

Measurement tolerance: - 0/+ 3 % of full scale (maximum-point coverage).

Screened cable: 0.5 - 1.5 mm<sup>2</sup>, 28-16 AWG.

Maximum cable length: 500 m excluding potentiometer.

Potentiometer connected to +5 V, GND, any AI:  
Use maximum 10 k $\Omega$ .

Maximum cable length: 100 m.

**Analog output, AO**

Current sourcing capability only.

Voltage signal:

- Range: 0-10 VDC.
- Minimum load between AO and GND: 1 k $\Omega$ .
- Short-circuit protection: Yes.

Current signal:

- Ranges: 0-20 and 4-20 mADC.
- Maximum load between AO and GND: 500  $\Omega$ .
- Open-circuit protection: Yes.

Tolerance: - 0/+ 4 % of full scale (maximum-point coverage).

Screened cable: 0.5 - 1.5 mm<sup>2</sup>, 28-16 AWG.

Maximum cable length: 500 m.

**Pt100/1000 inputs, Pt**

Temperature range:

- Minimum: -30 °C. 88  $\Omega$  / 882  $\Omega$ .
- Maximum: 180 °C. 168  $\Omega$  / 1685  $\Omega$ .

Measurement tolerance:  $\pm$  1.5 °C.

Measurement resolution: less than 0.3 °C.

Automatic range detection, Pt100 or Pt1000: Yes.

Sensor fault alarm: Yes.

Screened cable: 0.5 - 1.5 mm<sup>2</sup>, 28-16 AWG.

Use Pt100 for short wires.

Use Pt1000 for long wires.

**LiqTec sensor inputs**

Use Grundfos LiqTec sensor only.

Screened cable: 0.5 - 1.5 mm<sup>2</sup>, 28-16 AWG.

**Grundfos Digital Sensor input and output, GDS**

Use Grundfos Digital Sensor only.

**Power supplies****+5 V:**

- Output voltage: 5 VDC - 5 %/+ 5 %.
- Maximum current: 50 mADC (sourcing only).
- Overload protection: Yes.

**+24 V:**

- Output voltage: 24 VDC - 5 %/+ 5 %.
- Maximum current: 60 mADC (sourcing only).
- Overload protection: Yes.

**Digital outputs, relays**

Potential-free changeover contacts.

Minimum contact load when in use: 5 VDC, 10 mA.

Screened cable: 0.5 - 2.5 mm<sup>2</sup>, 28-12 AWG.

Maximum cable length: 500 m.

**Bus input**

Grundfos GENiBus protocol, RS-485.

Screened 3-core cable: 0.5 - 1.5 mm<sup>2</sup>, 28-16 AWG.

Maximum cable length: 500 m.

## 29. Other technical data

### EMC (electromagnetic compatibility)

Standard used: EN 61800-3.

The table below shows the emission category of the motor.

C1 fulfils the requirements for residential areas.

**Note:** When connected to a public network, 11 kW motors do not comply with the partial weighted harmonic distortion (PWHd) requirements of EN 61000-3-12. If required by the distribution network operator, compliance can be obtained in the following way:

The impedance of the mains cables between the motor and the point of common coupling (PCC) must be equivalent to the impedance of a 50 m cable with a cross-section of 0.5 mm.

C3 fulfils the requirements for industrial areas.

**Note:** When the motors are installed in residential areas, supplementary measures may be required as the motors may cause radio interference.

Motor [kW]	Emission category	
	1450-2000 min <sup>-1</sup>	2900-4000 min <sup>-1</sup> 4000-5900 min <sup>-1</sup>
0.25	C1	C1
0.37	C1	C1
0.55	C1	C1
0.75	C1	C1
1.1	C1	C1
1.5	C1	C1
2.2	C1	C1
3	C1	C1
4	C1	C1
5.5	C3/C1*	C1
7.5	C3/C1*	C3/C1*
11	-	C3/C1*

\* C1, if equipped with an external Grundfos EMC filter.

Immunity: The motor fulfils the requirements for industrial areas.

Contact Grundfos for further information.

### Enclosure class

Standard: IP55 (IEC 34-5).

Optional: IP66 (IEC 34-5).

### Insulation class

F (IEC 85).

### Standby power consumption

5-10 W.

### Cable entries

Motor [kW]	Number and size of cable entries	
	2900-4000 min <sup>-1</sup>	4000-5900 min <sup>-1</sup>
0.25 - 1.5	4xM20	4xM20
2.2	4xM20	4xM20
3-4	1xM25 + 4xM20	1xM25 + 4xM20
5.5	1xM25 + 4xM20	1xM25 + 4xM20
7.5 - 11	1xM32 + 5xM20	1xM32 + 5xM20

### Cable glands delivered with the pump

Motor [kW]	Quantity	Thread size	Cable diameter [mm]
0.25 - 2.2	2	M20 x 1.5	5
	1		7-14
3 - 5.5	4	M20 x 1.5	5
	1	M25 x 1.5	9-18
7.5 - 11	4	M20 x 1.5	5
	1	M32 x 1.5	14-25

### Torques

Terminal	Thread size	Maximum torque [Nm]
L1, L2, L3, L, N	M4	1.8
NC, C1, C2, NO	M2.5	0.5
1-26 and A, Y, B	M2	0.5

## 29.1 Sound pressure level

Motor [kW]	Maximum speed stated on nameplate [min <sup>-1</sup> ]	Speed [min <sup>-1</sup> ]	Sound pressure level ISO 3743 [dB(A)]	
			1-phase motors	3-phase motors
0.25 - 0.75	2000	1500	37	37
		2000	43	43
	4000	3000	50	50
		4000	60	60
	5900	4000	58	58
		5900	68	68
1.1	2000	1500		37
		2000		43
	4000	3000	50	50
		4000	60	60
	5900	4000	58	58
		5900	68	68
1.5	2000	1500		42
		2000		47
	4000	3000	57	57
		4000	64	64
	5900	4000	58	58
		5900	68	68
2.2	2000	1500		48
		2000		55
	4000	3000		57
		4000		64
	5900	4000		58
		5900		68
3	2000	1500		48
		2000		55
	4000	3000		60
		4000		69
	5900	4000		64
		5900		74
4	2000	1500		48
		2000		55
	4000	3000		61
		4000		69
	5900	4000		64
		5900		74

Motor [kW]	Maximum speed stated on nameplate [min <sup>-1</sup> ]	Speed [min <sup>-1</sup> ]	Sound pressure level ISO 3743 [dB(A)]	
			1-phase motors	3-phase motors
5.5	2000	1500		58
		2000		61
	4000	3000		61
		4000		69
	5900	4000		64
		5900		74
7.5	2000	1500		58
		2000		61
	4000	3000		66
		4000		73
	5900	4000		69
		5900		79
11	4000	3000		66
		4000		73
	5900	4000		69
		5900		79

The grey fields indicate that the motor is not available in this MGE motor range.

## 30. Disposing of the product

This product or parts of it must be disposed of in an environmentally sound way:

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.

Dispose of the waste battery through the national collective schemes. If in doubt, contact your local Grundfos company.



The crossed-out wheellie bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal authorities. The separate collection and recycling of such products will help protect the environment and human health.

See also end-of-life information at [www.grundfos.com/product-recycling](http://www.grundfos.com/product-recycling).

## Appendix

### Installation in the USA and Canada

**Note**

In order to maintain the cURus approval, follow these additional installation instructions. The UL approval is according to UL 1004-1.

#### For Canada

This product complies with the Canadian ICES-003 Class B specifications. This Class B device meets all the requirements of the Canadian interference-causing equipment regulations.

Cet appareil numérique de la Classe B est conforme à la norme NMB-003 du Canada. Cet appareil numérique de la Classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

#### Electrical codes

##### For USA

This product complies with the Canadian Electrical Code and the US National Electrical Code.

This product has been tested according to the national standards for Electronically Protected Motors:

CSA 22.2 100-14:2014 (applies to Canada only).

UL 1004-1:2015 (applies to USA only).

##### Pour le Canada

#### Codes de l'électricité

Ce produit est conforme au Code canadien de l'électricité et au Code national de l'électricité américain.

Ce produit a été testé selon les normes nationales s'appliquant aux moteurs protégés électroniquement:

CSA 22.2 100.04: 2009 (s'applique au Canada uniquement).

UL 1004-1: Juin 2011 (s'applique aux États-Unis uniquement).

### Radio communication

#### For USA

This device complies with part 15 of the FCC rules and RSS210 of IC rules.

Operation is subject to the following two conditions:

- This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device.

Users are cautioned that changes or modifications not expressly approved by Grundfos could void the user's authority to operate the equipment.

#### Pour le Canada

#### Communication radio

Ce dispositif est conforme à la partie 15 des règles de la FCC et aux normes RSS210 de l'IC.

Son fonctionnement est soumis aux deux conditions suivantes:

- Ce dispositif ne doit pas provoquer de brouillage préjudiciable.
- Il doit accepter tout brouillage reçu, y compris le brouillage pouvant entraîner un mauvais fonctionnement.

## Identification numbers

### For USA

Grundfos Holding A/S

Contains FCC ID: OG3-RADIOM01-2G4.

### For Canada

Grundfos Holding A/S

Model: RADIOMODULE 2G4

Contains IC: 10447A-RA2G4M01.

### Pour le Canada


### Numéros d'identification

Grundfos Holding A/S


Modèle: RADIOMODULE 2G4

Contient IC: 10447A-RA2G4M01.

### Location of identification numbers

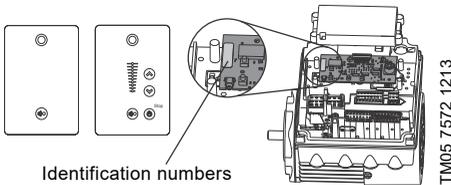

**Fig. 1** Identification numbers

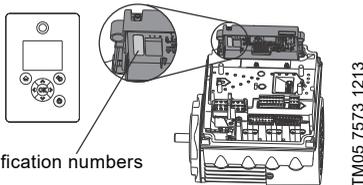

**Fig. 2** Identification numbers

## Electrical connection

### Conductors

See section [7.2 Cable requirements](#), page [11](#).

### Torques

Maximum tightening torques for the terminals can be found in section [Torques](#), page [71](#).

### Line reactors

Maximum line reactor size must not exceed 1.5 mH.

### Short circuit current

If a short circuit occurs, the pump can be used on a mains supply delivering not more than 5000 RMS symmetrical amperes, 600 V maximum.

### Fuses

Fuses used for motor protection must be rated for minimum 500 V.

Motors up to and including 10 hp require class K5 UL-listed fuses. Any UL-listed fuse can be used for motors of 15 hp.

### Branch circuit protection

When the pump is protected by a circuit breaker, this must be rated for a maximum voltage of 480 V. The circuit breaker must be of the "inverse time" type.

### Overload protection

Degree of overload protection provided internally by the drive, in percent of full-load current: 102 %.



**Argentina**

Bombas GRUNDFOS de Argentina S.A.  
Ruta Panamericana km. 37.500 Centro  
Industrial Garin  
1619 Garin Pcia. de B.A.  
Phone: +54-3327 414 444  
Telefax: +54-3327 45 3190

**Australia**

GRUNDFOS Pumps Pty. Ltd.  
P.O. Box 2040  
Regency Park  
South Australia 5942  
Phone: +61-8-8461-4611  
Telefax: +61-8-8340 0155

**Austria**

GRUNDFOS Pumpen Vertrieb  
Ges.m.b.H.  
Grundfosstraße 2  
A-5082 Grödig/Salzburg  
Tel.: +43-6246-883-0  
Telefax: +43-6246-883-30

**Belgium**

N.V. GRUNDFOS Bellux S.A.  
Boomsesteenweg 81-83  
B-2630 Aartselaar  
Tél.: +32-3-870 7300  
Télécopie: +32-3-870 7301

**Belarus**

Представительство ГРУНДФОС в  
Минске  
220125, Минск  
ул. Шафарнянская, 11, оф. 56, БЦ  
«Порт»  
Тел.: +7 (375 17) 286 39 72/73  
Факс: +7 (375 17) 286 39 71  
E-mail: minsk@grundfos.com

**Bosnia and Herzegovina**

GRUNDFOS Sarajevo  
Zmaja od Bosne 7-7A,  
BH-71000 Sarajevo  
Phone: +387 33 592 480  
Telefax: +387 33 590 465  
www.ba.grundfos.com  
e-mail: grundfos@bih.net.ba

**Brazil**

BOMBAS GRUNDFOS DO BRASIL  
Av. Humberto de Alencar Castelo  
Branco, 630  
CEP 09850 - 300  
São Bernardo do Campo - SP  
Phone: +55-11 4393 5533  
Telefax: +55-11 4343 5015

**Bulgaria**

Grundfos Bulgaria EOOD  
Slatina District  
Iztochna Tangenta street no. 100  
BG - 1592 Sofia  
Tel. +359 2 49 22 200  
Fax. +359 2 49 22 201  
email: bulgaria@grundfos.bg

**Canada**

GRUNDFOS Canada Inc.  
2941 Brighton Road  
Oakville, Ontario  
L6H 6C9  
Phone: +1-905 829 9533  
Telefax: +1-905 829 9512

**China**

GRUNDFOS Pumps (Shanghai) Co. Ltd.  
10F The Hub, No. 33 Suhong Road  
Minhang District  
Shanghai 201106  
PRC  
Phone: +86 21 612 252 22  
Telefax: +86 21 612 253 33

**COLOMBIA**

GRUNDFOS Colombia S.A.S.  
Km 1.5 vía Siberia-Cota Conj. Potrero  
Chico,  
Parque Empresarial Arcos de Cota Bod.  
1A.  
Cota, Cundinamarca  
Phone: +57(1)-2913444  
Telefax: +57(1)-8764586

**Croatia**

GRUNDFOS CROATIA d.o.o.  
Buzinski prilaz 38, Buzin  
HR-10010 Zagreb  
Phone: +385 1 6595 400  
Telefax: +385 1 6595 499  
www.hr.grundfos.com

**GRUNDFOS Sales Czechia and Slovakia s.r.o.**

Čajkovského 21  
779 00 Olomouc  
Phone: +420-585-716 111

**Denmark**

GRUNDFOS DK A/S  
Martin Bachs Vej 3  
DK-8850 Bjerringbro  
Tlf.: +45-87 50 50 50  
Telefax: +45-87 50 51 51  
E-mail: info\_GDK@grundfos.com  
www.grundfos.com/DK

**Estonia**

GRUNDFOS Pumps Eesti OÜ  
Peterburi tee 92G  
11415 Tallinn  
Tel: + 372 606 1690  
Fax: + 372 606 1691

**Finland**

OY GRUNDFOS Pumput AB  
Trukkikuja 1  
FI-01360 Vantaa  
Phone: +358-(0) 207 889 500

**France**

Pompes GRUNDFOS Distribution S.A.  
Parc d'Activités de Chesnes  
57, rue de Malacombe  
F-38290 St. Quentin Fallavier (Lyon)  
Tél.: +33-4 74 82 15 15  
Télécopie: +33-4 74 94 10 51

**Germany**

GRUNDFOS GMBH  
Schlüterstr. 33  
40699 Erkrath  
Tel.: +49-(0) 211 929 69-0  
Telefax: +49-(0) 211 929 69-3799  
e-mail: infoservice@grundfos.de  
Service in Deutschland:  
e-mail: kundendienst@grundfos.de

**Greece**

GRUNDFOS Hellas A.E.B.E.  
20th km. Athinon-Markopoulou Av.  
P.O. Box 71  
GR-19002 Peania  
Phone: +0030-210-66 83 400  
Telefax: +0030-210-66 46 273

**Hong Kong**

GRUNDFOS Pumps (Hong Kong) Ltd.  
Unit 1, Ground floor  
Siu Wai Industrial Centre  
29-33 Wing Hong Street &  
68 King Lam Street, Cheung Sha Wan  
Kowloon  
Phone: +852-27861706 / 27861741  
Telefax: +852-27858664

**Hungary**

GRUNDFOS Hungária Kft.  
Tópark u. 8  
H-2045 Törökbálint,  
Phone: +36-23 511 110  
Telefax: +36-23 511 111

**India**

GRUNDFOS Pumps India Private  
Limited  
118 Old Mahabalipuram Road  
Thoraipakkam  
Chennai 600 096  
Phone: +91-44 2496 6800

**Indonesia**

PT. GRUNDFOS POMPA  
Graha Intirub Lt. 2 & 3  
Jln. Cililitan Besar No.454. Makasar,  
Jakarta Timur  
ID-Jakarta 13650  
Phone: +62 21-469-51900  
Telefax: +62 21-460 6910 / 460 6901

**Ireland**

GRUNDFOS (Ireland) Ltd.  
Unit A, Merrywell Business Park  
Ballymount Road Lower  
Dublin 12  
Phone: +353-1-4089 800  
Telefax: +353-1-4089 830

**Italy**

GRUNDFOS Pompe Italia S.r.l.  
Via Gran Sasso 4  
I-20060 Truccazzano (Milano)  
Tel.: +39-02-95838112  
Telefax: +39-02-95309290 / 95838461

**Japan**

GRUNDFOS Pumps K.K.  
1-2-3, Shin-Miyakoda, Kita-ku,  
Hamamatsu  
431-2103 Japan  
Phone: +81 53 428 4760  
Telefax: +81 53 428 5005

**Korea**

GRUNDFOS Pumps Korea Ltd.  
6th Floor, Aju Building 679-5  
Yeoksam-dong, Kangnam-ku, 135-916  
Seoul, Korea  
Phone: +82-2-5317 600  
Telefax: +82-2-5633 725

**Latvia**

SIA GRUNDFOS Pumps Latvia  
Deglava biznesa centrs  
Augusta Deglava ielā 60, LV-1035, Rīga,  
Tālr.: + 371 714 9640, 7 149 641  
Faks: + 371 914 9646

**Lithuania**

GRUNDFOS Pumps UAB  
Smolensko g. 6  
LT-03201 Vilnius  
Tel: + 370 52 395 430  
Fax: + 370 52 395 431

## Malaysia

GRUNDFOS Pumps Sdn. Bhd.  
7 Jalan Peguam U1/25  
Glenmarie Industrial Park  
40150 Shah Alam  
Selangor  
Phone: +60-3-5569 2922  
Telefax: +60-3-5569 2866

## Mexico

Bombas GRUNDFOS de México S.A. de  
C.V.  
Boulevard TLC No. 15  
Parque Industrial Stiva Aeropuerto  
Apodaca, N.L. 66600  
Phone: +52-81-8144 4000  
Telefax: +52-81-8144 2010

## Netherlands

GRUNDFOS Netherlands  
Veluwezoom 35  
1326 AE Almere  
Postbus 22015  
1302 CA ALMERE  
Tel.: +31-88-478 6336  
Telefax: +31-88-478 6332  
E-mail: info\_gnl@grundfos.com

## New Zealand

GRUNDFOS Pumps NZ Ltd.  
17 Beatrice Tinsley Crescent  
North Harbour Industrial Estate  
Auckland  
Phone: +64-9-415 3240  
Telefax: +64-9-415 3250

## Norway

GRUNDFOS Pumper A/S  
Strømsveien 344  
Postboks 235, Leirdal  
N-1011 Oslo  
Tlf.: +47-22 90 47 00  
Telefax: +47-22 32 21 50

## Poland

GRUNDFOS Pompy Sp. z o.o.  
ul. Klonowa 23  
Baranowo k. Poznania  
PL-62-081 Przeźmierowo  
Tel: (+48-61) 650 13 00  
Fax: (+48-61) 650 13 50

## Portugal

Bombas GRUNDFOS Portugal, S.A.  
Rua Calvet de Magalhães, 241  
Apartado 1079  
P-2770-153 Paço de Arcos  
Tel.: +351-21-440 76 00  
Telefax: +351-21-440 76 90

## Romania

GRUNDFOS Pompe România SRL  
Bd. Biruintei, nr 103  
Pantelimon county Ilfov  
Phone: +40 21 200 4100  
Telefax: +40 21 200 4101  
E-mail: romania@grundfos.ro

## Russia

ООО Грундфос Россия  
ул. Школьная, 39-41  
Москва, RU-109544, Russia  
Тел. (+7) 495 564-88-00 (495) 737-30-00  
Факс (+7) 495 564 8811  
E-mail grundfos.moscow@grundfos.com

## Serbia

Grundfos Srbija d.o.o.  
Omladinskih brigada 90b  
11070 Novi Beograd  
Phone: +381 11 2258 740  
Telefax: +381 11 2281 769  
www.rs.grundfos.com

## Singapore

GRUNDFOS (Singapore) Pte. Ltd.  
25 Jalan Tukang  
Singapore 619264  
Phone: +65-6681 9688  
Telefax: +65-6681 9689

## Slovakia

GRUNDFOS s.r.o.  
Prievozská 4D  
821 09 BRATISLAVA  
Phona: +421 2 5020 1426  
sk.grundfos.com

## Slovenia

GRUNDFOS LJUBLJANA, d.o.o.  
Leskovoška 9e, 1122 Ljubljana  
Phone: +386 (0) 1 568 06 10  
Telefax: +386 (0) 1 568 06 19  
E-mail: tehnika-si@grundfos.com

## South Africa

Grundfos (PTY) Ltd.  
16 Lascelles Drive, Meadowbrook Estate  
1609 Germiston, Johannesburg  
Tel.: (+27) 10 248 6000  
Fax: (+27) 10 248 6002  
E-mail: lgradidge@grundfos.com

## Spain

Bombas GRUNDFOS España S.A.  
Camino de la Fuentesilla, s/n  
E-28110 Algete (Madrid)  
Tel.: +34-91-848 8800  
Telefax: +34-91-628 0465

## Sweden

GRUNDFOS AB  
Box 333 (Lunnagårdsgatan 6)  
431 24 Mölndal  
Tel.: +46 31 332 23 000  
Telefax: +46 31 331 94 60

## Switzerland

GRUNDFOS Pumpen AG  
Bruggacherstrasse 10  
CH-8117 Fällanden/ZH  
Tel.: +41-44-806 8111  
Telefax: +41-44-806 8115

## Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.  
7 Floor, 219 Min-Chuan Road  
Taichung, Taiwan, R.O.C.  
Phone: +886-4-2305 0868  
Telefax: +886-4-2305 0878

## Thailand

GRUNDFOS (Thailand) Ltd.  
92 Chaloeem Phrakiat Rama 9 Road,  
Dokmai, Pravej, Bangkok 10250  
Phone: +66-2-725 8999  
Telefax: +66-2-725 8998

## Turkey

GRUNDFOS POMPA San. ve Tic. Ltd.  
Sti.  
Gebze Organize Sanayi Bölgesi  
İhsan dede Caddesi,  
2. yol 200. Sokak No. 204  
41490 Gebze/ Kocaeli  
Phone: +90 - 262-679 7979  
Telefax: +90 - 262-679 7905  
E-mail: satis@grundfos.com

## Ukraine

Бізнес Центр Європа  
Столичне шосе, 103  
м. Київ, 03131, Україна  
Телефон: (+38 044) 237 04 00  
Факс.: (+38 044) 237 04 01  
E-mail: ukraine@grundfos.com

## United Arab Emirates

GRUNDFOS Gulf Distribution  
P.O. Box 16768  
Jebel Ali Free Zone  
Dubai  
Phone: +971 4 8815 166  
Telefax: +971 4 8815 136

## United Kingdom

GRUNDFOS Pumps Ltd.  
Grovebury Road  
Leighton Buzzard/Beds. LU7 4TL  
Phone: +44-1525-850000  
Telefax: +44-1525-850011

## U.S.A.

GRUNDFOS Pumps Corporation  
9300 Loiret Blvd.  
Lenexa, Kansas 66219  
Phone: +1-913-227-3400  
Telefax: +1-913-227-3500

## Uzbekistan

Grundfos Tashkent, Uzbekistan The  
Representative Office of Grundfos  
Kazakhstan in Uzbekistan  
38a, Oybek street, Tashkent  
Телефон: (+998) 71 150 3290 / 71 150 3291  
Факс: (+998) 71 150 3292

Addresses Revised 15.01.2019

<b>98358864</b> 1119
----------------------

ECM: 1273620
--------------

Trademarks displayed in this material, including but not limited to Grundfos, the Grundfos logo and "be think innovate" are registered trademarks owned by The Grundfos Group. All rights reserved. © 2019 Grundfos Holding A/S, all rights reserved.