



MADE IN ITALY

ENGLISH



EPIC 2D

RANGE 0,37÷15 kW
0,50÷20 Hp

Installation
ad use
manual

Introduction

| | |
|------------------|--------|
| 1.1 PRESENTATION | pag. 3 |
| 1.2 DESCRIPTION | pag. 3 |
| 1.3 HANDLING | pag. 3 |

Safety informations

| | |
|--------------|--------|
| 2.1 WARNINGS | pag. 4 |
| 2.2 CAUTION | pag. 4 |

Installation

| | |
|--|---------|
| 3.1 ASSEMBLING | pag. 5 |
| 3.2 ELECTRICAL CONNECTIONS | pag. 6 |
| 3.3 ADJUSTMENTS AND SETTINGS (INITIALIZATION) | pag. 8 |
| 3.4 ADJUSTMENTS AND SETTINGS (ADVANCED MENU) | pag. 10 |
| 3.5 TRIMMER SETTINGS | pag. 26 |
| 3.6 CONTACT ALARM OUTPUTS | pag. 26 |

General use

| | |
|-----------------------------------|---------|
| 4.1 KEYPAD AND LIGHTS INDICATIONS | pag. 27 |
| 4.2 ALARMS | pag. 28 |
| 4.3 TYPICAL INSTALLATIONS | pag. 30 |

Maintenance

| | |
|--------------------|---------|
| 5.1 PUMPS STOP | pag. 32 |
| 5.2 SERVICE | pag. 32 |
| 5.3 SPARE PARTS | pag. 32 |
| 5.4 WASTE DISPOSAL | pag. 32 |

Certifications

| | |
|-------------------------------|---------|
| 6.1 CERTIFICATE OF CONFORMITY | pag. 33 |
|-------------------------------|---------|

1.1 PRESENTATION

The purpose of this manual is to provide the necessary information for the proper installation, use and maintenance of EPIC 2D.

The user should read this manual before operating the unit. Improper use may cause damage to the machine and lead to the forfeiture of the warranty coverage. Always specify the model identification code and the construction number when requesting technical information or spare parts from our Sales and Service department. The instruction and warnings given below concern the standard version; refer to the sale

contract documentation for modifications and special version characteristics. For instructions, situations and events not considered in this manual or in the sale documents, please contact our customer service.

Our units must be installed in sheltered, well-ventilated, non-hazardous environments and must be used at a maximum temperature of +40°C and minimum of -5°C.

1.2 DESCRIPTION

These control panels are designed for controlling 2 motors or electric pumps used in pressurization systems or in applications for emptying wells or water tanks. In case of any failure of the main pump, the reserve pump start automatically.

Atlantic S.r.l.s shall not be liable for any damage caused or suffered by the unit as a result of its unauthorised or improper use.

TECHNICAL FEATURES

Self learning of the motor data; min-max amperage protection (A); dry running protection made by cosφ and min Amperage; min and max

voltage protection (V); phase failure protection; start and stop delay; delay network restore, protection delay, frequency 50-60Hz.

OUTPUT ALARMS AND PROTECTIONS

Acoustic alarm; light alarm, alarm output Relais 220V CA, alarm output Relais 12 V CC, alarm output with Buzzer 12 V; min-max water level; min-max Voltage; phase failure; frequency failure alarm; min-max motor Amperage; min cosφ; motor klixon alarm; water in oil chamber alarm.

1.3 HANDLING

The control panel must be handled with care, as falls and knocks can cause damage without any visible external signs.

PRELIMINARY INSPECTION

After you have removed the external packaging, visually inspect the control panel to make sure it has suffered no damage during shipping. If any damage is visible, inform an Atlantic dealer as soon as possible, no later than five days from the delivery date.

STORED

If for any reason the unit is not installed and starter immediately after it has reached its destination it must be stored properly. The external packaging and the separately packed accessories must remain intact, and the whole must be protected from the weather, especially from freezing temperatures, and from any knocks or falls.

2.1 WARNINGS



RISK OF ELECTRIC SHOCK

Failure to follow the instructions in this manual, carries a risk of electric shock.



RISK FOR PEOPLE AND PROPERTY

Failure to follow the prescriptions in this manual, carries a risk of damage to persons and/or property.



WARNING

Failure to observe the prescriptions in this manual, cause damage to the pump, the unit or the system.

2.2 CAUTION



ATTENTION: PUMPS

- Make sure the pumps are fully primed before you start it.
- Make sure the pumps are running with the correct rotation.
- The electric pumps or the motors can start up automatically.



ATTENTION: ELECTRICAL CONNECTION

- The control panel must be connected by a qualified electrician in compliance with the electrical regulations in force.
- The electric pumps or the motors and the panel must be connected to an efficient grounding system in compliance with the electrical regulations locally in force.
- Ground the unit before carrying out any other operation.



ATTENTION: SERVICE

As a general rule, always disconnect the power supply before proceeding to carry out any operation on the electrical or mechanical components of the unit or system.

3.1 ASSEMBLING

Fix the control panel for a stable support with screws and screw anchor using the holes arranged in the box (pic. 1) or the fixing bracket if present.

To fix the cables in their terminals use a tool of the proper size to avoid the damaging of the screws or of their seat.

If use an electric screwdriver pay attention not to spoil the thread or the screws.

After the fixing, remove every plastic or metallic surplus (ex. Pieces of copper of the cables or plastic shavings of the box) inside the box before supplying power.

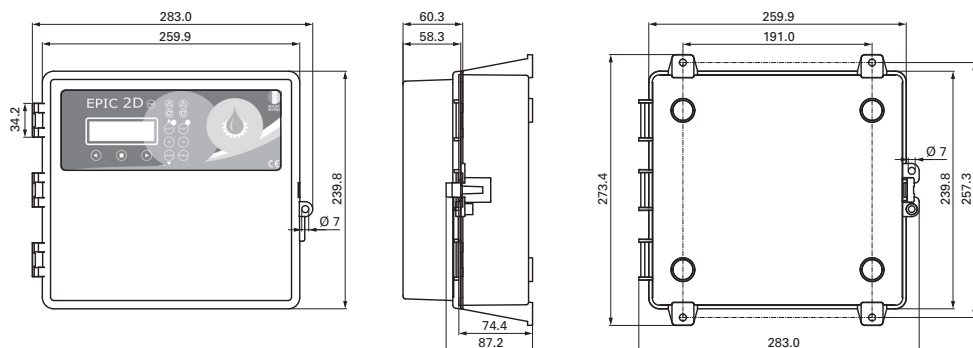


fig. 1

LINE OF SUPPLY CURRENT

Connect the unit at ground before carrying out any other operation.

The voltage input corresponds to the data written on the panel and on the pump:

- (400V \pm 10% 50/60Hz x il EPIC 2D -400/...)
- (230V \pm 10% 50/60Hz x il EPIC 2D -230)

Make sure that the power-supply-cable can bear the nominal current and connect it to the terminals of the general switch of the control panel.

If the cables are exposed, they must be appropriately protected.

The line must be protected with an Earth leakage and magnetic switch measured in accordance with the regulations locally in force.

LINE OF MOTOR POWER SUPPLY



Connect the unit at ground before carrying out any other operation.

The voltage input corresponds to the data written on the motor:



- (400V \pm 10% 50/60Hz three-phase)
- (230V \pm 10% 50/60Hz single-phase)

Doing some starting make sure that the motor respects the right direction of rotation usually indicated by an arrow printed on the motor.

EPIC 2D 230

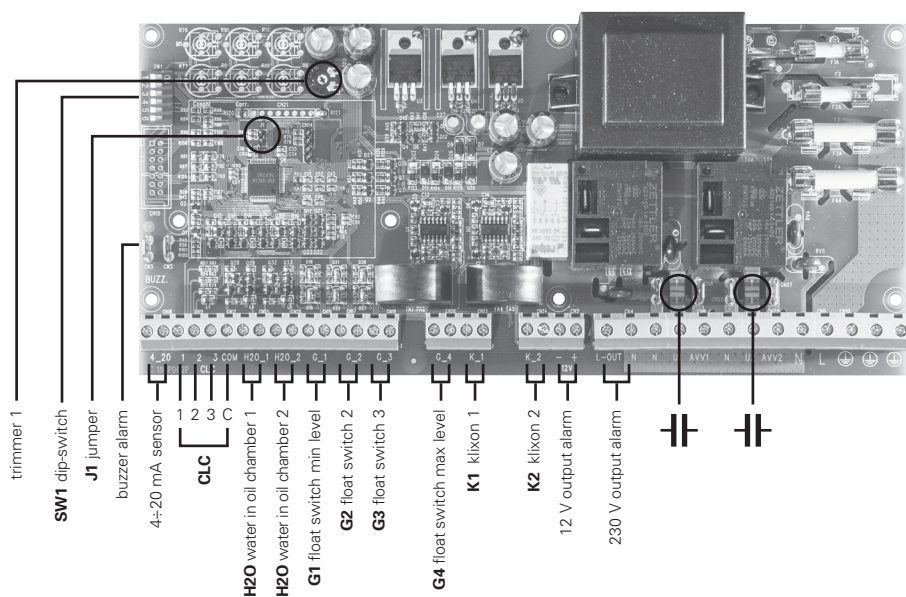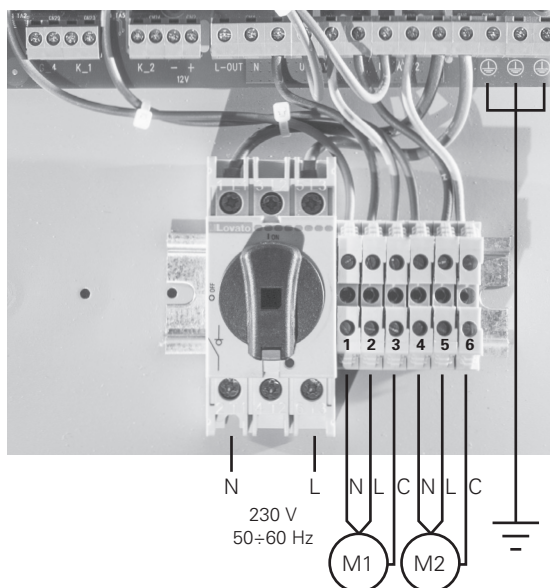


EPIC 2D 400

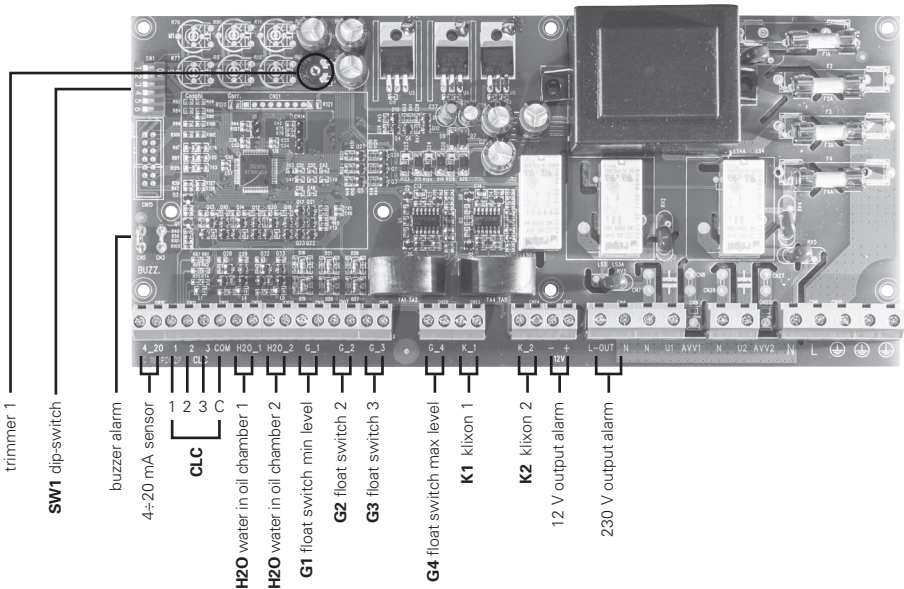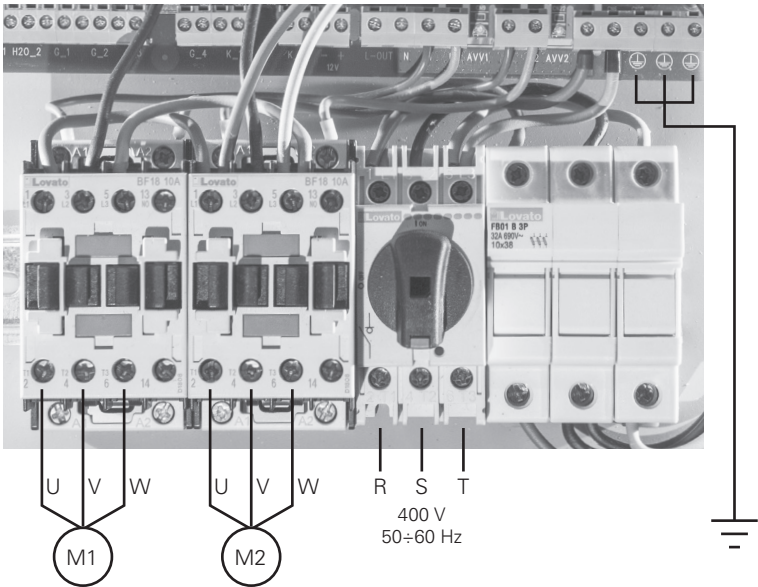

3.3 ADJUSTMENTS AND SETTINGS (INITIALIZATION)

CONTROL PANEL TURN ON

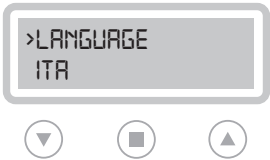

After making all the electrical connections, switch on the control panel and wait for the initial message to appear on the display.

LANGUAGE SETTING (OBLIGATORY)



Select the display language by scrolling the menu with the appropriate arrows (step 1 and 2). When completed, press the confirm button (step 3) to continue.

PUMPS TRIGGER



To proceed with self-learning procedure, the pumps must first be triggered. **Do not press confirm**, but start the pumps, keeping the “MAN” button pressed (for 3 sec.) for P1 and P2.

AUTOTUNING (OBLIGATORY)



To start the self-learning of the pump 1 data, type reply (step 5).

For the final confirmation of the data (step 7) type “YES” to go to pump 2, or enter “NO” to go back (to step 5).



Before starting the self-learning procedure, it is necessary to check with a tester that the mains voltage corresponds to the nominal one or at least to the mains voltage.



IMPORTANT!
For each pump, after pressing the final confirmation button, self-learning is no longer possible. To perform the self-learning again it is necessary to access the advanced menu (3.4).

CONTROL PANEL OPERATIVITY



Once the self-learning phase is completed, the display of the panel displays the data learned.


By pressing the “AUT” button P1 / P2 the panel becomes operational.

PRESET PARAMETERS

| | |
|-----------------------|-----------------------|
| LANGUAGE: selected | ALTERNATION P1/P2: on |
| TURN ON DELAY: 2 sec. | OPERATION: emptying |
| MANUAL KEY: unstable | TYPE: potable |
| START DELAY: 4 sec. | SELF HOLDING: on |
| STOP DELAY: 1 sec. | |


3.4 ADJUSTMENTS AND SETTINGS (ADVANCED MENU)

ACCESS TO ADVANCED MENU

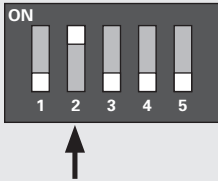

DIP-SWITCH 2

The control panel is set as standard with the dip-switch 2 in the “OFF” position. To access the “ADVANCED MENU” and modify the various parameters, **switch off the control panel and set dip-switch 2 to “ON”**. Then turn the control panel back on to display the message on the “ADVANCED MENU” on the display.

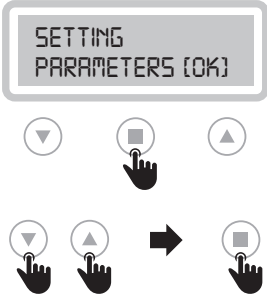



SETTING PARAMETERS

To access the advanced menu and set the various parameters, enter confirmation. On the display will appear in cascade all the fuctions. To enter each individual function, select it with the arrows and enter the confirmation button.

| | |
|------------------------|--------------------|
| EXIT | M05 PUMP 2 |
| M01 UTILITY | M06 PROGRAM |
| M02 GENERAL | M07 SENSOR |
| M03 NET CONTROL | M08 TIMER |
| M04 PUMP 1 | EXIT |

CONFIRM MODIFICATIONS AND EXIT FROM ADVANCED MENU (EXAMPLE)

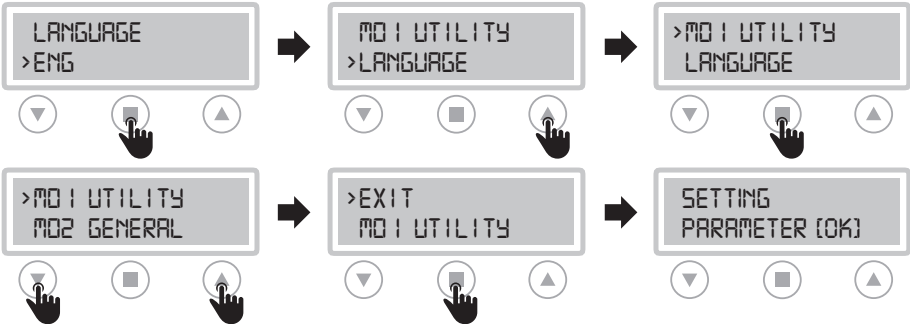





DIP-SWITCH 2


Once the setting of the various parameters has been confirmed (for example the LANGUAGE parameter), to exit the “ADVANCED MENU” **bring the dip-switch 2 back to the “OFF” position**.


M01 UTILITY

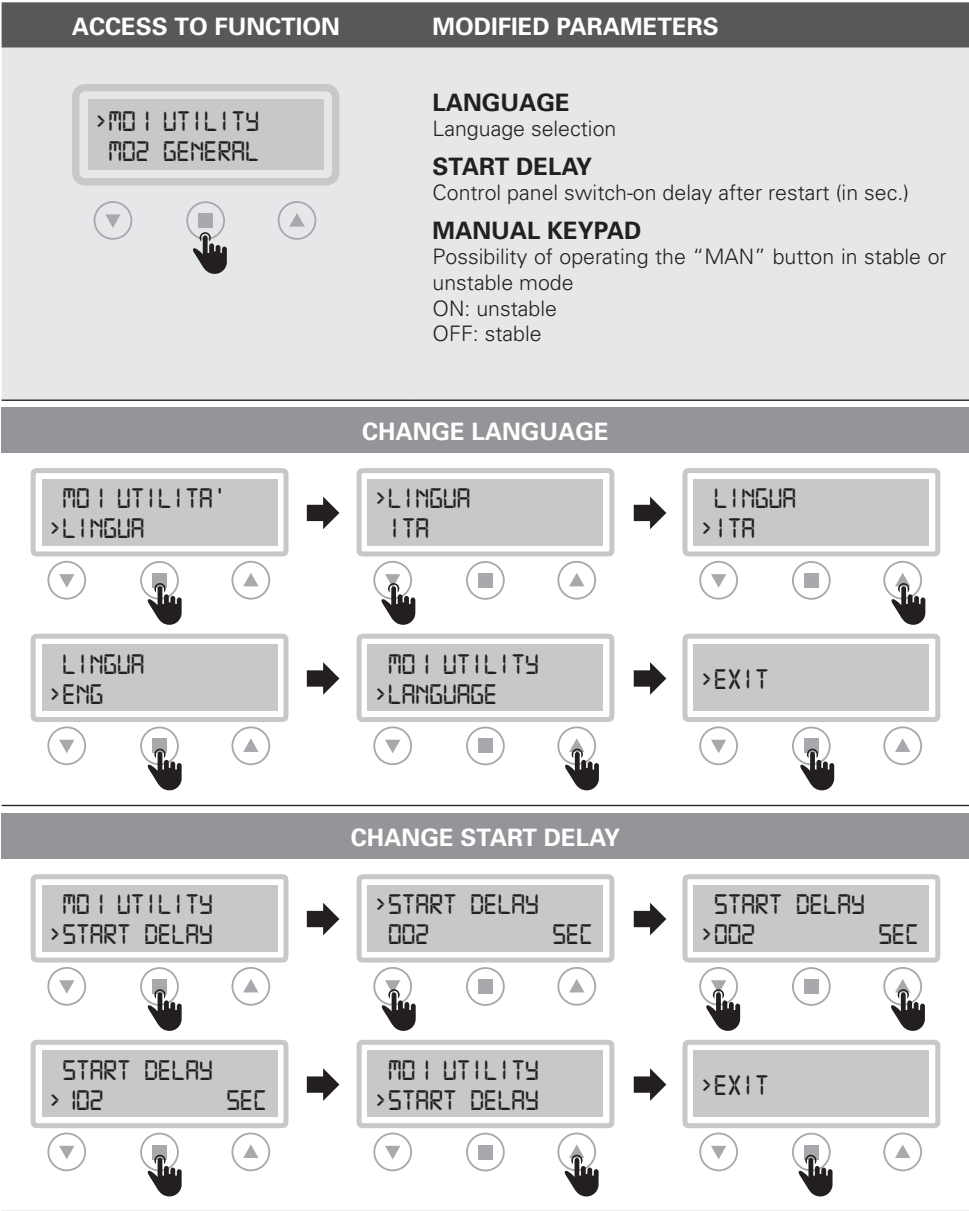

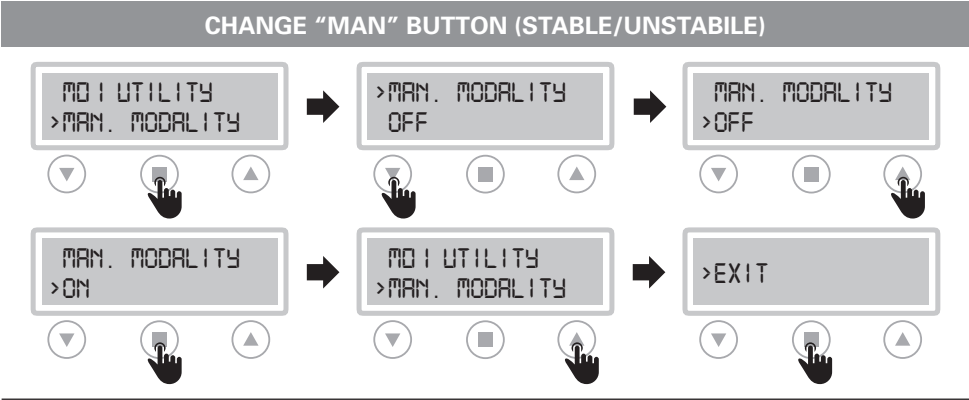

M02 GENERAL

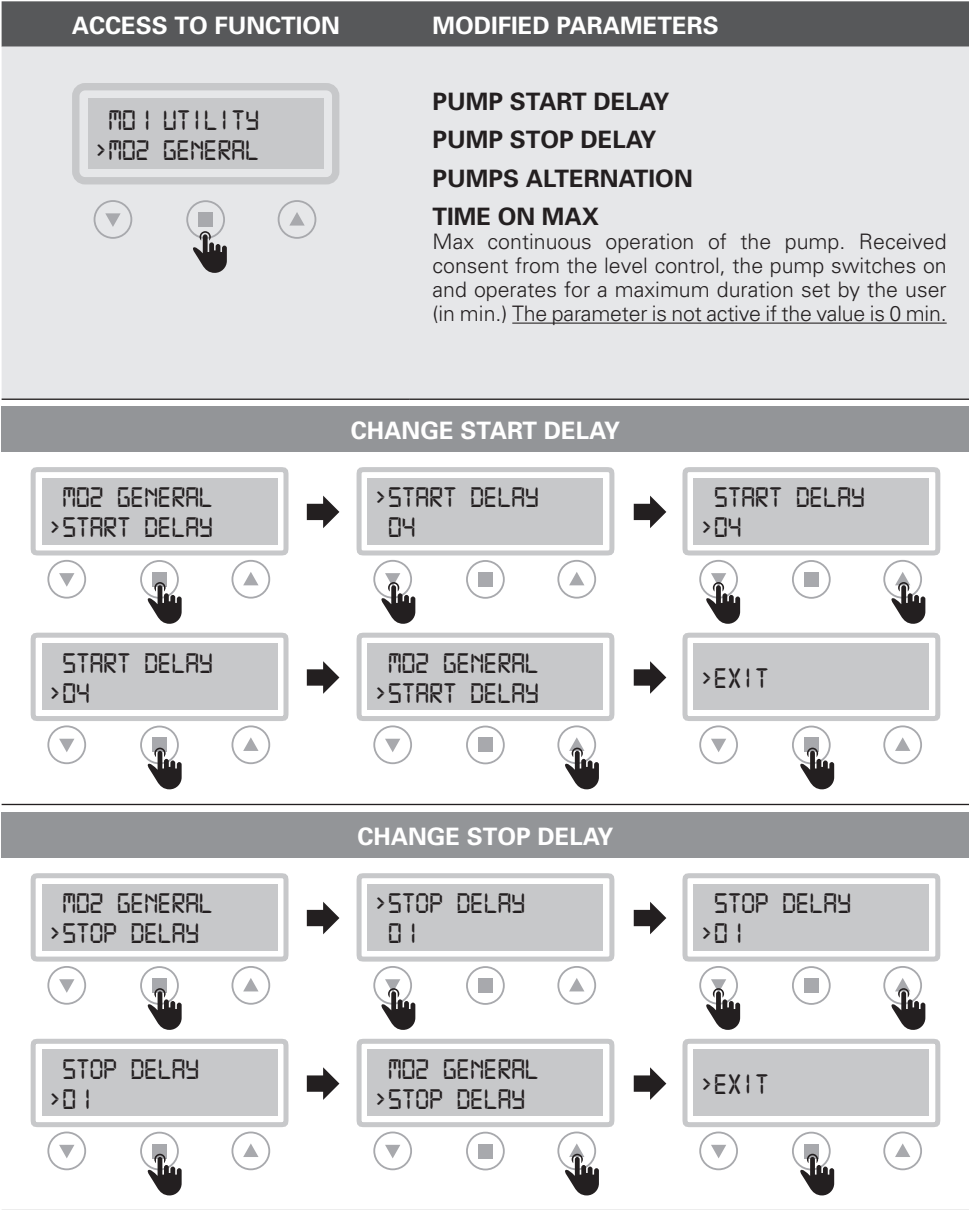

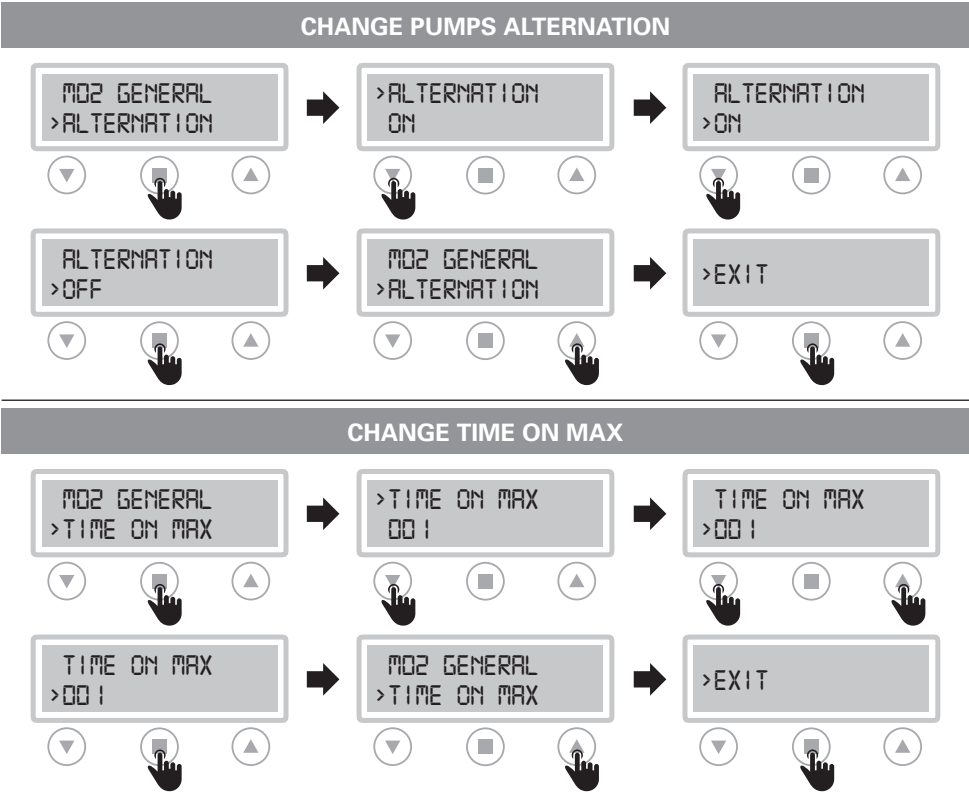

“TIME ON MAX” PROCEDURE

For a correct functioning of this parameter, perform the following procedure:

- set the pump alternation in “ON”
- set the “STARTING FOR HOURS” parameter from the M04 PUMP 1 menu and then M05 PUMP 2 (see page 18), by entering the maximum number of starts allowed for each pump.

ATTENTION!


Refer to chapter 4.2 ALARMS for displaying and managing alarms and reset for this parameter.

EXAMPLE OF OPERATION


Operation of the control panel with “TIME ON MAX” active:

- the pump 1 activates after the buoyant consent, operates continuously and exceeds the max limit of min. set by the user.
- the control panel stops the pump 1 and starts the pump 2 automatically.
- when the same condition occurs again, the control panel stops the pump 2 and restarts the pump 1
- after a certain number of restarts, the control panel blocks both pumps


M03 NET CONTROL

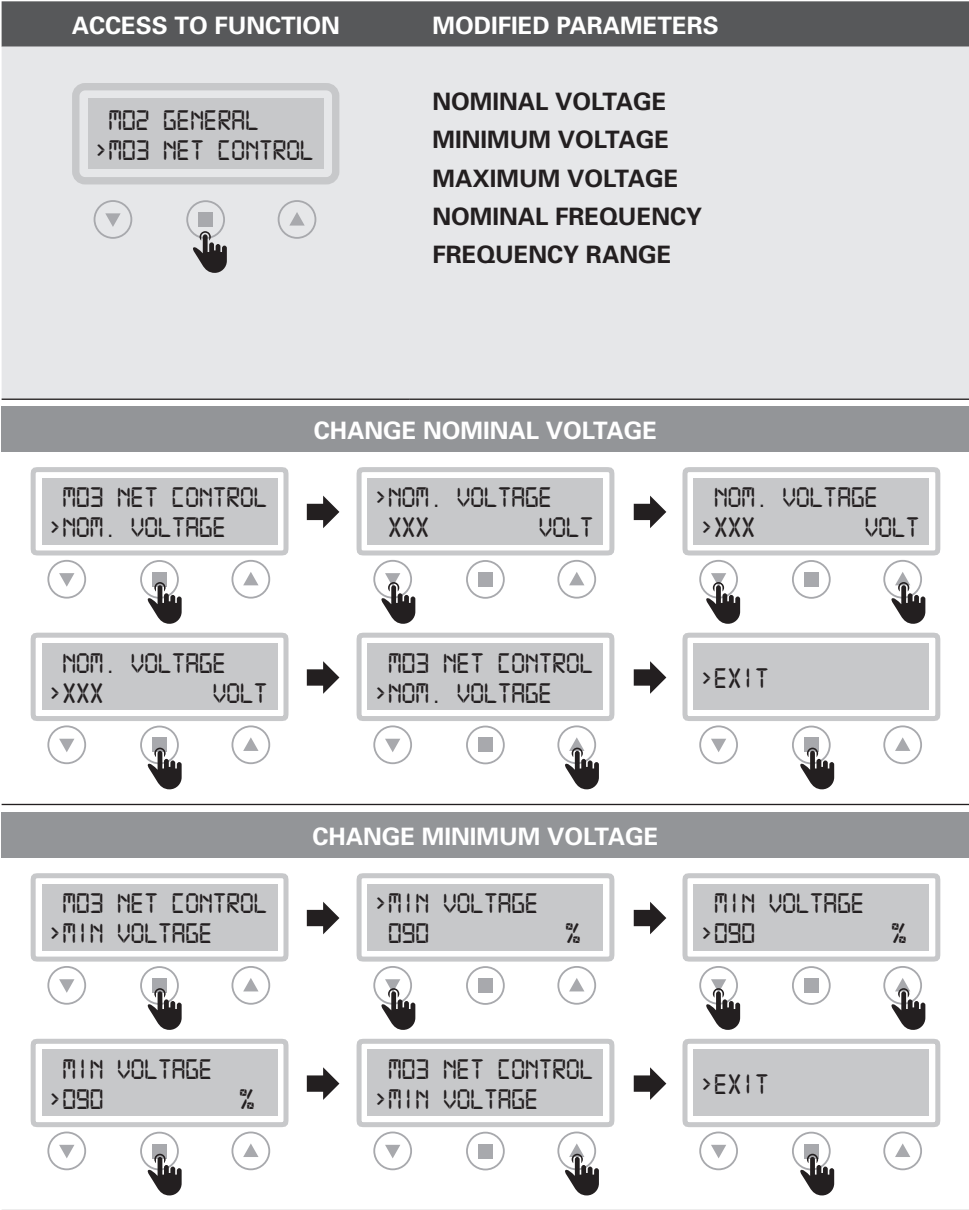


CHANGE MAXIMUM VOLTAGE

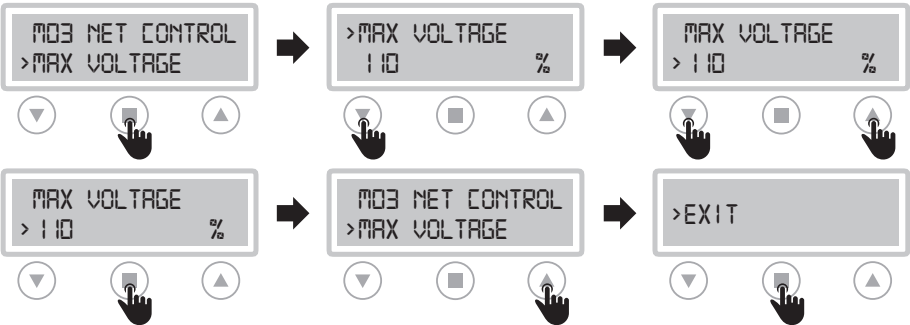

CHANGE NOMINAL FREQUENCY

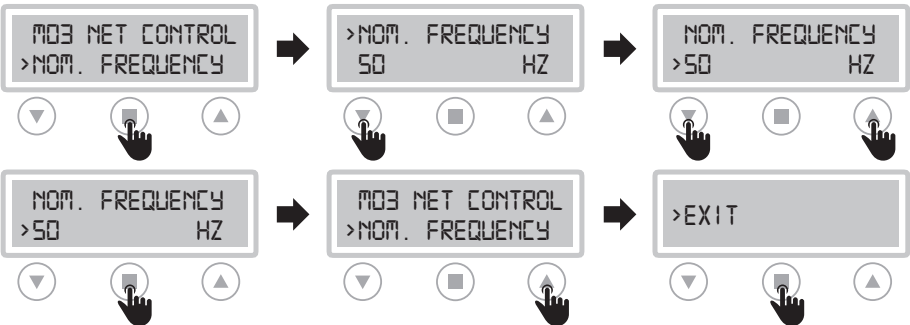

CHANGE FREQUENCY RANGE

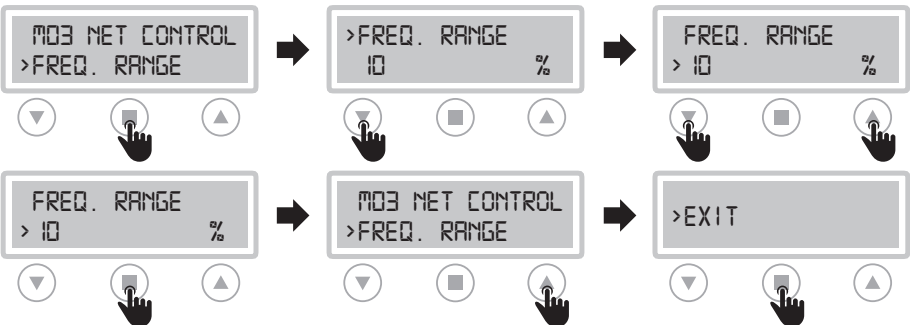

M04 PUMP 1 / M05 PUMP 2

ACCESS TO FUNCTION

>M04 PUMP 1
M05 PUMP 2

▼

■

▲

The amperage value shown on the display may differ $\pm 5\%$ from the nominal value of the pump (nameplate data) since the control panel is not a measuring instrument. The same value may differ depending on the operating conditions of the installation.

MODIFIED PARAMETERS

AUTOTUNING

It allows the self-learning of the data to be carried out again

NOMINAL CURRENT

Set nominal/operating current of the pump

MINIMUM AMPERAGE

Current setting min. for dry running protection

MAXIMUM AMPERAGE

Max current setting for overcurrent protection

START PER HOUR

Set max number of pump starts per hour

AUTOTUNING

M04 PUMP 1
>AUTOTUNING

▼

■

▲

→

>AUTOTUNING
ON

▼

■

▲

→

AUTOTUNING
>ON

▼

■

▲

→

AUTOSET: P 1
XXXV XXA 095

▼

■

▲

→

M04 PUMP 1
>AUTOTUNING

▼

■

▲

→

>EXIT

▼

■

▲

CHANGE NOMINAL CURRENT

M04 PUMP 1
>NOM. CURRENT

▼

■

▲

→

>NOM. CURRENT
000.1

▼

■

▲

→

NOM. CURRENT
>000.0

▼

■

▲

→

NOM. CURRENT
>XXX.X

▼

■

▲

→

M04 PUMP 1
>NOM. CURRENT

▼

■

▲

→

>EXIT


▼

■


▲

17


CHANGE MINIMUM AMPERAGE

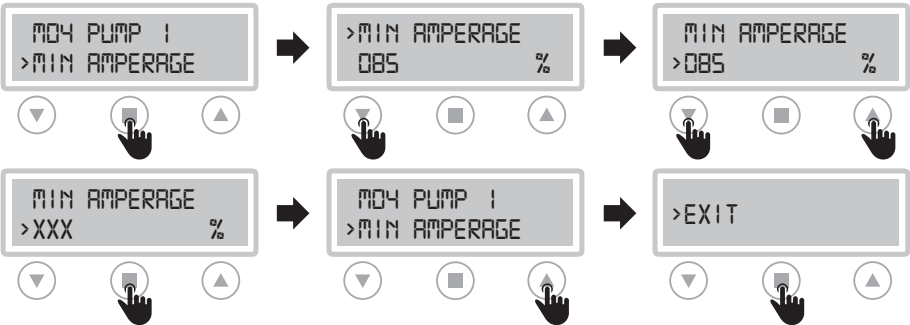


CHANGE MAXIMUM AMPERAGE

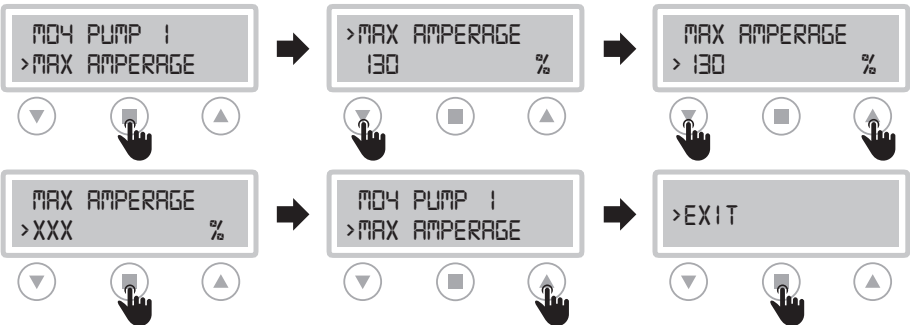


CHANGE START PER HOUR

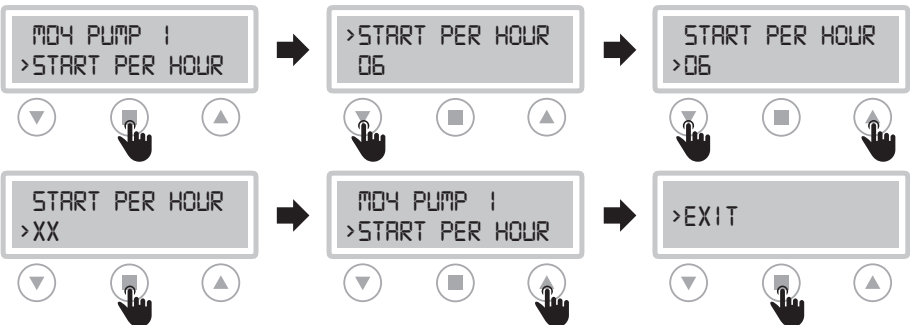

M06 PROGRAM

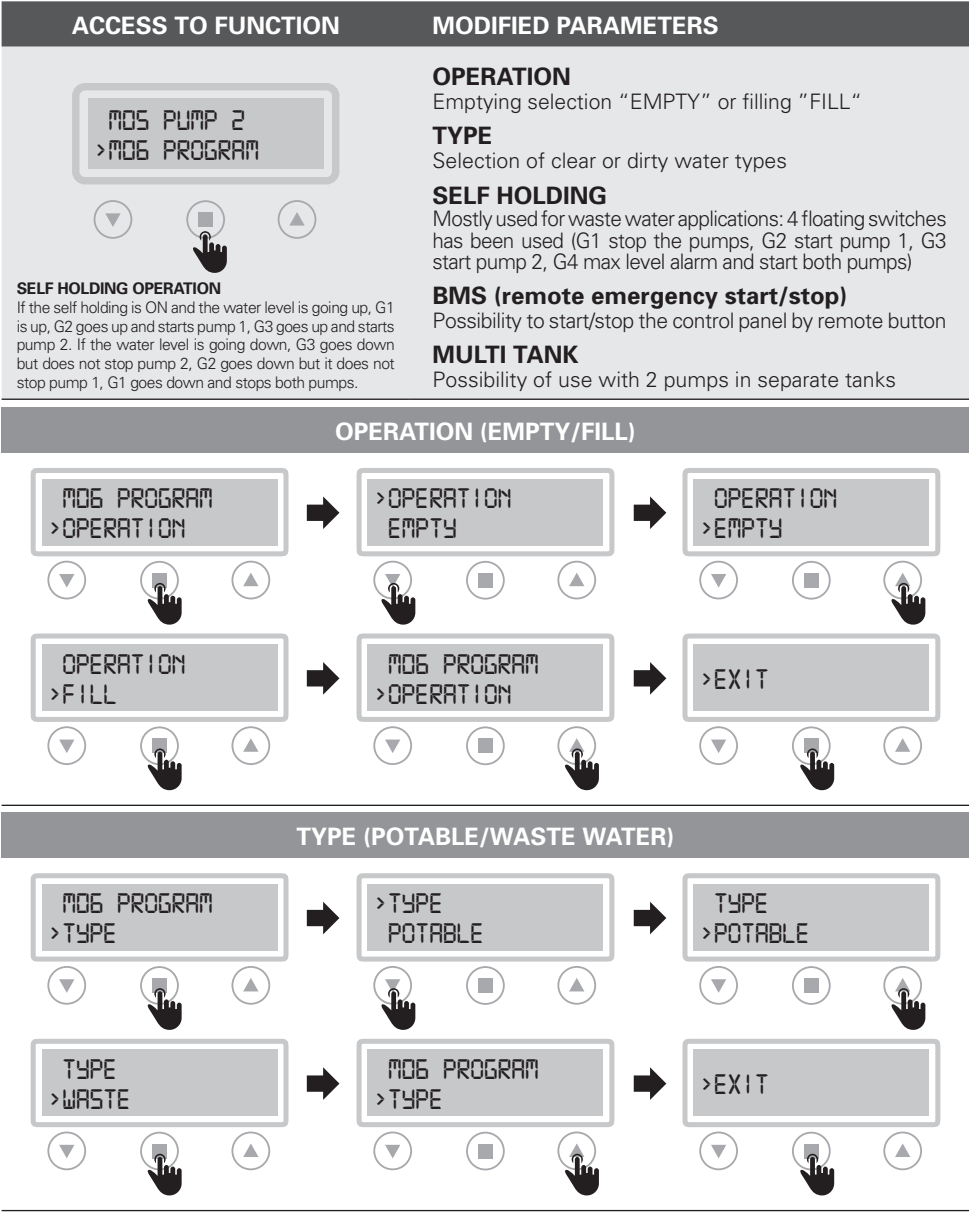

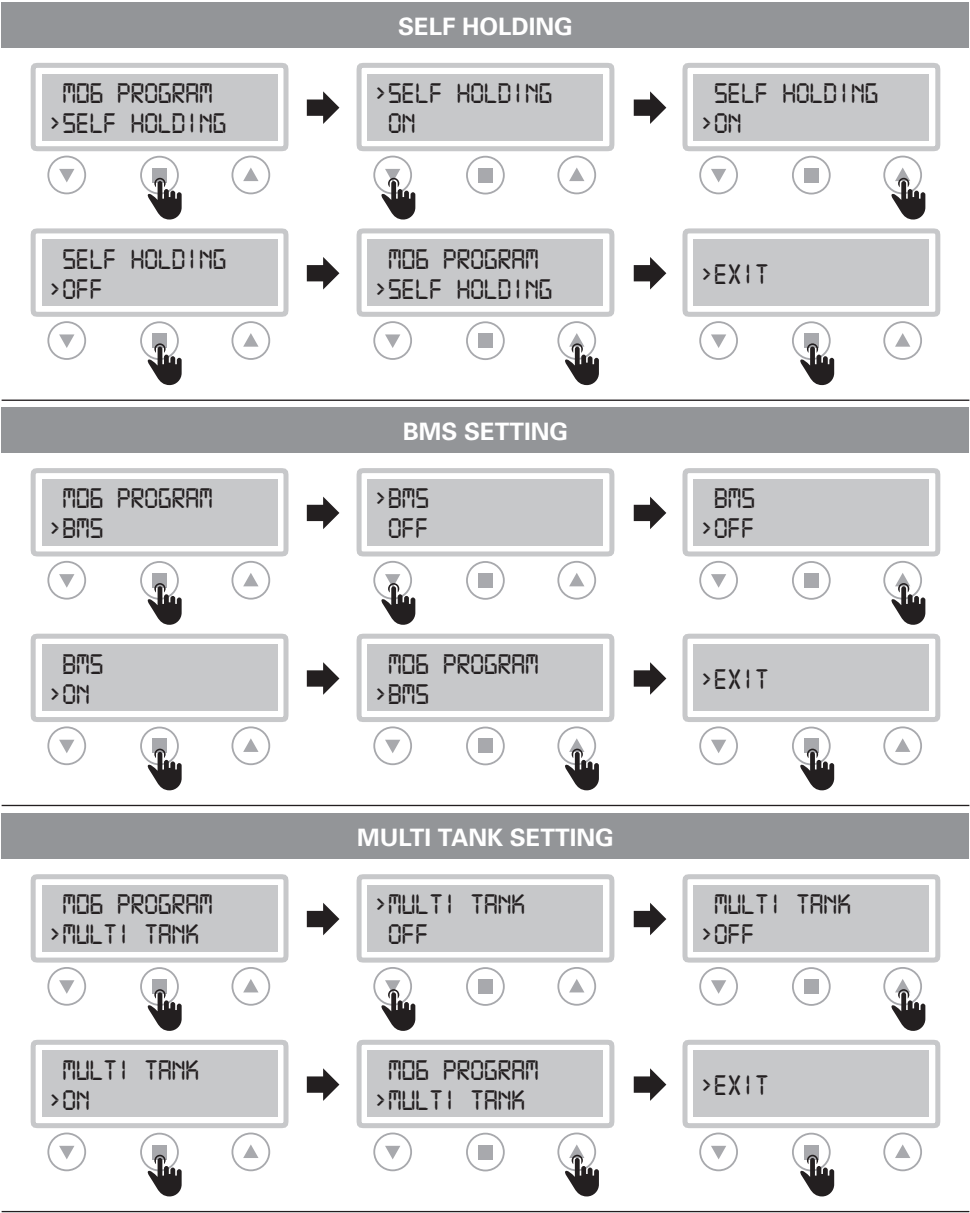

M07 SENSOR (sensor/trasducer 4÷20 mA)

ACCESS TO FUNCTION

MOD6 PROGRAM
>M07 SENSOR

▼

■

▲

The "SENSOR" function allows to use the control panel with piezoresistive, piezocapacitive level sensors or pressure transducers (logic 4÷20 mA).

ATTENTION: Switch off the control panel before connecting the sensor.

MODIFIED PARAMETERS

PARAMETERS

Setting unit of measure (mt/bar)

FULL SCALE

Set the full scale value specified by the manufacturer of the sensor used (serial value 160.0)

MINIMUM LEVEL

Parameter active only with unit of measure in mt

MAXIMUM LEVEL

Parameter active only with unit of measure in mt

START P1 e STOP P1

START P2 e STOP P2

SET PARAMETERS

MOD7 SENSOR
>PARAMETERS

▼

■

▲

→

>PARAMETERS
OFF

▼

■

▲

→

PARAMETERS
>OFF MT/BAR

▼

■

▲

→

PARAMETERS
>XXX

▼

■

▲

→

MOD7 SENSOR
>PARAMETERS

▼

■

▲

→

>EXIT

▼

■

▲

SET FULL SCALE

MOD7 SENSOR
>FULL SCALE

▼

■

▲

→

>FULL SCALE
160.0

▼

■

▲

→

FULL SCALE
> 160.0

▼

■

▲

→

FULL SCALE
> 160.0

▼

■

▲

→

MOD7 SENSOR
>FULL SCALE

▼

■

▲

→

>EXIT


▼

■


▲

21


SET MINIMUM LEVEL

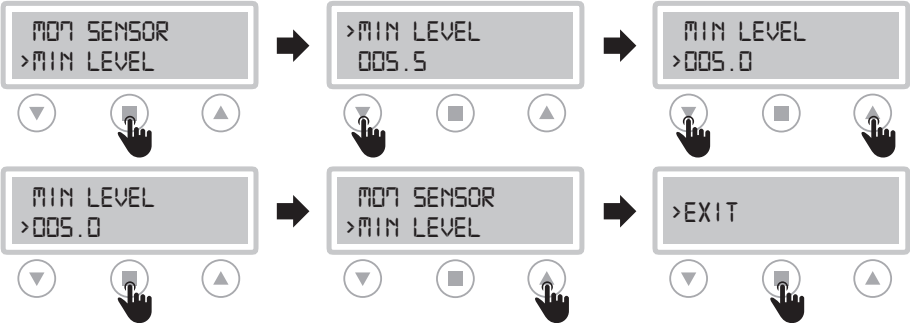


SET MAXIMUM LEVEL

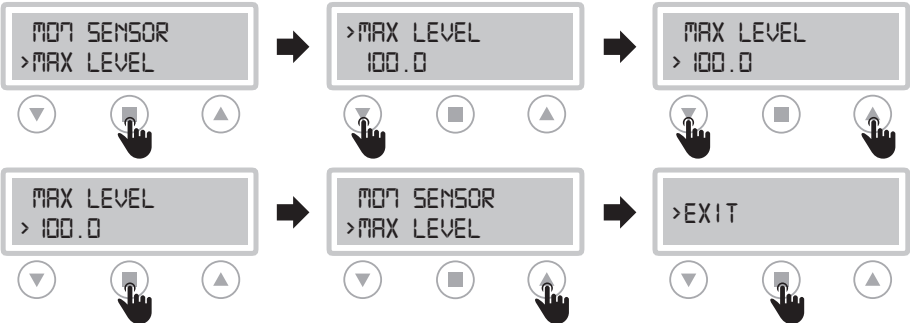


PUMP 1 START

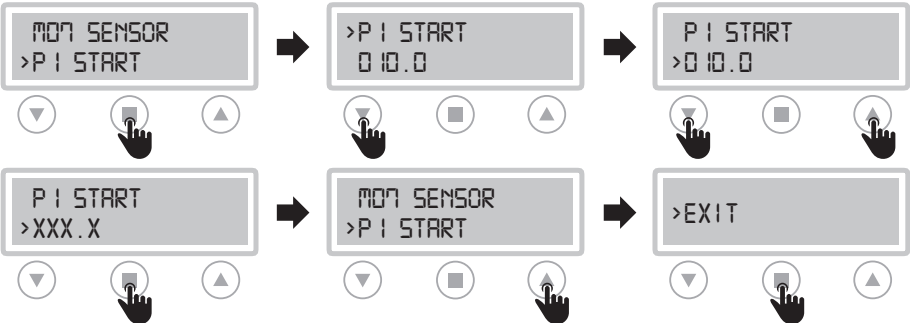


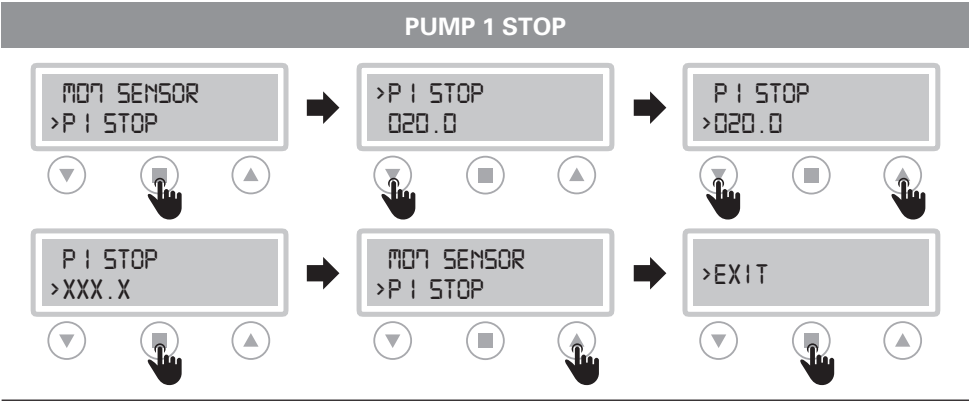

PUMP START / STOP SETTING 2
It is necessary to carry out the same procedure to set the values of the “START PUMP 2” and “STOP PUMP 2” parameters.

M08 TIMER

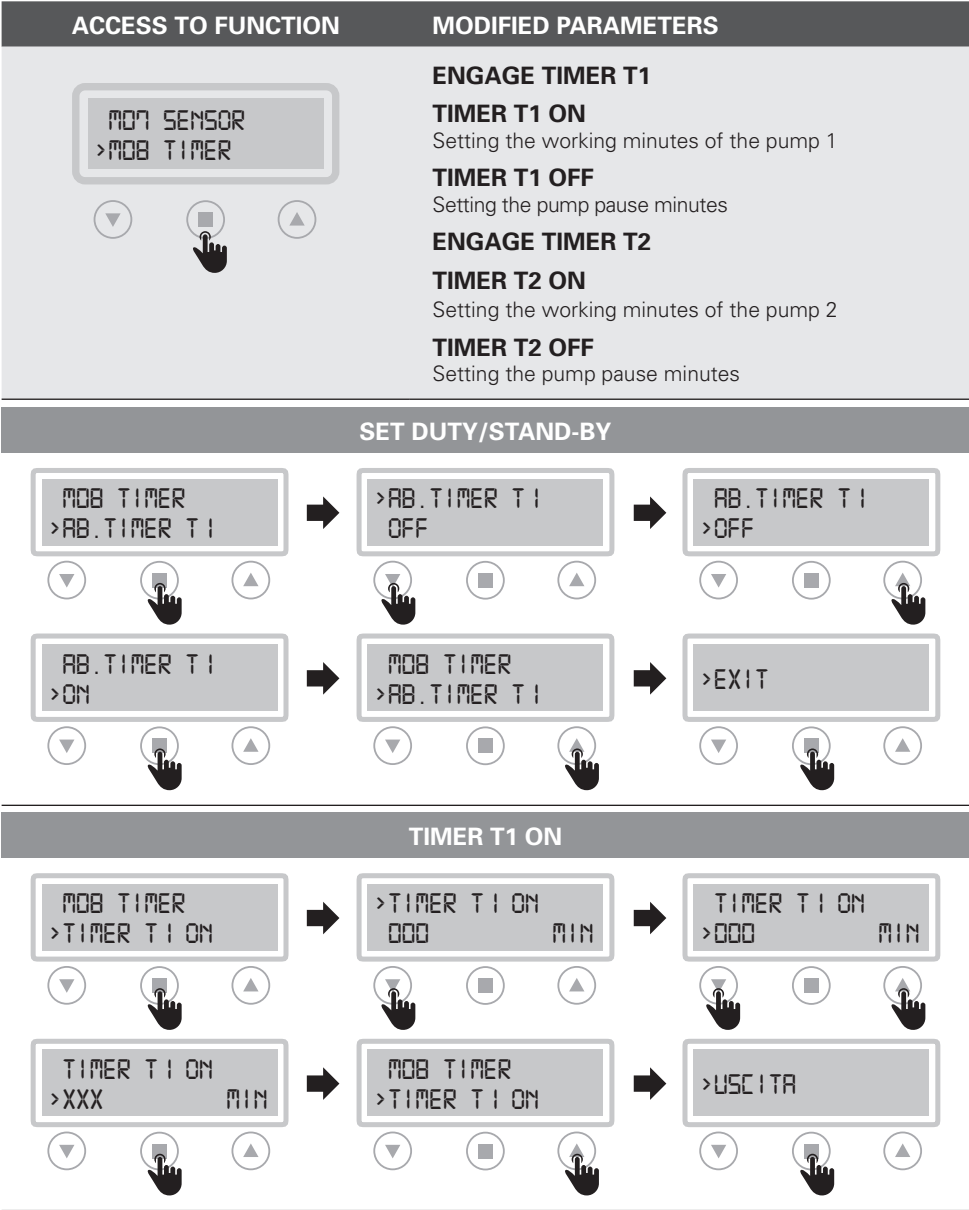

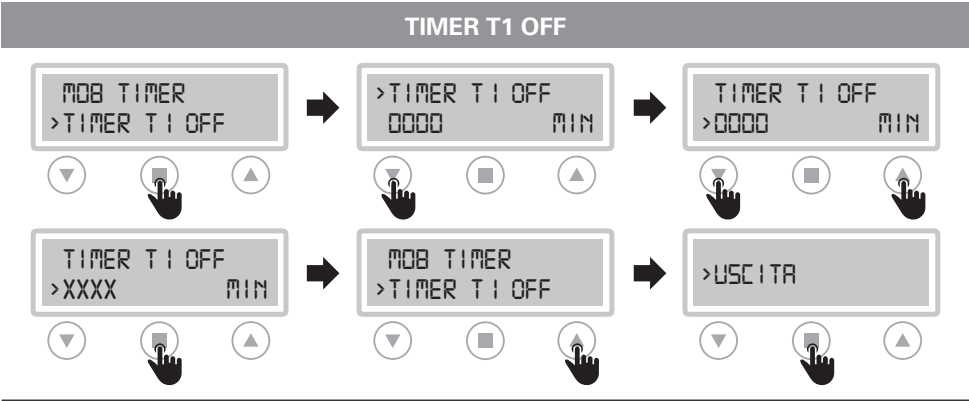

TIMER SETTING T2 ON / TIMER T2 ON
The same procedure must be followed to set the values of the “TIMER T2 ON” and “TIMER T2 OFF” parameters.

3.5 TRIMMER SETTINGS

To change manually the threshold protections, **interrupt the power supply to the control panel** and work on the trimmers, please following the below instructions:





PROTECTION DELAY
The pump protection switching delay has been set at **5 sec.**

| TRIMMER SETTING | |
|-----------------|---|
| | <p>TRIMMER 1: PROBE SENSITIVITY CHANGE</p> <p>Probe sensivity (CLC) and water in oil chamber sensor trimmer regulation.</p> <p>It is possible to change the sensitivity of the CLC probes and the water sensor in the oil chamber, interrupting the power supply to the control panel and acting on trimmer 1 (clockwise to increase and counterclockwise to decrease sensitivity).</p> |

3.6 ALARM CONTACT OUTPUTS

| SINGLE PHASE VERSION | TREE PHASE VERSION |
|---|---|
| Alarm outputs: <ul style="list-style-type: none">• L-OUT / N = 230 V c.a.• + -12 / NO = 12V c.c. or contact NO | Alarm outputs: <ul style="list-style-type: none">• L-OUT / N = 400 V c.a.• + -12 / NO = 12V c.c. or contact NO |

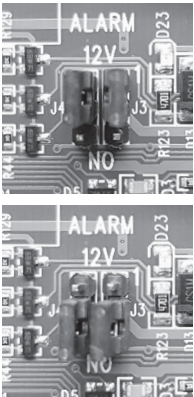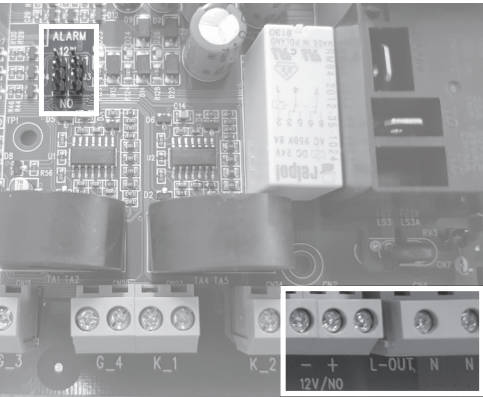

12 V c.c. output

free contact NO

4.1 KEYPAD AND LIGHTS INDICATIONS



CONTROL PANEL



PW

blue light indicating power network presence and powered panel.



ALARM

red light to indicate a general alarm and pump stop. (min e max Amp, min e max V, min e max level, motor klaxon, water in oil chamber, phase failure).



START

green light to indicate pump start; fixed on to indicate pump running, flashing to indicate auto-setting mode.



AUT

the button activates the auto-setting mode and automatic pump (if the green light is on, the automatic mode is active).



0

pump stop button and reset alarms, sound alarm turn-off.















MAN

activation of manual pump; holding it down, the engine is operated in by-pass mode, bypassing all the protections.

4.2 ALARMS

The control panel signals a series of alarms that may occur during operation. Some of these stop the pumps, while others are only displayed.

All alarms are displayed on the panel (red LED flashing), while the display shows the code/alarms occurred until the cancellation by the operator.

| ALARM CODE | ALARM DESCRIPTION | PUMP STOP | RELAY ON | LED SIGNAL |
|------------|----------------------------------|-----------|----------|---|
| AL 1 | MIN VOLTAGE | YES | YES |  |
| AL 2 | MAX VOLTAGE | YES | YES |  |
| AL 3 | LOW FREQUENCY | NO | YES |  |
| AL 4 | HIGH FREQUENCY | NO | YES |  |
| AL 5 | DRY RUNNING P1/P2 | YES | YES |  |
| AL 6 | MAX AMPERAGE P1/P2 | YES | YES |  |
| AL 7 | MAX STAR PER HOUR | NO | YES |  |
| AL 7 | TIME ON MAX + MAX START PER HOUR | YES | YES |  |
| AL 8 | WATER IN OIL CHAMBER P1/P2 | NO | YES |  |
| AL 9 | KLIXON P1/P2 | YES | YES |  |
| AL 10 | MIN LEVEL | YES | YES |  |
| AL 11 | MAX LEVEL | NO | YES |  |

 The alarm “AL 11” starts all the available pumps.

ALARM WITH STOP PUMP



Following the detection of an alarm and the consequent blocking of the pump, the control panel provides the following operations:

- Try the first restart after 5 min.
- In case of a negative result, make another attempt after 30 min. and 3 other attempts with intervals of 60 min.
- After 5 attempts if the alarm persists, the control panel permanently blocks the pump and the alarm remains active until the user intervenes.

DELETE ALARM

P1



P2







To delete the alarms, enter the "0" button for pump 1 once and the "0" button for pump 2.



IMPORTANT!





If after having canceled the alarm, the same occurs again, an intervention on the cause is necessary.

4.3 TYPICAL INSTALLATIONS

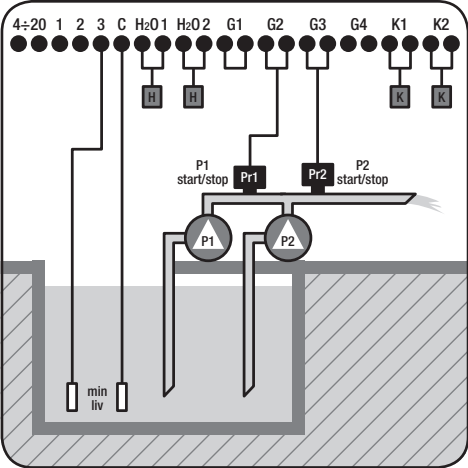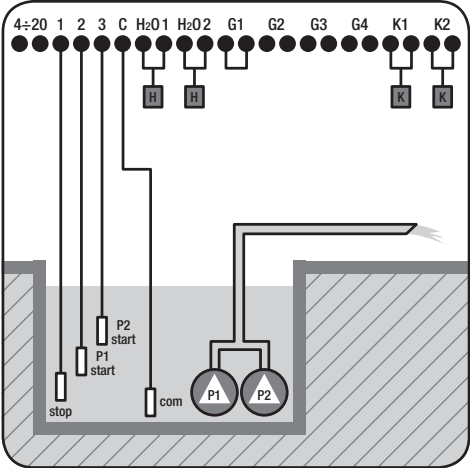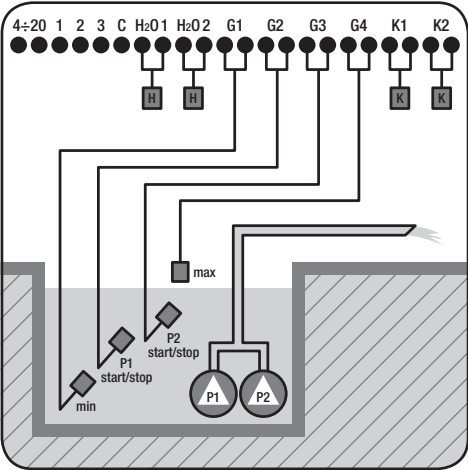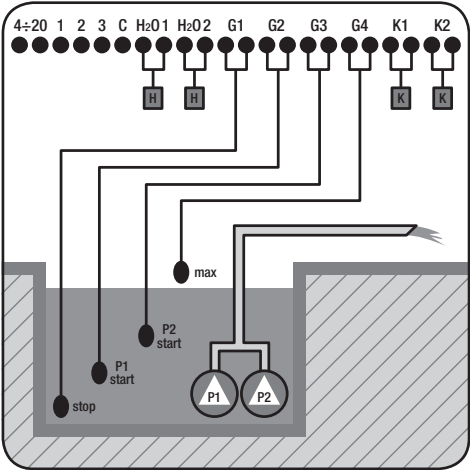

| | | |
|-------|---|--------|
| 4÷20 | input for 4÷20 mA sensor or pressure transducer | |
| 2/3/C | input for level probes | |
| | input for water in oil chamber sensor/water leakage | |
| | input for motor kluxon | |
| | pressure switch | P pump |

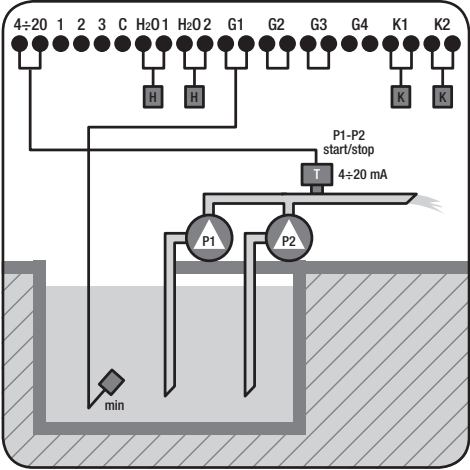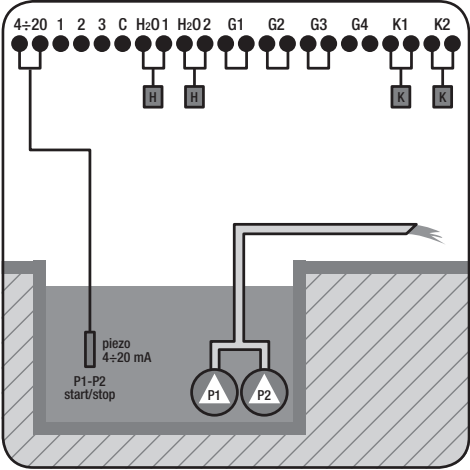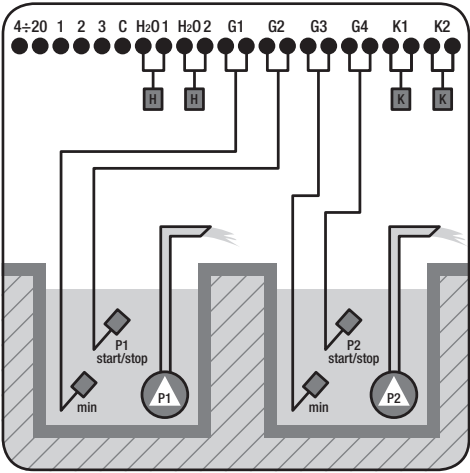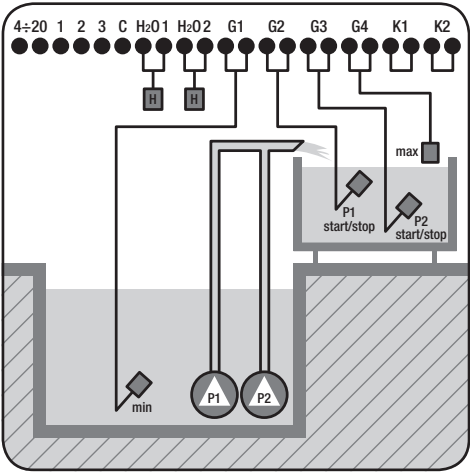


| | | |
|--|-------------------------------|--|
| | pressure transducer | |
| | float switch for clear water | |
| | float switch for waste water | |
| | level probes | |
| | 4÷20 mA piezoresistive sensor | |



| | | |
|-------|---|--------|
| 4÷20 | input for 4÷20 mA sensor or pressure transducer | |
| 2/3/C | input for level probes | |
| H | input for water in oil chamber sensor/water leakage | |
| K | input for motor kluxon | |
| Pr | pressure switch | P pump |

| | | |
|---|-------------------------------|--|
| T | pressure transducer | |
| | float switch for clear water | |
| | float switch for waste water | |
| | level probes | |
| | 4÷20 mA piezoresistive sensor | |

5.1 PUMPS STOP

| MODE | BUTTON | STOP |
|-----------|---|--|
| MANUAL |  | The motor stops when the “MANUAL” button is released or once you digit the 0 button. |
| AUTOMATIC |  | When the input commands are disable/non active once you digit the 0 button. |
| OFF |  | Turning the main switch interlocking door in “OFF” position. |

5.2 SERVICE

EPIC 2D does not require any routine maintenance provided that their working limits are observed. Any maintenance operations must be performed by qualified and experienced personnel, in compliance with the safety regulations in force.



DANGER!
Make sure that EPIC 2D is disconnected from the power supply before performing any maintenance operations.

5.3 SPARE PARTS

Always state the exact model identification number and construction number when requesting technical information or spare parts from our sales and service centre.

Use only original spare parts when replacing any faulty components. The use of unsuitable spare parts can cause malfunctions, personal injury and damage to property.

5.4 WASTE DISPOSAL

After the control panel has been installed and started, the customer must provide for the appropriate elimination/disposal of the waste materials according to the legislation locally in force. If the control panel or parts of it must be taken out of service and dismantled, follow local regulations regarding sorted waste disposal. Refer to the appropriate recycling centres.



CAUTION!
Contamination of the environment with hazardous substances such as battery acid, fuel, oil, plastic, copper, etc., may cause serious damage to the environment and endanger people's health.

6.1 CERTIFICATE OF CONFORMITY

The Manufacturer:

Atlantic Power Control S.r.l.s

Via E. Fermi, 10 - 35020 Polverara (PD) - ITALIA

**DECLARES UNDER IS OWN RESPONSIBILITY
THAT THE FOLLOWINGS CONTROL PANELS:**

EPIC 2D -230 e EPIC 2D -400

**ARE IN CONFORMITY
WITH COMMUNITY DIRECTIVES REGARDING:**

- European directive 2006/95/CE
- Electromagnetic compatibility directive 2004/108/CE



AND AS APPLICABLE TO HARMONIZED STANDARDS:

- EN 61439-1
- EN 61439-2
- EN 60204-1
- EN 55014-1
- EN 55014-2
- EN 61000-3-2
- EN 61000-3-3

Moreover Mr. Giuseppe Franchin, as the legal representative of the company, is the person authorized to compile the technical documentation file.

Polverara - Italy, 10/01/2018

A handwritten signature in black ink, appearing to read 'Franchin Giuseppe'.

Technical Manager
(Giuseppe Franchin)

This image shows a full page of handwriting practice paper. It features multiple sets of horizontal dashed lines spaced evenly down the page, providing a guide for letter height and placement. The background is white, and there are no margins or additional markings.

[illegible]



ATLANTIC POWER CONTROL S.r.l.s.

Via E. Fermi, 10
35020 Polverara (PD) Italy

Tel +39 0495855425

www.atlanticcontrol.com
info@atlanticcontrol.com

